
LE Series

Programmable Logic Controller

Hardware Manual

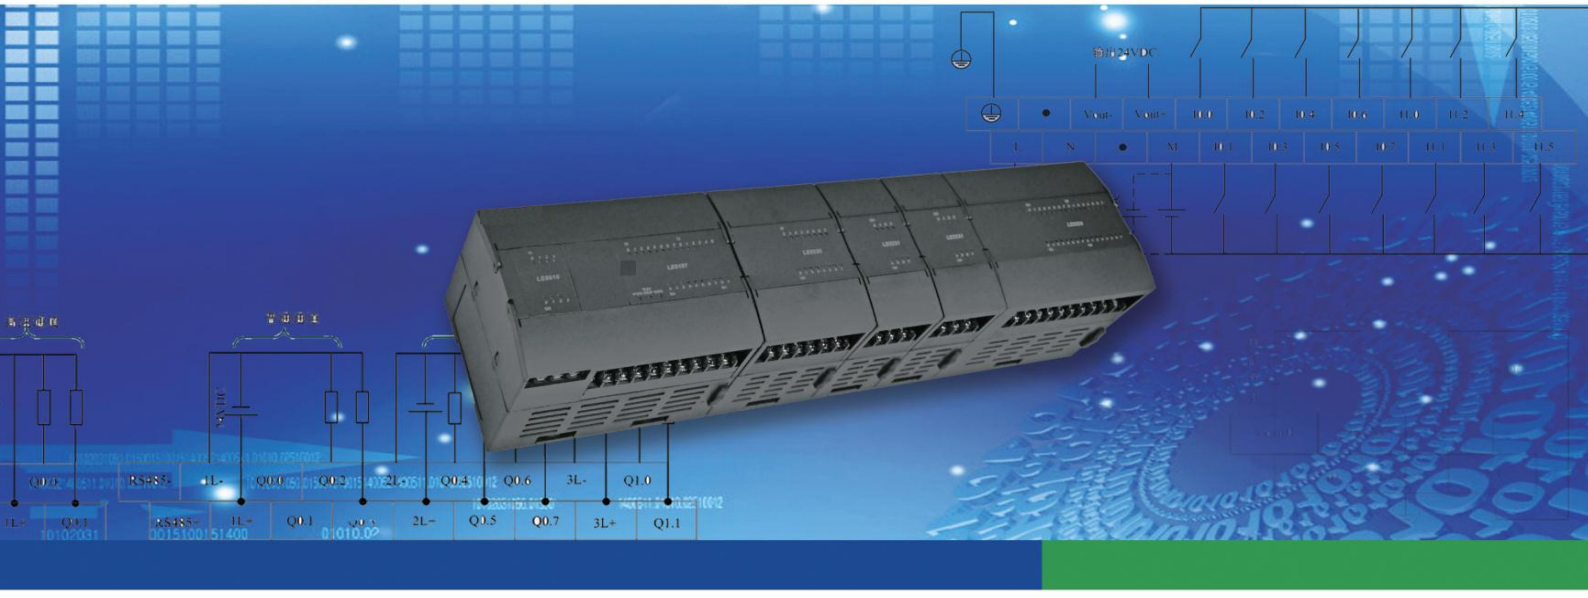

YUMO®

LE Series Programmable Logic Controller

Hardware Manual

Version: V1.0

August, 2017

Copyright Notice

The text, illustrations, charts, marks, trademarks, product models, programs, page layout and other contents included in this manual are under protection of “Copyright Law of the People’s Republic of China”, “Trademark Law of the People’s Republic of China ”, “Patent Law of the People’s Republic of China” and the laws of applicable international conventions regarding copyright, trademark right, patent right or other property ownership, and they are owned or possessed exclusively by Yueqing Ying's Import & Export Co., Ltd..

Since the equipment explained in this manual has a variety of uses, the user and those responsible for applying this equipment must satisfy themselves as to the acceptability of each application and use of the equipment. Under no circumstances will Yueqing Ying's Import & Export Co., Ltd. be responsible or liable for any damage, including indirect or consequential losses resulting from the use, misuse, or application of this equipment.

Due to the many variables associated with specific uses or applications, Yueqing Ying's Import & Export Co., Ltd. cannot assume responsibility or liability for actual use based upon the data provided in this manual.

This manual is provided only for commercial users to read. Without prior written permission of Yueqing Ying's Import & Export Co., Ltd., no part of this manual should be reproduced and transmitted in any forms by any means, including electronic, mechanical or otherwise regardless of whatever reasons and purposes. We will investigate violator’s legal liability in accordance with the relevant laws.

The text YUMO, and the logos YUMO® are registered trademarks of Yueqing Ying's Import & Export Co., Ltd..

All other trademarks are the property of their respective holders.

All rights reserved for Yueqing Ying's Import & Export Co., Ltd..

Address: NO.126 Liuyang Road, Chao Yang -Village,Liushi Town, Yueqing City, zhejiang Province,China

Business Tel: +86 577-6279 1815

Fax: +86 577‑6279 1825

Web: http://www.yumoelectric.com

Email: sales@electric.com

YUMO®

Revision Log Records

No.	Revision	Description of Change	Author/Date
1	A	New Creation	2017.07.15

YUMO®

Contents

Chapter 1 About This Book....1

1.1 Document Update....1

1.2 Purpose....1

1.3 Target Audience....1

1.4 Document Conventions....1

1.4.1 Menu....1

1.4.2 Important Information....2

1.5 Catalog....2

1.6 Terminology....3

1.7 Abbreviations....3

Chapter 2 Overview....5

2.1 Overview for Function....5

2.2 Naming Convention....6

2.3 Model Configuration....7

2.3.1 CPU Module....7

2.3.2 Expansion Module....13

2.3.3 The Maximum IO Configuration....14

2.4 Power Consumption Calculation....15

2.5 Electrical Schematic Diagram....18

2.6 Communication Function....21

2.7 Specifications of General Technology....23

2.8 Fast Application Guide....26

2.8.1 Items Inventory....26

2.8.2 Device Installation....26

2.8.3 Connect the Power Wiring....26

2.8.4 Establish PC Communication....27

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

2.8.5 Programming 28
2.8.6 Device Running 28

2.9 Fault Diagnosis 28

2.10 Module Connection 29

Chapter 3 CPU Module 31

3.1 Overview 31
3.1.1 Module Structure 31
3.1.2 Basic Features 32
3.1.3 Operation Mode 35
3.1.4 Definition of Indicators 35
3.1.5 Communication Connection 36
3.1.6 485 Downloading Interface 37

3.2 LE5104 8 DI / 6 DO CPU Module 38
3.2.1 Technical Specifications 38
3.2.2 Terminal Definition and Connection 40
3.2.3 Electrical Schematic Diagram 43

3.3 LE5105 8 DI/ 6 DO CPU Module 43
3.3.1 Technical Specifications 44
3.3.2 Terminal Definition and Connection 45
3.3.3 Electrical Schematic Diagram 47

3.4 LE5106 14 DI / 10 DO CPU Module 47
3.4.1 Technical Specifications 47
3.4.2 Terminal Definition and Connection 49
3.4.3 Electrical Schematic Diagram 52

3.5 LE5107 14DI/ 10 DO CPU Module 52
3.5.1 Technical Specifications 52
3.5.2 Terminal Definition and Connection 54
3.5.3 Electrical Schematic Diagram 56

3.6 LE5107E 12DI / 8DO, 2AI / 2AO CPU Module 56
3.6.1 Technical Specifications 57
3.6.2 Terminal Definition and Connection 59
3.6.3 Electrical Schematic Diagram 61

3.7 LE5107L 14DI/ 10 DO CPU Module 62
3.7.1 Technical Specifications 63
3.7.2 Terminal Definition and Connection 64
3.7.3 Electrical Schematic Diagram 66

 Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.8 LE5108 24 DI/ 16 DO CPU Module 66
3.8.1 Technical Specifications 66
3.8.2 Terminal Definition and Connection 69
3.8.3 Electrical Schematic Diagram 74

3.9 LE5109 24DI/ 16 DO CPU Module 74
3.9.1 Technical Specifications 74
3.9.2 Terminal Definition and Wiring 76
3.9.3 Electrical Schematic Diagram 79

3.10 LE5109L 24DI/ 16 DO CPU Module 79
3.10.1 Technical Specifications 79
3.10.2 Terminal Definition and Wiring 81
3.10.3 Electrical Schematic Diagram 83

3.11 LE5128 Special CPU Module for Motion Control 83
3.11.1 Technical Specifications 83
3.11.2 Definition of Indicators 86
3.11.3 Terminal Definition and Connection 87
3.11.4 Electrical Schematic Diagram 91
3.11.5 Communication Interface 91
3.11.6 Software Configuration 92

3.12 LE5708 Air Condition Controller Module 93
3.12.1 Technical Specifications 93
3.12.2 Indicator Definition of Indicators 96
3.12.3 Status Code of DIP Switch 96
3.12.4 Terminal Definition and Connection 97
3.12.5 Communication Signal 100
3.12.6 Fault Diagnosis 101

Chapter 4 Function Expansion Board 105

4.1 LE5600 RS232 Communication Expansion Board 105
4.1.1 Technical Specifications 105
4.1.2 Terminal Definition and Connection 105
4.1.3 Principle Diagram 106
4.1.4 Expansion Connection 106

4.2 LE5601 RS485 Communication Expansion Board 107
4.2.1 Technical Specifications 107
4.2.2 Terminal Definition and Connection 108
4.2.3 Principle Diagram 109
4.2.4 Expansion Connection 109

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

4.3 LE5611 2-Channel AI Expansion Board 109
4.3.1 Technical Specifications 109
4.3.2 Signal Type and Scale Range of Input Channels 110
4.3.3 Terminal Definition and Connection 110
4.3.4 Electrical Schematic Diagram 111
4.3.5 Expansion Connection 111

4.4 LE5621 1 AO Expansion Board 112
4.4.1 Technical Specification 112
4.4.2 Signal Type and Scale Range of Output Channel 112
4.4.3 Terminal Definition and Connection 113
4.4.4 Electrical Schematic Diagram 113
4.4.5 Expansion Connection 113

Chapter 5 DI Module 115

5.1 LE5210 8-Channel DI Module 115
5.1.1 Technical Specification 115
5.1.2 Definition of Indicators 115
5.1.3 Terminal Definition and Connection 116

5.2 LE5211 16-Channel DI Module 116
5.2.1 Technical Specification 116
5.2.2 Definition of Indicators 117
5.2.3 Terminal Definition and Connection 117

5.3 LE5212 32-Channel DI Module 118
5.3.1 Technical Specification 118
5.3.2 Definition of Indicators 119
5.3.3 Terminal Definition and Connection 119

Chapter 6 DO Module 121

6.1 LE5220 8-Channel DO Module 121
6.1.1 Technical Specification 121
6.1.2 Definition of Indicators 122
6.1.3 Terminal Definition and Connection 122

6.2 LE5221 8 -Channel Relay DO Module 122
6.2.1 Technical Specification 122
6.2.2 Definition of Indicators 123
6.2.3 Terminal Definition and Wiring 123

6.3 LE5223 16-Channel Relay DO Module 124
6.3.1 Technical specifications 124

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

6.3.2 Definition of Indicators....125
6.3.3 Terminal Definition and Connection....125

6.4 LE5224 32-channel DO Module....126
6.4.1 Technical Specification....126
6.4.2 Definition of Indicators....126
6.4.3 Terminal Definition and Connection....127

Chapter 7 AI Module....129

7.1 LE5310 4 AI Module....129
7.1.1 Technical Specifications....129
7.1.2 Definition of Indicators....130
7.1.3 Signal Types and Scale Range of Input Channels....130
7.1.4 Terminal Definition and Connection....130
7.1.5 Software Configuration....133

7.2 LE5311 8 AI Module....133
7.2.1 Technical Specifications....133
7.2.2 Definitions of Indicator....134
7.2.3 Signal Type and Scale Range of Input Channels....134
7.2.4 Terminal Definition and Connection....134
7.2.5 Software Configuration....136

7.3 LE5340 4-channel Thermocouple Input Module....136
7.3.1 Technical Specifications....137
7.3.2 Definition of Indicators....137
7.3.3 Signal Type and Scale Range of Input Channel....138
7.3.4 Terminal Definition and Connection....138
7.3.5 Software Configuration....139

7.4 LE5341 4-Channel RTD Input Module....140
7.4.1 Technical Specifications....140
7.4.2 Definition of Indicators....140
7.4.3 Signal Type and Scale Range of Input Channels....141
7.4.4 Terminal Definition and Connection....141
7.4.5 Software Configuration....142

7.5 LE5342 8-Channel Thermistor Input Module....143
7.5.1 Technical Specifications....143
7.5.2 Definition of Indicators....144
7.5.3 Scale Range....145
7.5.4 Terminal Definition and Connection....145
7.5.5 Software Configuration....145

Yueqing Ying's Import & Export Co.,Ltd. All Rights Reserved

Chapter 8 AO Module 147

8.1 LE5320 2 AO Module 147
8.1.1 Technical Specifications 147
8.1.2 Definition of Indicators 148
8.1.3 Signal Types and Corresponding Digital Code value 148
8.1.4 Terminal Definition and Connection 148
8.1.5 Software Configuration 149

8.2 LE5321 4 AO Module 150
8.2.1 Technical Specifications 150
8.2.2 Definition of Indicators 151
8.2.3 Signal Type and Range Capacity of Output Channel 151
8.2.4 Terminal Definition and Connection 151
8.2.5 Software Configuration 152

Chapter 9 AI/AO Module 155

9.1 LE5330 4 AI/ 2 AO Module 155
9.1.1 Technical Specifications 155
9.1.2 Definition of Indicators 156
9.1.3 Signal Type and Scale Range of Input Channel 156
9.1.4 Signal Type and Range Capacity of Output Channel 157
9.1.5 Terminal Definition and Connection 157
9.1.6 Electrical Schematic Diagram 159
9.1.7 Software Configuration 159

Chapter 10 Communication Module 161

10.1 LE5401 Profibus-DP Slave Station Module 161
10.1.1 Technical Specifications 161
10.1.2 Definition of Indicators 162
10.1.3 Relationship between Communication Rate and Cable Length 162
10.1.4 Terminal Definition and Wiring 163
10.1.5 The Corresponding Relationship between DIP Switch State and Station Address 164
10.1.6 Pin Definition of 9-pin D Type Interface 164
10.1.7 Software Configuration 165

10.2 LE5403 Ethernet Communication Module 165
10.2.1 Technical Specifications 166
10.2.2 Definition of Indicators 167
10.2.3 Terminal Definition 167
10.2.4 Software Configuration 168
10.2.5 Modbus TCP Functional Description 170

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.3 LE5404 GPRS Communication Module 170
10.3.1 Technical Specifications 171
10.3.2 Definition of Indicators 171
10.3.3 Terminal Definition and Wiring 172
10.3.4 Software Configuration 172

10.4 LE5405 Gateway Communication Module 173
10.4.1 Technical Specifications 173
10.4.2 Interface Description 175
10.4.3 Terminal Wiring 177
10.4.4 Use Instruction 178
10.4.5 Power Calculation 179

Chapter 11 Other Modules 181

11.1 LEA5820 Data Memory Card 181
11.1.1 Write Memory Card Function 181
11.1.2 The Function of Controller to Upload Project From Memory Card 181
11.1.3 LEA5820 Definition of indicators 181

11.2 LEX5810 Programming Cable, 3m 182
11.2.1 Technical Specifications 182

11.3 LEX5812 Expansion Cable, 2m 183
11.3.1 Technical Specifications 184

11.4 LEX5813 RS485 round Interface to Two wires RS485 Communication Cable, 3m 184
11.4.1 Technical Specifications 185

11.5 LEX5817 Communication Cable between LE CPU Module and HT8000, 3m 186
11.5.1 Technical Specifications 187

Chapter 12 Installation and Removal 189

12.1 Installation and Removal 189
12.1.1 Installation Environment 189
12.1.2 Installation and Removal of CPU module 190
12.1.3 Installation and Removal of Expansion Modules 192
12.1.4 Installation and Removal of Expansion Boards 195
12.1.5 Removal and Reinstallation of LE Terminal Block Connectors 197

12.2 Wiring Guidelines 198
12.2.1 Guidelines for Inductive Loads 198
12.2.2 Guidelines for Lamp Loads 199
12.2.3 Grounding 200

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

12.3 Module Size 201

APPENDIX 1 FAQ 211

APPENDIX 2 Operating Instructions to LE5404 213

APPENDIX 3 List of LE Series PLC 233

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 1 About This Book

1.1 Document Update

Table 1-1 Document Update List

Version	Description
V1.0	Update content according to the datasheet manual and apply to document template
	Modify based on feedback from the field

1.2 Purpose

This manual mainly introduces the technical specifications, terminal definition, wiring, configuration settings, fault diagnosis and so on for each module of LE series PLC to help users to use the product properly.

1.3 Target Audience

- Engineers in charge of system engineering implementation.
- Technicians in charge of system maintenance.
- Electricians

1.4 Document Conventions

1.4.1 Menu

The menu commands are described with [], such as [Reset], [Download], [Add Device].

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

The names of window and dialog are described with bold font, such as **Device Library**, **Library**, **Device Property**.

1.4.2 Important Information



- Danger icon. Indicates a potentially hazardous situation that could result in death or serious injury.



- Electric shock icon. Indicates a potentially hazardous situation that could result in electric shock accident.



- Warning icon, indicating that the operation may lead to the potential threats of failure or damage to software and hardware devices.



- Important icon, identifies important information about the operations or functions which need to be understood.



- Operation icon. Indicates the operation or opening of an object.

SEE ALSO

- Reference icon. Provides additional sources of the information.

1.5 Catalog



YUMO Programmable Logic Controller PLC Instruction Manual

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved


AutoThink V3.1 User Manual_Project Configuration


LE Series Programmable Logic Controller Hardware Manual

1.6 Terminology

Terminology	Description
Profibus –DP	Standard Bus Protocol, used for high-speed data transfer on the field layer.
MODBUS	Modbus is a general bus protocol for communication among controllers or among controllers and other devices.

1.7 Abbreviations

Abbreviations	Full Name
PLC	Programmable Logical Controller
I/O	Input /Output
DC	Direct Current
AC	Alternating Current
GPRS	General Packet Radio Service
TCP	Transmission Control Protocol
Profibus	Process Field Bus
AI	Analog Input
AO	Analog Output
DI	Digital Input
DO	Digital Output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 2 Overview

LE Series PLC includes various kinds of CPU modules and expansion modules, and works with powerful Auto Think Programming Software which has abundant instruction sets and functions library. LE PLC is appreciated by its stable performance, reliable quality, convenient maintenance and competitive price and has been applied widely in various industries of automation field.

2.1 Overview for Function

LE series programmable logic controller (PLC) is a new generation high-performance micro PLC offered by Hollysys. This product fully takes the seamless integration of the system, controller, HMI and software and the requirement for efficient coordination into consideration, and further improve product's portfolio.

- Main features
  - Compact design
  - Simple and reliable installation
  - Various module types
  - Powerful analog processing
  - Abundant instruction sets
  - Special power-loss protection
  - Off-line simulation
  - IEC Standard programming languages
- Application scenarios
  - Punching machinery, printing machinery, textile machinery
  - Construction machinery, packaging machinery, plastics machinery
  - Motion control
  - Environmental control equipment
  - Central air conditioner
  - Elevator control

Yueqing Ying's Import & Emport Co., Ltd. All Rights Reserved

- Rubber & plastics
- Various types of production lines

■ Product Function

- Integrated 24V power output: It can provide power for external sensors or transmitters, etc.
- AC / DC module: support different power supply and control voltage
- Interrupt input: Allow quickly responds to the process signal.
- Single phase / A/B phase high-speed counters: Support counting up and counting down calculation
- Pulse output: Used to control the servo motors or stepper motors to fulfill positioning tasks
- Real Time Clock: Record the machine running time and display the PLC system time
- Interpolation function: Can achieve linear or circular interpolation function

The LE series PLC has powerful function making it a perfect solution for controlling various applications that either can operate at independent operation or can be connected to network to fulfill complicated control.

2.2 Naming Convention

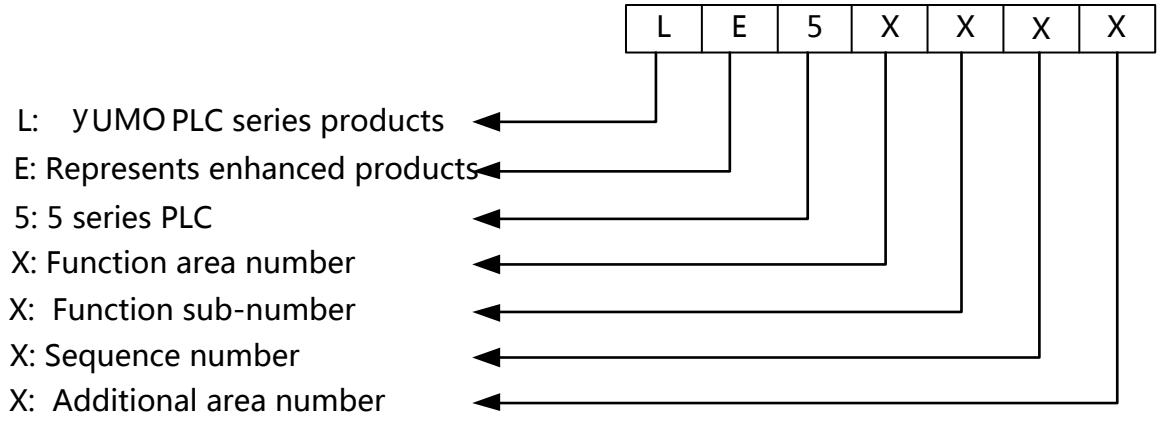


Figure 2-1 Naming Rules

For example: LE5223: Digital output module

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Table 2-1 PLC Naming Rules for LE Series

Number of function area	Sub-number of function	Serial number	Definition for number of additional area
1 CPU module	00-99 serial number Even: 24VDC power supply, DO is the transistor output Odd: 220VAC power supply, DO is the relay output		E indicates analog input and output L indicates economic type
2 Digital module	1 Input module	0---9 serial number Even: DO is the transistor output Odd: DO is the relay output	
	2 Output module		
3 Analog module	1 Input module	0---9 serial number	
	2 Output module		
	3. Input and output mixed module		
4 Communication module	00-99 serial number		
6 Expansion board	1 Input module	0---9 serial number	
	2 Output module		
	3 Input and output mixed module		
7 Special module	0-99 serial number		

2.3 Model Configuration

2.3.1 CPU Module

CPU module is the core component of a PLC system. CPU modules work with expansion modules to make a complete PLC system via connecting extension bus. CPU module is responsible for carrying out the cycle process for ‘reading input → program execution →processing

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

communications requests →self-diagnosis → writing output →reading input…'. At the same time, CPU reads the input data and output data via expansion bus.

1. LE5104

- 24VDC power supply, 24VDC digital input, transistor output
- Integrated 8DI + 6DO total of 14 digital I / O
- Controllers for simple automation control requirements with small amount of I/O application



Figure 2-2 LE5104 Module Appearance

2. LE5105

- 220VAC power supply, 24VDC digital input, relay output
- Integrated 8DI + 6DO total of 14 digital I / O
- Controllers for simple automation control requirements with small amount of I/O application



Figure 2-3 LE5105 Module Appearance

3. LE5106

- 24VDC power supply, 24VDC digital input, transistor output

Yingqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Integrated 14DI + 10DO total of 24 digital I / O
- Controllers for general automation control requirements with medium amount of I/O application

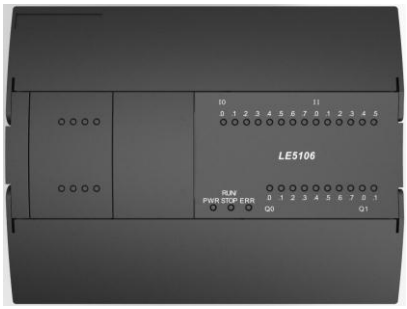


Figure 2-4 LE5106 Module Appearance

4. LE5107

- 220VAC power supply, 24VDC digital input, relay output
- Integrated 14DI + 10DO total of 24 digital I / O
- Controllers for general automation control requirements with medium amount of I/O application



Figure 2-5 LE5107 Module Appearance

5. LE5107E

- 220VAC power supply, 24VDC digital input, relay output
- Integrated 12DI + 8DO +2AI+2AO total of 20 digital I / O 4 analog I / O
- Controllers for general automation control requirements with medium amount of I/O application

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 2-6 LE5107E Module Appearance

6. LE5107L

- 220VAC power supply, 24VDC digital input, relay output
- Integrated 14DI + 10DO total of 24 digital I / O
- Controllers for general automation control requirements with medium amount of I/O application



Figure 2-7 LE5107L Module Appearance

7. LE5108

- 24VDC power supply, 24VDC digital input, transistor output
- Integrated 24DI + 16DO total of 40 digital I / O
- Controllers for complicated automation control requirements with large amount of I/O application

Yueqing Yings Import & Export Co., Ltd. All Rights Reserved

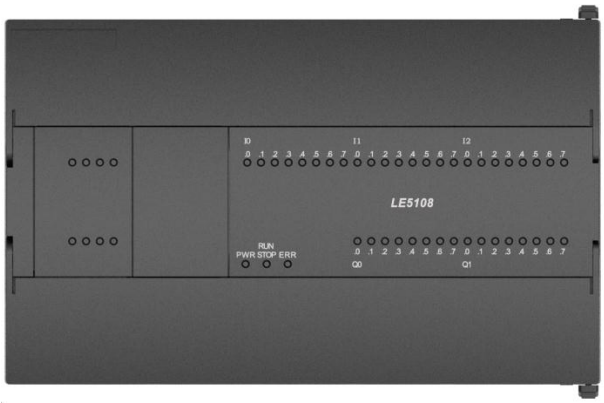


Figure 2-8 LE5108 Module Appearance

8. LE5109

- 220VAC power supply, 24VDC digital input, relay output
- Integrated 24DI + 16DO total of 40 digital I / O
- Controllers for complicated automation control requirements with large amount of I/O application

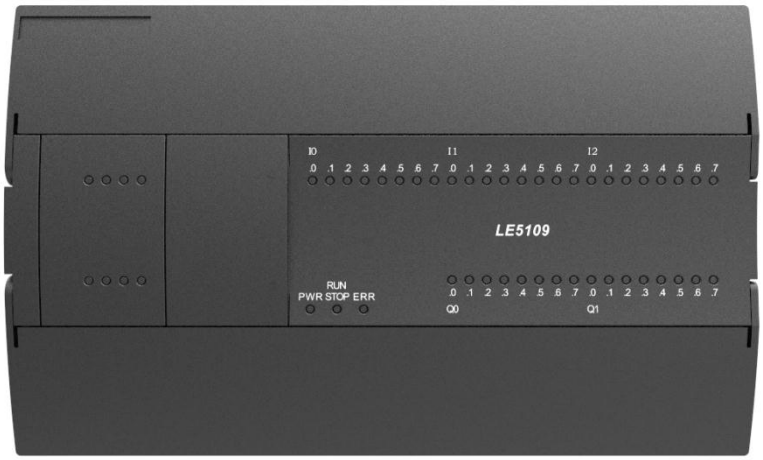


Figure 2-9 LE5109 Module Appearance

9. LE5109L

- 220VAC power supply, 24VDC digital input, relay output
- Integrated 24DI + 16DO total of 40 digital I / O
- Controllers for complicated automation control requirements with large amount of I/O application

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

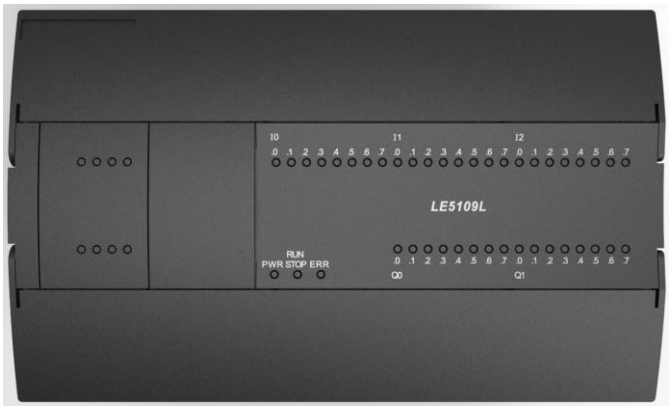


Figure 2-10 LE5109L Module Appearance

- CPU module with the ability to expand the number of modules must meet the CPU module power consumption conditions, the specific are showed in the Chapter of 2.4 Power Consumption Calculation.

10. LE5128

- 24VDC power supply
- Integrated 16DI + 10DO total of 26 digital IO, 2AI + 4AO total of 6 analog IO
- Can independently control four servo motors or stepper motors for positioning
- Micro controllers specialized in motion control

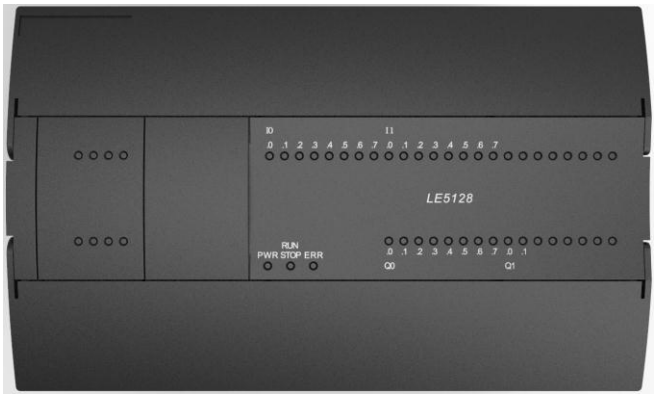


Figure 2-11 LE5128 Module Appearance

11. LE5708

- 24VDC power supply
- Integrated 24DI + 20DO total of 44 digital IO, 4AI + 8NTC+2AO total of 14 analog IO

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Module with USB memory interface

Controller specialized in air-conditioning

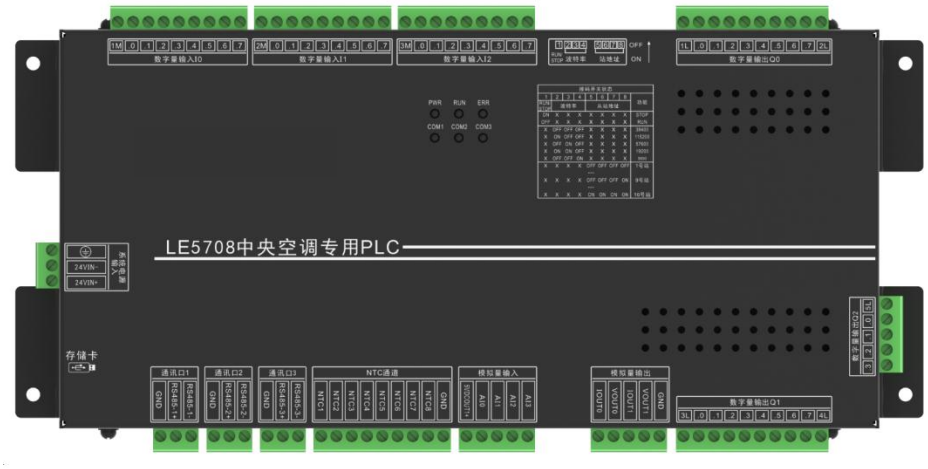


Figure 2-12 LE5708 Module Appearance

- The ability of CPU module to expand modules must meet the CPU module power consumption, see Chapter 2.4 Power Consumption Calculation for details.

2.3.2 Expansion Module

Apart from the integrated I/O channels, high-speed counting, high-speed output and other special functions in CPU module, in order to achieve control requirements under certain conditions, Hollysys also carry a series of expansion modules that further extend the capability of LE PLC from both I/O channels and communication functions aspects. Digital module includes digital input modules and digital output modules.

Analog module includes analog input modules, analog output modules, analog input / output modules, thermocouple input modules, RTD input modules.

LE series PLC also provides a communication expansion module which provides the extremely favorable condition for the improving of function extensions. Communication module includes Profibus-DP slave communication module, Ethernet communication module and GPRS communication module.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

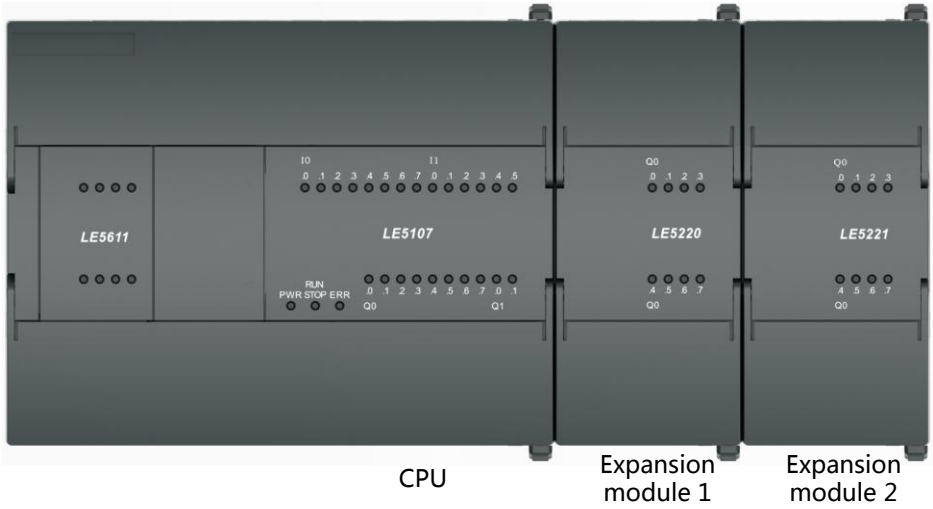


Figure 2-13 Expansion Module Schematic Diagram

2.3.3 The Maximum IO Configuration

I/O configuration of LE series PLC needs to consider the type of CPU module, the type and amount of expansion module, the size of the I/O data memory, current consumption and other factors.

Table 2-2 The Maximum I/O Configuration of CPU

Model		Digital (points)	Analog (points)
LE5104	On-board IO	14(8DI+6DO)	0
	The maximum expandable IO	224	72
	The maximum IO	238	72
LE5105	On-board IO	14(8DI+6DO)	0
	The maximum expandable IO	192	68
	The maximum IO	206	68
LE5106 LE5107	On-board IO	24(14DI+10DO)	0
	The maximum expandable IO	480	128
	The maximum IO	508	130
LE5107E	On-board IO	20(12DI+8DO)	4(2AI+2AO)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Model		Digital (points)	Analog (points)
	The maximum expandable IO	128	22
	The maximum IO	148	26
LE5107L	On-board IO	24(14DI+8DO)	0
	The maximum expandable IO	No less than 80 DI or 42 DO	No less than 24 AI or 12 AO
LE5108 LE5109	On-board IO	40(24DI+16DO)	0
	The maximum expandable IO	640	160
	The maximum IO	684	162
LE5109L	On-board IO	40(24DI+16DO)	0
	The maximum expandable IO	No less than 120 DI or 64 DO	No less than 24 AI or 12 AO
LE5128	On-board IO	26(16DI+10DO)	6 (2AI+4AO)
	High-speed IO	6DI+4DO	
	The maximum expandable IO	No less than 213	No less than 48
LE5708	On-board IO	44（24DI+20DO）	14(4AI+8NTC+2AO)

2.4 Power Consumption Calculation

The power supply for expansion modules and terminals are integrated inside the CPU module of LE series PLC, offering power for the CPU module as well as expansion module. All LE series CPU modules provide external 24VDC output which can supply power to sensors or actuators in field.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Table 2-3 CPU Module Power Supply Specifications

CPU module	System consumption(max.)		Supply for expansion bus		Supply for peripheral device	
	24VDC	220VAC	24VDC	5VDC	24VDC	5VDC
LE5104	800mA	—	250mA	600mA	350mA	—
LE5105	—	100mA	200mA	500mA	200mA	—
LE5106	1300mA	—	500mA	1200mA	300mA	—
LE5107	—	150mA	500mA	1200mA	200mA	—
LE5107E	—	150mA	190mA	550mA	—	—
LE5107L	—	150mA	190mA	550mA	—	—
LE5108	2200mA	—	950mA	2500mA	400mA	—
LE5109	—	250mA	950mA	2500mA	400mA	—
LE5109L	—	250mA	400mA	1000mA	—	—
LE5128	2200mA	—	950mA	2500mA	400mA	—
LE5708	1200mA	—	—	—	—	10mA

Table 2-4 Expansion Module Power Consumption Specifications

Expansion module	Required power by expansion bus	
	24 VDC	5 VDC
LE5210	0mA	50mA
LE5211	0mA	65mA
LE5212	0mA	105mA
LE5220	0mA	90mA
LE5221	60mA	50mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Expansion module	Required power by expansion bus	
LE5223	120mA	135mA
LE5224	0mA	265mA
LE5310	15mA	95mA
LE5311	0mA	75mA
LE5340	0mA	135mA
LE5341	0mA	80mA
LE5342	0mA	130mA
LE5320	0mA	90mA
LE5321	0mA	45mA
LE5330	0mA	35mA
LE5401	0mA	145mA
LE5403	0mA	210mA
LE5404	0mA	30mA

Table 2-5 Gateway Communication Module Power Specification

Expansion module	Supply for expansion bus	
	24 VDC	5 VDC
LE5405	2100mA	3000mA

In LE PLC system configuration, the number of the expansion modules connected will affect the total demand of the system power. Increasing the number of expansion modules could overload the rated outputting power of CPU module. If this is the scenario, then the number of the expansion modules has to be reduced until it satisfies the rated outputting power of CPU module. Therefore, when choosing CPU module, the number of expansion modules and power consumption of the peripheral devices shall be taken into consideration.

- Calculation examples of power requirement

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

The following table provides a calculation example of power demands. The PLC system consists of a CPU module LE5107 and three expansion modules - LE5211, LE5233 and LE5310. The calculation demonstrates that both of the consumption of 24VDC and 5VDC by expansion modules is less than the power providing of LE5107 to its expansion bus. Therefore, CPU module - LE5107 is able to supplies enough power to its expansion modules..

Table 2-6 Power Consumption Calculation Table

CPU module	**Provided power by CPU module**	
	24VDC	5VDC
LE5107	500mA	1200mA
Expansion module	Expansion module power consumption	
	24VDC	5VDC
LE5211	0mA	65mA
LE5223	120mA	135mA
LE5310	15mA	95mA
Overall requirements	135mA	295mA
Current balance	500mA -135mA =365mA	1200mA-295mA=905mA

2.5 Electrical Schematic Diagram

1. Electrical schematic diagram of digital input channels

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

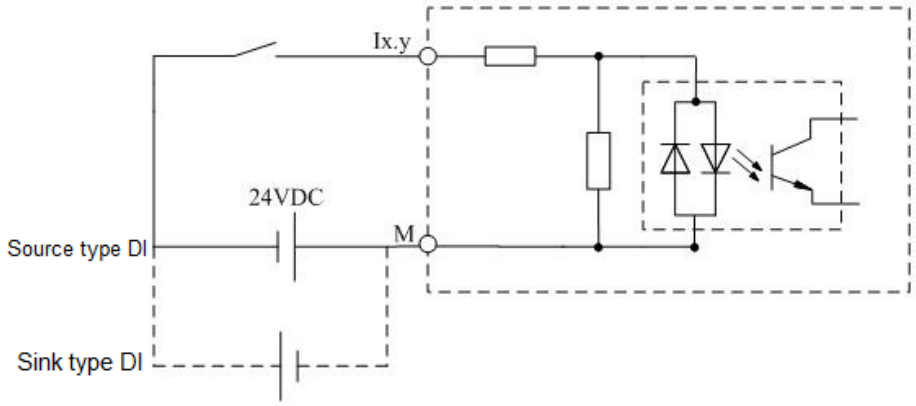


Figure 2-14 Digital Input Channels

2. Electrical schematic diagram of the ordinary output channels of transistor digital output

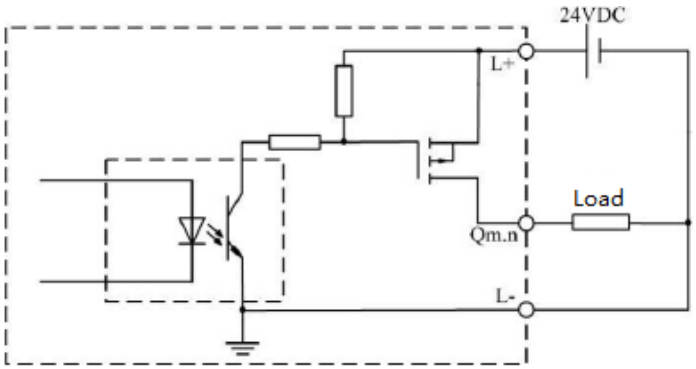


Figure 2-15 Ordinary Output Channels of Transistor Digital Output

3. Electrical schematic diagram of the high-speed transistor digital output channels

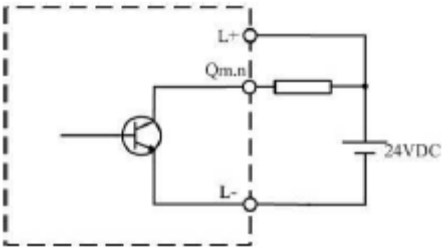


Figure 2-16 High-speed Transistor Digital Output Channels

4. Electrical schematic diagram of relay digital output channels

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

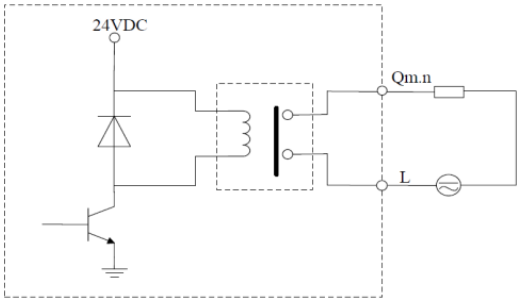


Figure 2-17 Relay Digital Output Channels

5. Electrical schematic diagram of analog input channels (differential)

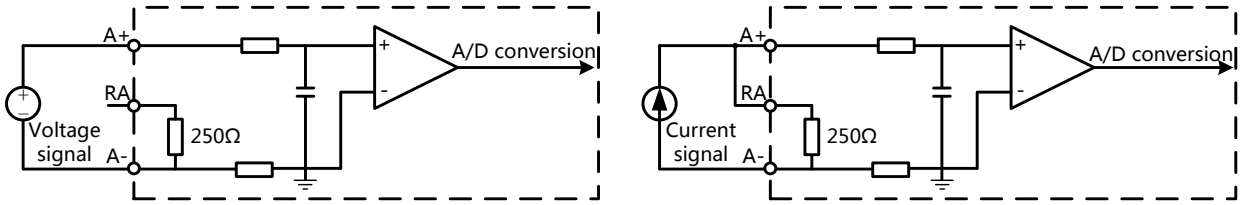


Figure 2-18 Analog Differential Input Channels

6. Electrical schematic diagram of analog input channels (single-end)

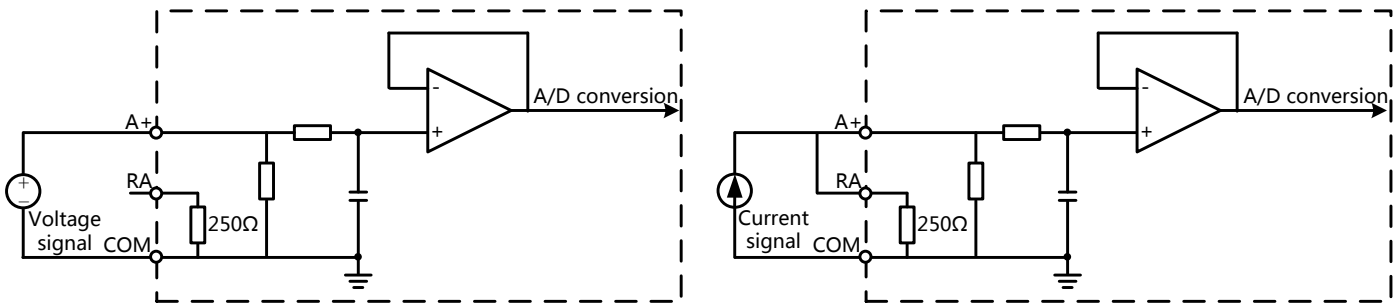


Figure 2-19 Single-end Analog Input Channels

7. Electrical schematic diagram of analog output channels

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

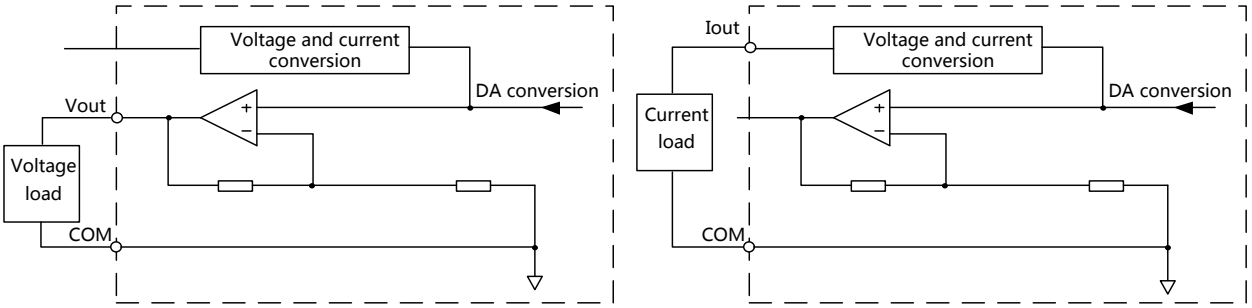


Figure 2-20 Electrical Schematic Diagram of Analog Output Channels

2.6 Communication Function

In order to meet the modern factory automation system openness requirements, LE series PLC offers serial communication, Profibus-DP fieldbus, and industrial Ethernet and GPRS communication.

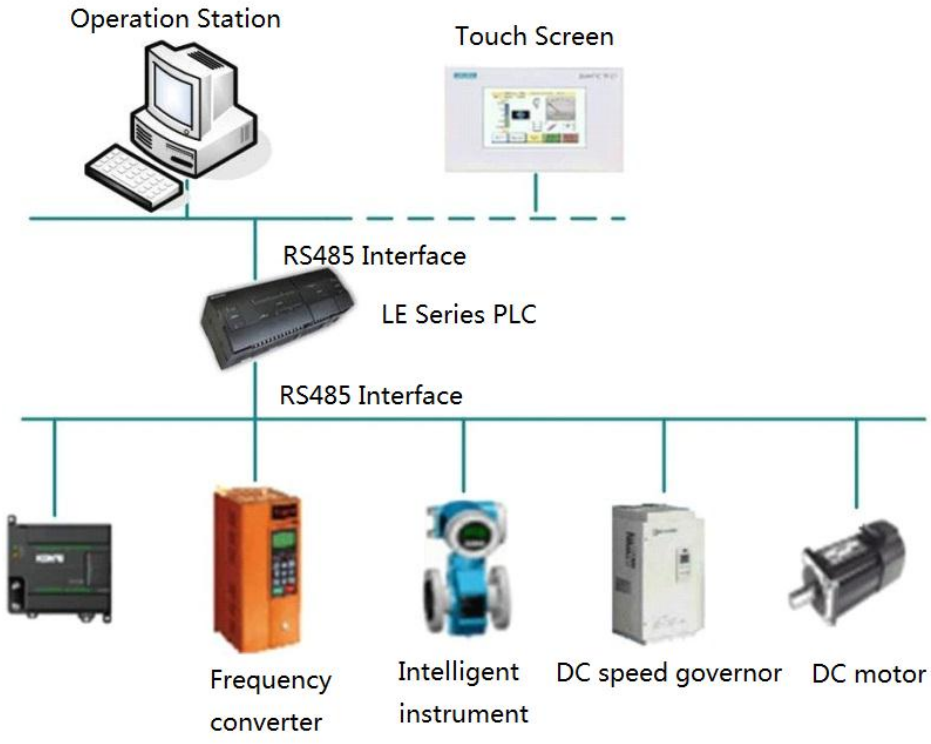


Figure 2-21 RS485 Communication Mode

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

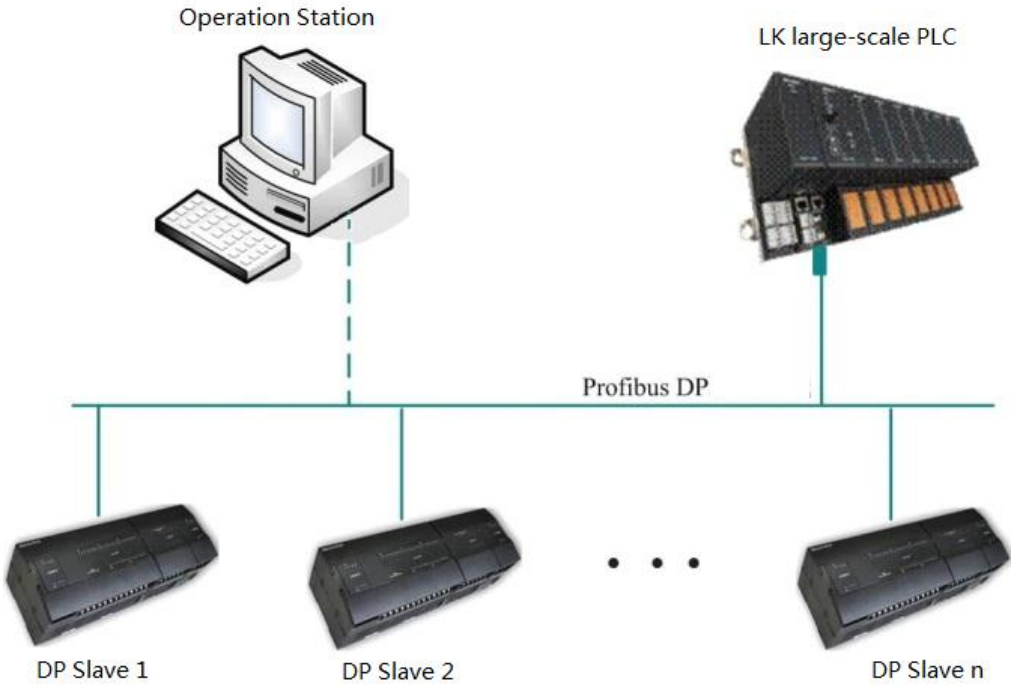


Figure 2-22 Profibus DP Mode

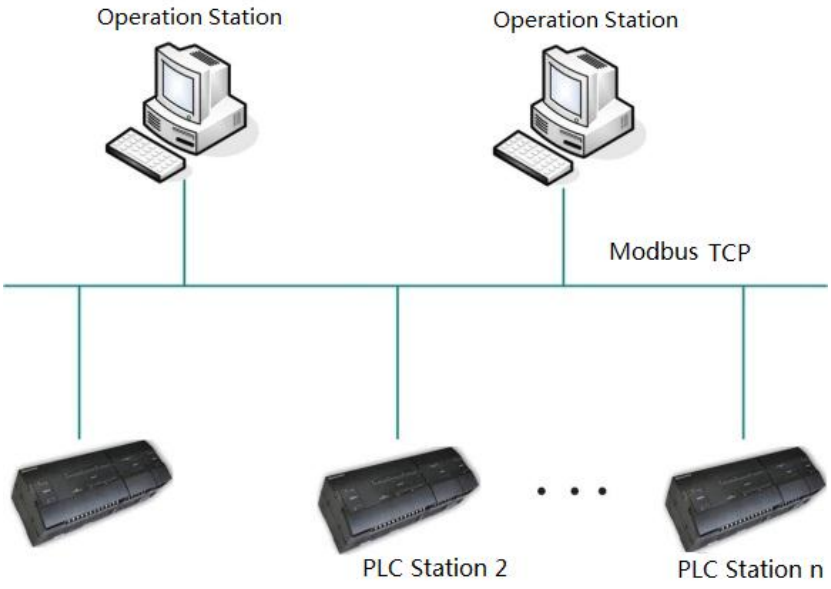


Figure 2-23 Ethernet Communication Mode

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

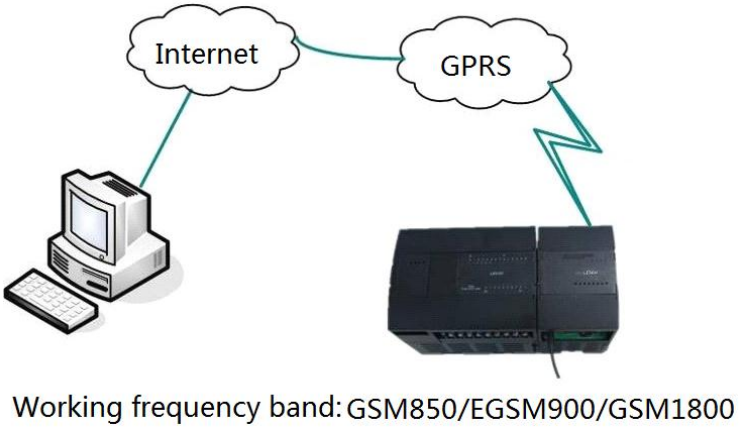


Figure 2-24 GPRS Communication Mode

2.7 Specifications of General Technology

1. Electromagnetic Compatibility

Electromagnetic Compatibility (EMC) is the ability of an electrical device to operate as intended in an electromagnetic environment and to operate without emitting levels of electromagnetic interference (EMI) that may disturb other electrical devices in the vicinity.

Table 2-7 Electromagnetic Compatibility Specification

Electromagnetic Compatibility Specification		
Item	Port	Specification
IEC 61000-4-2 Electrostatic Discharge	Chassis	Contact discharge 6kV, Air discharge 8kV
IEC 61000-4-3 Radiated, radio-frequency, electromagnetic field immunity test	Chassis	80MHz~1GHz，10V/m 1GHz~2.7 GHz，3V/m
IEC 61000-4-8 Frequency Magnetic Field Immunity	Chassis	30A/m
IEC 61000-4-4 Electrical Fast Transient Burst	DC systems	No requirements
	AC systems	2kV
	Digital I/O	1kV
	Analog signal and 485 communication port	1kV
IEC 61000-4-5 Surge Immunity	DC systems	No requirements
	AC systems	Common mode 2 kV, differential mode 1kV

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Electromagnetic Compatibility Specification		
	Signal port	1kV
IEC 61000-4-6 Conducted disturbances	Power port, signal port	0.15~80MHz, 10V

2. Insulation Withstand Voltage Specifications

Table 2-8 Insulation Withstand Voltage Specifications

Test of high-voltage insulation	
220V input to earth	3000Vrms, 1min, leakage current <10mA
220V input to 24V/5V output	3000Vrms, 1min, leakage current <10mA
System isolated from the external IO	1000Vrms, 1min, leakage current <10mA

3. Environmental Reliability Specifications

Table 2-9 Environmental Reliability Specifications

Environmental Reliability Specifications	
Working Temperature	0~60°C, 5~95% Relative humidity, non-condensing
IEC 60068-2-14, Test Nb, temperature shock	5～55°C, 3°C/min
IEC 60068-2-27, mechanical shock	15g, duration for 11ms, every axis six times
IEC 60068-2-6, Sinusoidal vibration	5Hz ⩽ f ⩽ 9Hz, 3.5 mm displacement; 9Hz ⩽ f ⩽ 150Hz, 1g acceleration
EN 60529, Level of mechanical enclosure	IP20, preventing the high-voltage fingers from touching the device, but not prevent the thing whose diameter is less than 12.5mm or water
Environment conditions-Transport and storage	
IEC 60068-2-2, Test Bb, dry hot IEC 60068-2-1, Test Ab, low temperature	-40～+70°C
IEC 60068-2-30, Test Db, damp and hot	25～55°C, 5~95% relative humidity

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Environmental Reliability Specifications	
IEC 60068-2-32, Test Ab, Free fall	1m, five times, transport and package

4. Nominal Voltage

Table 2-10 Rated Voltage

Rated Voltage	Permissible Range
24VDC	20.4～28.8VDC
220VAC	85～264VAC(50/60Hz)

5. Transportation

The package of this product satisfies the requirement of road and railway transportation. However, in the process of transportation, the environment conditions should meet the requirement that is regulated by the product technology.

6. Storage

The packed products are not suitable for outdoor storage and the relative humidity has to be maintained from 5% to 95% without condensation. The storage of LE PLC should keep away from chemical products that contain harmful gas, inflammable, explosive and mordant. Moreover, these products should be prevented from intense mechanical vibration, impact and the action of high-intensity magnetic field.

The transported barometric pressure should be within the altitude of 0 to 3,000 meters. And the permissible temperature range for storage is from -40 to ＋70°C.

7. Notice for Installation

- Please install the PLC in accordance with the specifications in the manual, the installation shall keep away from below environment:
  - Dust, lampblack, electric conductivity dust, corrosive gas and flammable site.
  - The site exposed to high temperature, moisture condensation, wind and rain.
  - The site with vibration and impact.
  - The electricity shocking and fire will shorten the product lifespan and causing products damage.
- During installation, the metal filing or electric wire should be avoided from probe into the ventilate grille of PLC.
- During installation, the power supply to PLC should remain off state.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Installation and wiring should be fastened to avoid the loss connection.
- Before PLC powering on, please ensure the terminal covers are attached and closed properly to prevent electricity shock.
- Please turn on the power supply in accordance with the instruction of terminals to avoid mixing up the alternating current power supply (L and N terminals) and direct current power supply (VI- and VI+ terminal) to prevent the damaging of PLC modules.
- Do not connect external power supply to Vout- and Vout+ terminals.
- Please do not share the grounding terminal of the module with high-voltage system.

8. Notice of operation and scrap

- Do not touch the terminals when electricity is energized, otherwise, it will lead to personal electricity shock or unpredictable behaviors of PLC.
- When the product is obsolete, it should be disposed as the industrial waste.

2.8 Fast Application Guide

If you already have experience of using PLC, the following instructions will help you quickly build simple control system based on LE series PLC.

2.8.1 Items Inventory

Please carefully check your product components, and check whether the packaging is complete.

2.8.2 Device Installation

- To select the suitable CPU modules and expansion modules according to actual application.
- To decide the installation mode of the module according to the field situation (rail mounting or screw mounting), and to preliminarily consider the working mode of PLC.
- To develop and formulate a reasonable plan on wiring scheme, and to connect the field sensor or actuator to the PLC module terminals.

2.8.3 Connect the Power Wiring

- Check power supply terminal of PLCs you are using before starting wiring.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Double check the power wiring before switch on the PLC system power, and ensure that RUN indicator on the CPU module is at on state and PLC system works normally.

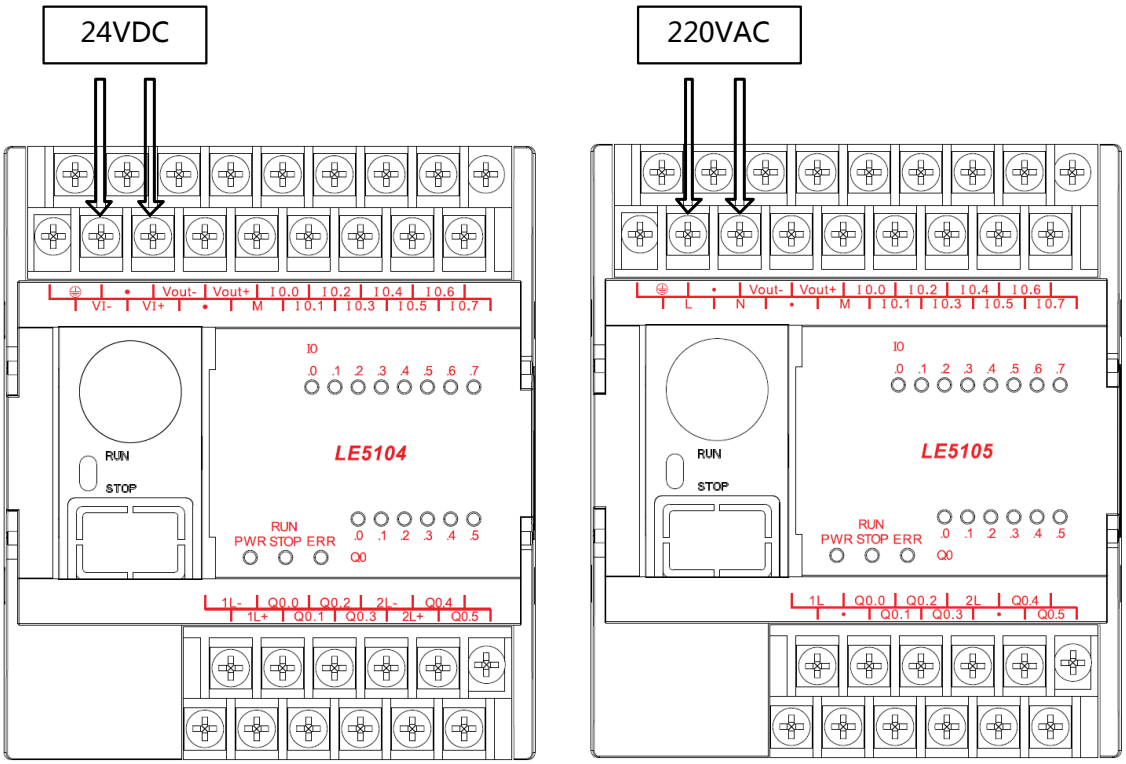


Figure 2-25 Power Supply Wiring Diagram

Table 2-11 Power Supply Specifications

Power supply (rated voltage)	Permissible range	Suitable CPU model
24VDC	20.4～28.8VDC	LE5104, LE5106, LE5108, LE5128
24VDC	21.6~26.4VDC	LE5708
220VAC	85～264 VAC	LE5105, LE5107, LE5107E, LE5107L, LE5109, LE5109L

2.8.4 Establish PC Communication

With the help of programming cable, the CPU module is connected to a computer to establish data transfer channels, and the connection of the programming cable should be secured before powering on the PLC system.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

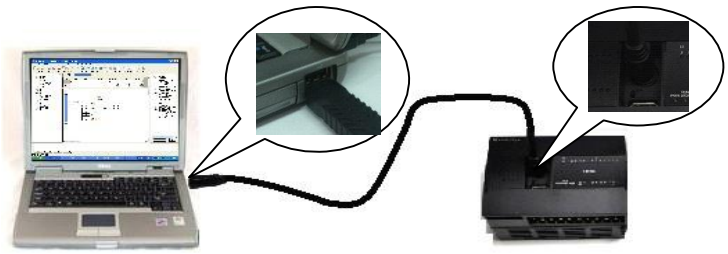


Figure 2-26 Connecting Programming Cable

The programming cable for LE series PLC is a non-isolated industrial converter. It is an USB to 485 DIN type interface. It can realize the application program downloading and real-time communicating between PLC and its connected PC through AutoThink programming software.

- Do not plug and unplug the serial port when CPU power is on.

2.8.5 Programming

Install AutoThink programming software, set relevant parameters to establish communication with the CPU module. Design and develop corresponding program logic to achieve control tasks according to the project requirements.

- Details of programming software, please refer to *AutoThink V3.1 User Manual_Project Configuration*.

2.8.6 Device Running

Upon the completing of the above processes, download the debugged program to the PLC and conduct the testing and commissioning of the field devices, a control system based on LE series PLC can be put into operation.

2.9 Fault Diagnosis

System assign diagnostic zone with corresponding byte to each module and save detailed diagnostic information of each module. When module faults detected the diagnostic information will be reported and saved into the user configurable variables for future query and analysis purposes.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Please refer to Data Storage Area in Chapter 5 of *AutoThink V3.1 User Manual_Project Configuration* for more details.

2.10 Module Connection

Module can be connected to each other through 10-pin female socket located at the right of itself and 10-pin male connector located at the left of itself. Latch the upper and lower side-lockers to secure the two modules next to each other.

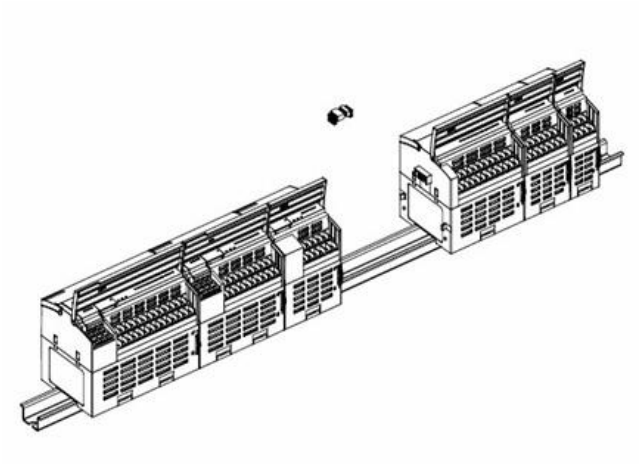


Figure 2-27 Module Connection



- Before mounting or removing modules and relevant devices, please ensure the power supply shall remain at off state.
- Cover of the terminal should be fastened properly prior to power on of the PLC system to avoid unnecessary personal injury or device damage.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 3 CPU Module

CPU Module is the control center of the whole PLC system, engaging functions of control, detection, diagnosis and communication that the system needed.

3.1 Overview

3.1.1 Module Structure

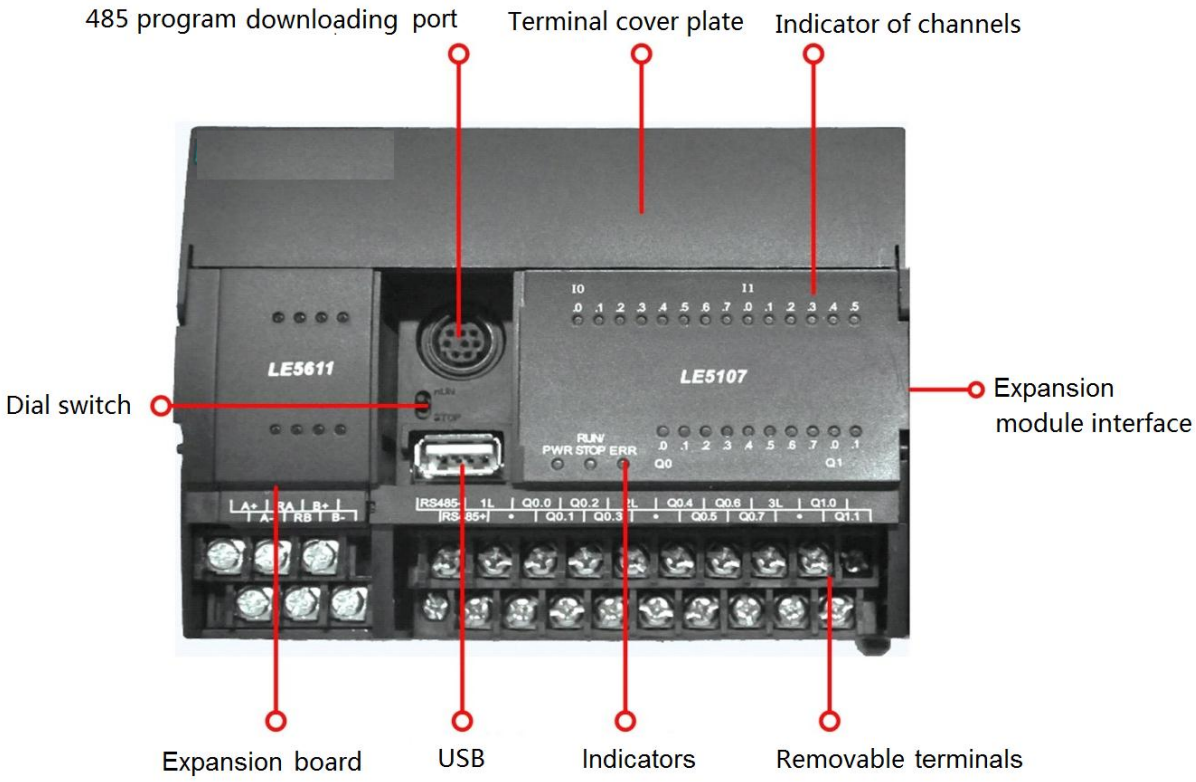


Figure 3-1 CPU Module Structure

- 485 programming download port: It provides channel for downloading user program, supports visiting to external devices and multi-PLC interconnection (applies to multi-PLC interconnection of 14 points CPU).

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Dial switch: You can choose the run/stop mode of CPU module.
- Expansion module interface: It is used for the communication between CPU module and expansion module.
- USB: Supports uploading user program from USB (applies to 24 points and 40 points CPU module).
- Expansion board: Supports expansion of function board (applies to 24 points and 40 points CPU module). In order to protect the port, protection cover is installed in the module. Coat the cover after wiring to prevent electric shock.

3.1.2 Basic Features

LE series PLC provides various kinds of CPU to meet requirements for different applications. CPU ontology integration has a certain number of I/O points, among which DI is transistor type input which is able to connect source type or sink type input signals; DO type is transistor or relay. According to the specifications of supply power, CPU can be classified as two types: power supplied by 24 VDC and 220VAC. Table 3-1 shows the major technical specification of various CPU modules.

Table 3-1 Major Technical Specification of CPU Modules (1)

Basic Specification	**LE5104**	**LE5105**	**LE5106**	**LE5107**	**LE5108**	**LE5109**
Supply voltage	24VDC	220VAC	24VDC	220VAC	24VDC	220VAC
DI	8×24VDC		14×24VDC		24×24VDC	
DO	6×transistor	6×relay	10×transistor	10×relay	16×transistor	16×relay
AI	-					
AO	-					
Number of expansion module (max), see Note ①	10	10	16	16	20	20
Program download function	Binary code download mode					
Program upload function	Supported					
Memory card function	None		Supported			

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Basic Specification	LE5104	LE5105	LE5106	LE5107	LE5108	LE5109
Program memory	64K bytes		128 K bytes		256 K bytes	
Input memory	1K bytes				1K bytes	
Output memory	1K bytes				1K bytes	
M memory	4K bytes		8K bytes		16K bytes	
N memory	9K bytes		21K bytes		37K bytes	
S memory	1K bytes					
Power-loss retentive memory	2K bytes		4K bytes		8K bytes	
Number of timer	Unlimited					
Number of counter	Unlimited					
PID circuits	Unlimited					
Project encryption	Supported					
Real-time clock	Supported					
Computing speed	0.1μs (basic instruction)					
Programming language	Ladder diagram(LD), Structured text(ST), Continuous function chart(CFC), Sequence function chart(SFC)					

Table 3-2 Major Technical Specification of CPU Modules (2)

Basic Specification	LE5107E	LE5107L	LE5109L	LE5128	LE5708
Supply Voltage	220VAC			24VDC	
DI	12×24VDC	14×24VDC	24×24VDC	16×24VDC	24×24VDC
DO	8×relay	10×relay	16×relay	10×transistor	20×relay
AI	2×voltage or current	-		2×voltage or current	4×(voltage/current) 8×NTC

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Basic Specification	LE5107E	LE5107L	LE5109L	LE5128	LE5708
AO	2×voltage or current	-		4×voltage or current	2×voltage or current
Number of expansion module (max), see Note ①	4	4	7	20	Not supported
Program download	Binary code download mode				
Program upload	Not supported			Supported	Not supported
Memory card	Supported				
Program memory	128 K bytes			256K bytes	256K bytes
Input memory	128 bytes			1K bytes	512 bytes
Output memory	128 bytes			1K bytes	512 bytes
M memory	3K bytes			16K bytes	16K bytes
N memory	5K bytes			37K bytes	37K bytes
S memory	1K bytes			1K bytes	1K bytes
Power-loss retentive memory	2K bytes			8K bytes	2K bytes
Number of timer	Unlimited				
Number of counter	Unlimited				
PID circuits	Not supported			4 (cycle 1-63ms, it is optional for integer times of 1ms)	Not supported
Project encryption	Supported				

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Basic Specification	LE5107E	LE5107L	LE5109L	LE5128	LE5708
Real-time clock	Supported (no power-off protection)			Supported (15 days)	Supported (12 months)
Computing speed	0.1μs (basic instruction)				
Programming language	Ladder diagram(LD), Structured text(ST), Continuous function chart(CFC), Sequence function chart(SFC)				

Note ①: The maximum number of expansion modules should be combined with the power consumption calculation, please refer to Chapter 2.4 Power Consumption Calculation.

3.1.3 Operation Mode

Both programming software and CPU module provide the setting of “Run” and “Stop” status, therefore the software and hardware are constrained each other.

Table 3-3 RUN/STOP Switch Setting Instructions

RUN/STOP selective Switch Position	Status of Programming Software	Module Status
RUN (switch to upper position)	RUN	RUN: automatically changed into STOP if users download program in this state.
	STOP	STOP
Stop (switch to lower position)	RUN/STOP	STOP (user program stops, unable to run)

3.1.4 Definition of Indicators

Table 3-4 Definition of Indicator

Type	Color	Status	Description
Power supply PWR	Green	ON	Power supply works in normal mode.
		OFF	Power is abnormal or no power or output 24V overloading
Channel status indicator Ix.y,Qm.n	Green	ON	The channel is in ON
		OFF	The channel is in OFF
Operation status indicator	Green/	ON	PLC is in RUN mode and user program

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Type	Color	Status	Description
RUN/STOP	Yellow	green	is running
		ON yellow	PLC is in STOP mode and user program is not running
Failure status indicator ERR, see Instruction ②	Red	ON	The CPU is in failed mode
		OFF	PLC is in normal operating mode

Instruction ②: Possibility and solutions if ERR indicator is on:

- System configuration of programming software is inconsistent with actual hardware configuration.
- Solutions: check system configuration in programming software and re-configure hardware.
- Communication with expansion module is failed.

  Solutions: check whether the expansion module is connected correctly and check whether state of module is normal in data diagnosis area.
- Report faults occurring to each expansion module.

  Solutions: replace faulty expansion module.
- Project is loaded unsuccessfully through Memory card.

  Solutions: Verify that the engineering and controller platforms in the memory card are consistent.

3.1.5 Communication Connection

RS485 communication interface can establish connection to personal computer (PC) through programming cable, realize download of user program and on-line debugging and be applied to communication with field devices. Junction and communication between CPU module and PC are achieved through PS/2 (at ① in Figure 3-2), junction and communication between CPU module and expansion module are achieved through connector (at ② in the Figure 3-2).

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

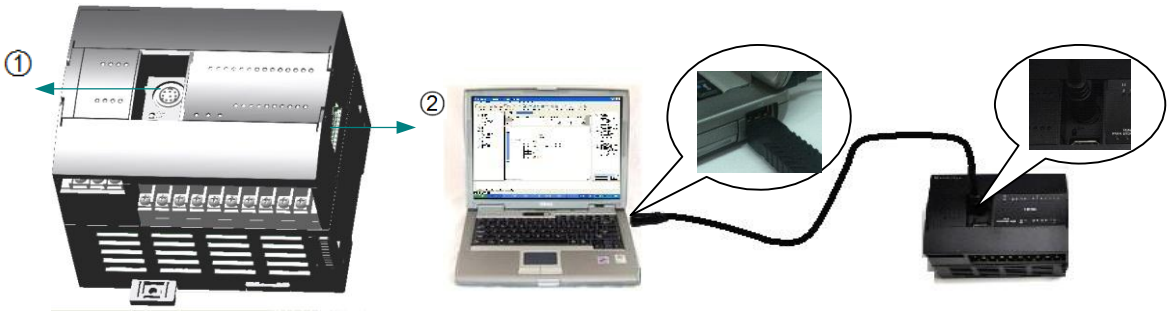


Figure 3-2 Communication Connection Diagram

- Before downloading, please confirm that PLC is connected as per the schematic diagram.
- Before downloading, please confirm that AutoThink V3.1.0 or above version has been installed.
- To download, please click “Download” option in menu bar of AutoThink software and follow the instructions for downloading.

- Cover of the connector should be fastened properly after power is connected to avoid unnecessary personal injury or device damage;
- When connecting or removing PLC power, severe personal injury or device damage may be caused if power is not isolated. Therefore, before module installation or removal, all power must be turned off and please pay attention to this at any time.
- Before connecting power to PLC, please confirm programming cable is connected properly and please do not remove from or insert into communication port during power on to avoid device damage.
- Please use shielded twisted pair in the high-speed digital input channel.
- You can set the filtering parameter to strengthen the anti-interference ability of the high-speed input channel in the case of interference of high-frequency signal.

3.1.6 485 Downloading Interface

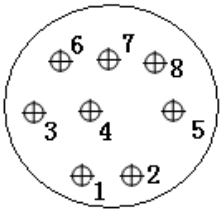


Figure 3-3 Pins of 485 Downloading Port

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Table 3-5 Definition of Pins

Pin No.	Definition	Pin No.	Definition
1	NC	2	NC
3	NC	4	NC
5	RS485+	6	RS485-
7	GND	8	NC
9	PGND(Shell)		
Note	5, 6 use twisted pair		

3.2 LE5104 8 DI / 6 DO CPU Module

LE5104 is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module. RTC records operation time. RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection, equipped with 8 DI and 6 DO and is a general-purpose CPU module.

3.2.1 Technical Specifications

Table 3-6 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	8 DI / 6 DO	Input	Rated voltage	24VDC
I/O expansion module (max.)	10 (total module power consumption ≤ CPU rating)		Permissible range	20.4~28.8VDC
Programming language	LD/ST/CFC/SFC		Current consumption (max.)	800mA@24VDC
Program memory	64K bytes	External output voltage		24VDC
Data memory	18K bytes	External output current (max.)	+24VDC (supply for expansion bus)	250mA
Power-loss retentive memory	2K bytes		+24VDC (supply for peripheral device)	350mA
HSC	2 HSC at 20 KHz for single phase（Ix0.0,Ix0.4）		+5VDC (supply for expansion bus)	600mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved


CPU Specifications		Power Supply Specifications	
	1 HSC at 10 KHz for A/B phase（Ix0.0,Ix0.4）	Hold up time (loss of power)	10ms
Pulse outputs (max.)	2, 20KHz（Qx0.0,Qx0.1）	Output Specifications	
Pulse catch	2（Ix0.0,Ix0.1）	Number of outputs	6
Fast external interruption	2（Ix0.0,Ix0.1）	Output type	Transistor
Basic instruction processing time	0.1μs	Rated voltage	24VDC
Input Specifications		Permissible range	20.4 to 28.8VDC
Number of inputs	8	Output current	Max. 500mA for PTO channel; max. 1A for ordinary channel
Input type	Sink/source	Current per common	1A max. for PTO channel; 4A max. for ordinary channel
Rated voltage	24VDC	Residual voltage	<0.5V (output logic 1, at 1A current)
Permissible range	0~30VDC	On state resistance	0.3Ω(typical), 0.6Ω(max.)
Logic 1 signal	15~30VDC, permissible min. current 3mA	Isolation mode	Optocoupler isolation (field side to system)
Logic 0 signal	0~5VDC, permissible max. current 1mA	Isolation groups	2
Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, and 100ms	Isolation withstand voltage	500V AC for 1minute, leakage current <5mA
Isolation mode	Optocoupler isolation (field side to system)	Physical Specifications	
Isolation groups	1	Dimensions W x H x D (mm)	78 x 97 x 90
Isolation withstand voltage	500V AC for 1minute, leakage current <5mA	Weight	315g
Communication Specifications		Operating temperature	0~60°C
Communication interface	1 RS485	Storage temperature	-40~70°C
Interface type	PS/2	Relative humidity of operating environment	5%~95% (non-condensing)
Baud rates (bps)	1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600,	Relative humidity of storage environment	5%~95% (non-condensing)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
	115,200		
Communication protocol	Proprietary protocol, Modbus master-slave, free port protocol, multi-PLC interconnection		

3.2.2 Terminal Definition and Connection

LE5104 is connected with an external 24VDC power and has two pluggable terminals (8x2 and 5x2), the upper terminal offers digital input channel (DI), the lower terminals offers digital output channel (DO), and connection is easy and convenient and is secured with screw, which is a typical field connection case.

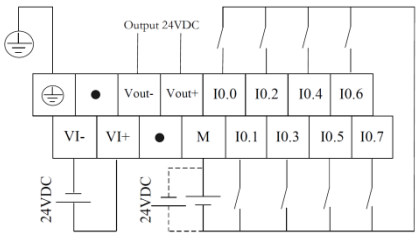

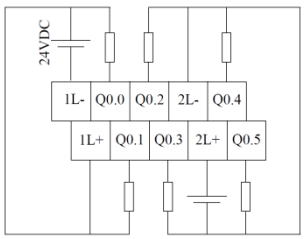



Figure 3-4 Upper Terminal Definition ***Lower Terminal Definition***

- LE5104 Terminal Definition and Connection Instructions
  - ☐ High-speed channel output mode for the open set; ordinary channel output mode for the high-side drive, wiring as shown in Figure 3-4.
  - ☐ M terminal of digital input channel (DI) is common terminal for peripheral DI, users can choose to connect M to positive terminal or negative terminal of 24VDC power to fit sink/source type of DI.
  - ☐ 1L+, 2L+ and 1L-, 2L- of output channel (DO) respectively are connected to positive terminal and negative terminal of 24VDC load driving power source.
  - ☐ VI+ and VI- of upper terminal are respectively connected to positive and negative terminals connecting 24VDC power supply to CPU modules.
  - ☐ Vout+ and Vout- terminals of upper terminal are respectively connected to positive and negative terminal 24VDC connecting power supply to external devices.
  - ☐ “●” means the channel cannot be connected or connection is not available. “⏚” means grounding.


Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- The following wiring diagrams include two schematic diagrams of connection of high-speed output terminal and motor, the external resistance in the schematic diagrams is for example only. In actual applications, users must calculate external resistance according to their selected permissible current on input side of driver and internal resistance.

Figure 3-5 wiring diagrams include two schematic diagrams of connection of high-speed output terminal and motor, the external resistance in the schematic diagrams is for example only. In actual applications, users must calculate external resistance according to their selected permissible current on input side of driver and internal resistance.

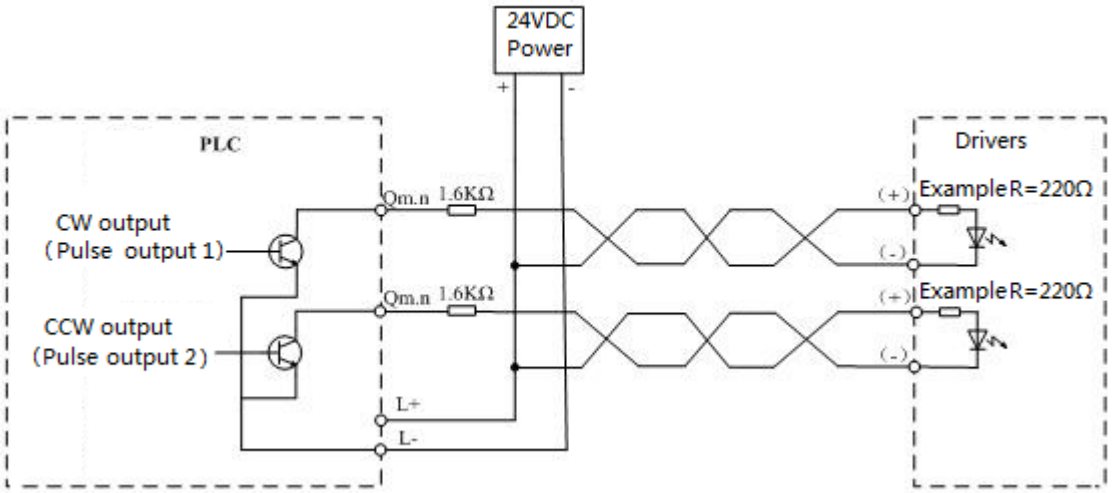

(a)

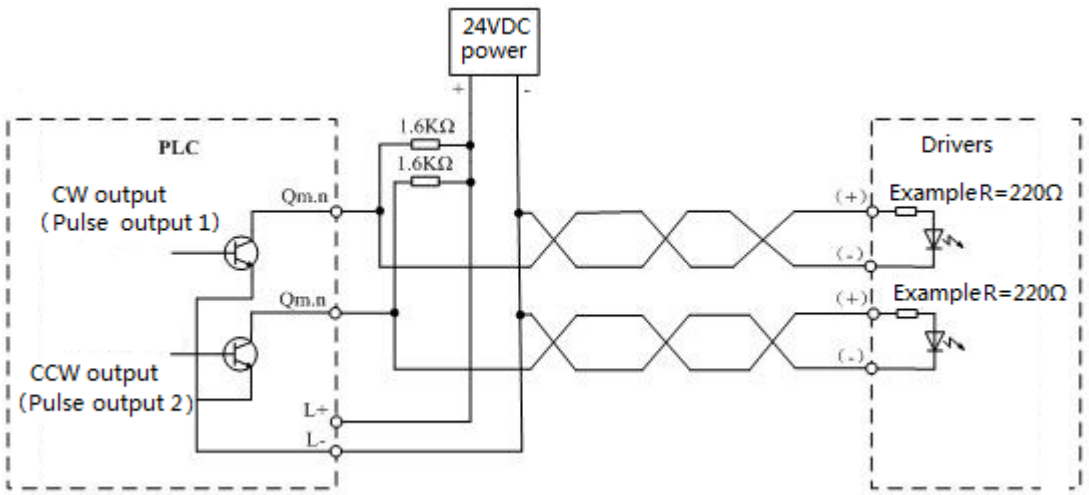

(b)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Figure 3-5 CW/CCW Mode Wiring Diagram

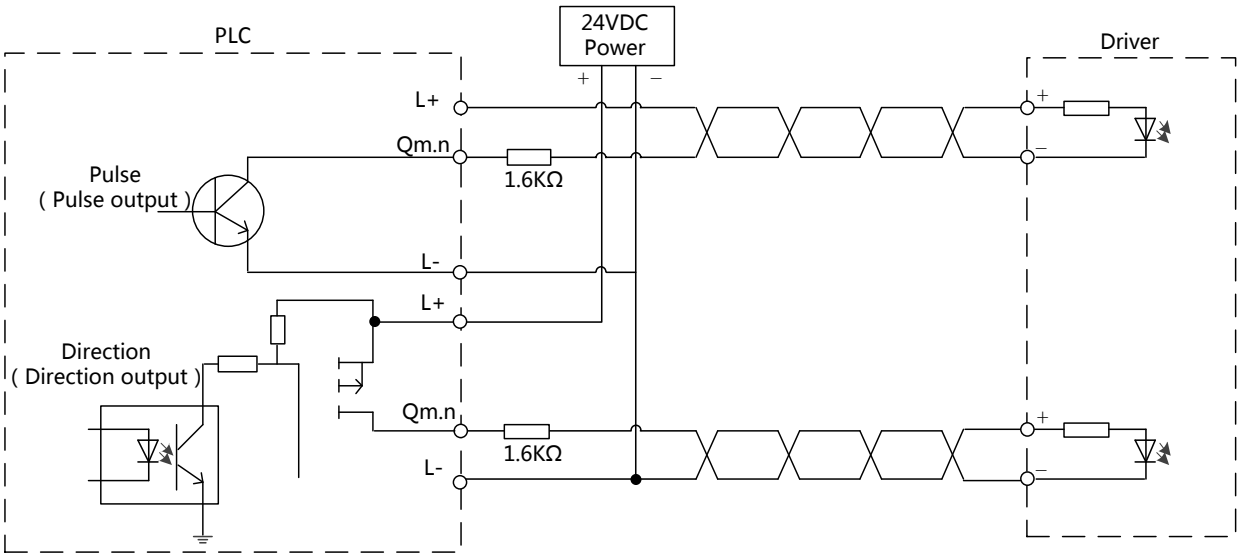


Figure 3-6 Pulse + Direction Mode Wiring Diagram

Description:

CW / CCW mode:

1: Output axis 1, pulse output (CW) Q0.0, pulse output (CCW) Q0.1

Pulse + direction mode:

1: Output axis 1, pulse output Q0.0, pulse direction Q0.4

2: Output axis 2, pulse output Q0.1, pulse direction Q0.5

Table 3-7 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	VI-	Input power supply 24VDC negative
●	No connection	VI+	Input power supply 24VDC positive
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of input
I0.0	Fast external interruption 1/ Pulse catch 1/ single-phase counter 1/ A/B phase counter phase A / Ordinary	I0.1	Fast external interruption 2/ pulse catch 2/ single-phase counter 2/ Ordinary input

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
	input		
I0.2	Single-phase counter 1 reset / A/B phase counter reset / Ordinary input	I0.3	Single-phase counter 2 reset /Ordinary input
I0.4	Single-phase counter 1 direction control / A/B phase counter phase B/ Ordinary input	I0.5	Single-phase counter 2 direction control / Ordinary input
I0.6	Ordinary input	I0.7	Ordinary input
1L-	Load driving power source 1 negative (Q0.0, Q0.1)	1L+	Load driving power source 1 positive (Q0.0, Q0.1)
Q0.0	High-speed output/Ordinary output	Q0.1	High-speed output/ Ordinary output
Q0.2	Ordinary output	Q0.3	Ordinary output
2L-	Load driving power source 2 negative (Q0.2~Q0.5)	2L+	Load driving power source 2 positive (Q0.2~Q0.5)
Q0.4	Ordinary output	Q0.5	Ordinary output

3.2.3 Electrical Schematic Diagram

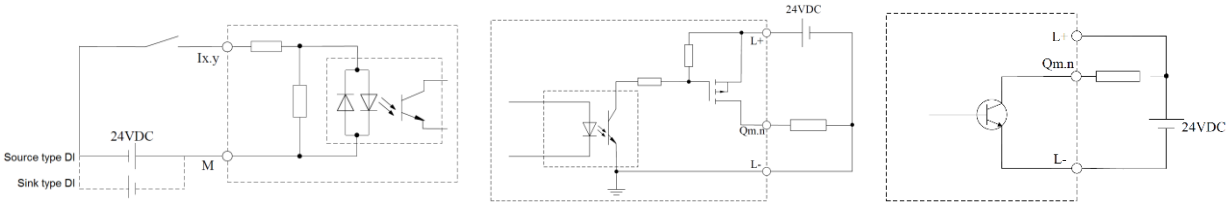


Figure 3-7 Input Ordinary Output High-speed Output

Note: when the output transistor is turned on, the load impedance is required to be greater than 100 Ω for preventing oversize current through the PLC internal.

3.3 LE5105 8 DI/ 6 DO CPU Module

LE5105 is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis and RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module. RTC records operation time. RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection, equipped with 8 DI and 6 DO and is a general-purpose CPU module.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.3.1 Technical Specifications

Table 3-8 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	8 DI / 6 DO	Input	Rated voltage	220VAC
I/O expansion module (max.)	10 (total modules power consumption ≤ CPU rating)		Permissible range	85~264VAC （50/60Hz）
Programming language	LD/ST/CFC/SFC		Current consumption (max.)	100mA@220VAC
Program memory	64K bytes	External output voltage		24VDC
Data memory	18K bytes	External output current (max.)	+24VDC (supply for expansion bus)	200mA
Power-loss retentive memory	2K bytes		+24VDC (supply for peripheral device)	200mA
HSC	2 HSC at 20 KHz for single phase		+5VDC (supply for expansion bus)	500mA
	1 HSC at 10 KHz for A/B phase	Hold up time (loss of power)		80ms
Pulse catch	2	Output Specifications		
Fast external interruption	2	Number of outputs	6	
Basic instruction processing time	0.1μs	Output type	Relay	
Input Specifications		Rated voltage	24VDC or 24～230VAC	
Number of inputs	8	Permissible range	5～30VDC or 5～250VAC	
Input type	Sink/source	Output current	2A (resistance load)	
Rated voltage	24VDC	Rated current per com (max.)	＜10A	
Permissible	0～30VDC	On state	0.2Ω(max.)	


Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
range		resistance	
Logic 1 signal	15~30VDC, permissible min current 3mA	Switching frequency （max.）	1Hz
Logic 0 signal	0~5VDC, permissible max 1mA	Mechanical life of relay	No load: up to 10,000,000 open/close cycles
Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, and 100ms		Rated resistance 2A load: up to 100,000 open/close cycles
Isolation mode	Optocoupler (field side to system)	Isolation mode	Relay (field side to system)
Isolation groups	1	Isolation groups	2
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	Isolation withstand voltage	2500VAC for 1 minute, leakage current <5mA
Physical Specifications		Communication Specifications	
Dimensions W x H x D (mm)	78×97×90	Communication interface	1 RS485
Weight	372g	Interface type	PS/2
Operating temperature	0～60°C	Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Storage temperature	-40～70°C	Communication protocol	Proprietary protocol, Modbus master-slave, free port communication protocol, multi-PLC interconnection
Relative humidity	5%~95% (non-condensing)		

3.3.2 Terminal Definition and Connection

LE5105 is connected with an external 220VAC power and has two pluggable terminals (8x2 and 5x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and wiring is easy and convenient and is secured with screw, which is a typical field connection case.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

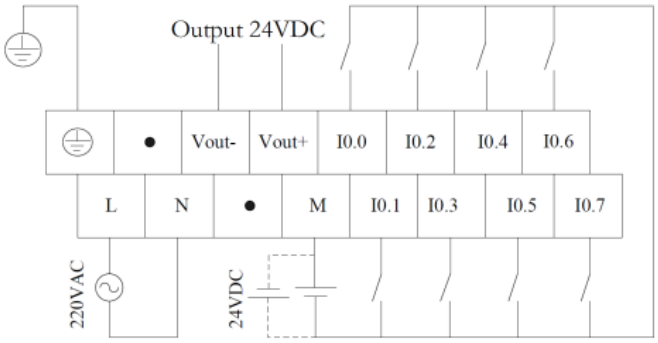

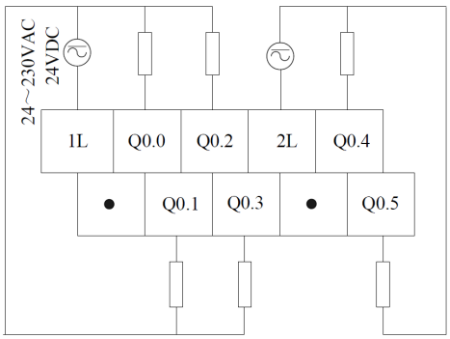


Figure 3-8 Upper Terminals Definition ***Lower Terminals Definition***

- LE5105 terminal definition and wiring description
  - M terminal of input channel (DI) is as common terminal for peripheral DI, users can chose to connect M to positive terminal or negative terminal of 24VDC power supply to accommodate sink/source type of DI.
  - 1L and 2L in output channel(DO) are as two groups Load power supply terminals, it can be a 24VDC power supply, also can be a 24 ~ 230VAC power supply.
  - L and N of upper terminal are respectively connected to firing line and null line of 220VAC power supply on CPU module;
  - Vout+ and Vout- respectively are positive and negative terminal of the 24 VDC power output form CPU module.
  - "●" means the channel cannot be connected or connection is not available. "⏚" means grounding.

Table 3-9 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	L	Fire wire
●	No connection	N	Null line
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of Input
I0.0	Fast external interruption 1/ Pulse catch 1/ single-phase counter 1/ A/B phase counter phase A / Ordinary input	I0.1	Fast external interruption 2/ pulse catch 2/ single-phase counter 2/ Ordinary input
I0.2	Single-phase counter 1 reset / A/B phase counter reset / Ordinary input	I0.3	Single-phase counter 2 reset /Ordinary input
I0.4	Single-phase counter 1 direction control /	I0.5	Single-phase counter 2

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
	A/B counter Phase B/ Ordinary input		direction control / Ordinary input
I0.6	Ordinary input	I0.7	Ordinary input
1L	Common of Output （Q0.0～Q0.3）	●	No connection
Q0.0	Ordinary output	Q0.1	Ordinary output
Q0.2	Ordinary output	Q0.3	Ordinary output
2L	Common of output (Q0.4～Q0.5)	●	No connection
Q0.4	Ordinary output	Q0.5	Ordinary output

3.3.3 Electrical Schematic Diagram

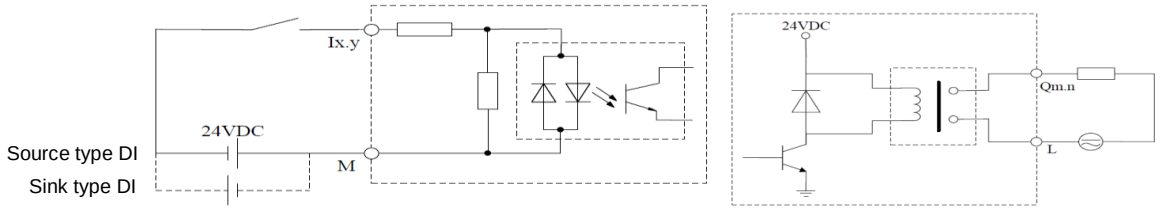


Figure 3-9 Electrical Schematic Diagram of Input Electrical Schematic Diagram of Output

3.4 LE5106 14 DI / 10 DO CPU Module

LE5106 is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module. RTC records operation time. Equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and PLC multi-machine interconnection; equipped with 14DI, 10DO, is a controller with relatively strong control ability.

3.4.1 Technical Specifications

Table 3-10 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	14 DI / 10 DO	Input	Rated voltage	24VDC
I/O expansion module (max.)	16 (total module power consumption		Permissible range	20.4～28.8VDC

CPU Specifications		Power Supply Specifications		
	≤CPU rating)			
Number of expansion board	1		Current consumption (max.)	1300mA@24VDC
Programming language	LD/ST/CFC/SFC	External output voltage		24VDC
Program memory	128K bytes	External output current (max.)	+24VDC (supply for expansion bus)	500mA
Data memory	36K bytes		+24VDC (supply for peripheral device)	300mA
Power-loss retentive memory	4K bytes		+5VDC (supply for expansion bus)	1200mA
Memory card	Memory card with USB interface	Hold up time (loss of power)		10ms
HSC	4 HSC at 100KHz for single phase（Ix0.0~Ix0.3）	Output Specifications		
	2 HSC at 50KHz for A/B phase（Ix0.0~Ix0.3）	Number of outputs	10	
Pulse output	2, 100KHz（Qx0.0~Qx0.1）	Output type	Transistor	
Pulse catch	4（Ix0.0~Ix0.3）	Rated voltage	24VDC	
Fast external interruption	6（Ix0.0~Ix0.5）	Permissible range	20.4～28.8VDC	
Frequency measurement	4（Ix0.0~Ix0.3）	Output current	Max. 500mA for PTO channel; max. 1A for Ordinary channel	
Basic instruction processing time	0.1μs	Current per common(max)	4A	
Input Specifications		Residual voltage	＜0.5V (output logic 1 at current 1A)	
Number of inputs	14	ON state resistance	0.3Ω (typical), 0.6Ω (max)	
Input type	Sink/source	Isolation mode	Optocoupler (Field side to system)	
Rated voltage	24VDC	Isolation groups	3	
Permissible range	0～30VDC	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	
Logic 1 signal	15~30VDC, permissible min.	Communication Specifications		

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
	current 3mA		
Logic 0 signal	0~5VDC, permissible max. current 1mA	Communication interface	2 RS485
Filtering parameter	Ix0.0~Ix0.3: No filtering, 5μs, 10μs, 20μs, 100μs, 200μs, 1ms, 5ms, 10ms, 20ms, 50ms, 100ms Ix0.4~Ix1.5: No filtering, 5ms, 10ms, 20ms, 50ms, 100ms ①	Interface type	PS/2, pluggable terminals
		Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Isolation mode	Optocoupler (Field side to system)		
Isolation groups	1	Communication protocol	Proprietary protocol (only for PS/2), Modbus master-slave, free port communication protocol, multi-PLC interconnection (only for terminal interface)
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA		
Physical Specifications			
Dimensions W x H x D (mm)	117×97×90	Operating temperature	0～60℃
Weight	455g	Storage temperature	-40～70℃
Relative humidity	5%~95% (non-condensing)		

3.4.2 Terminal Definition and Connection

LE5106 is connected with an external 24V DC power and has two pluggable terminals (11x2 and 9x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and connection is easy and convenient and is secured with screw, which is a typical field connection case.

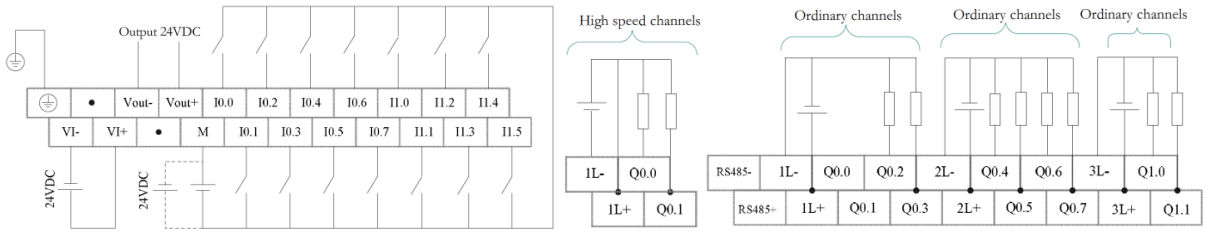


Figure 3-10 Upper Terminals Definition and LE5106 Lower Terminals Definition

■ Wiring description

High-speed channel output mode for the open set; ordinary channel output mode for the high-side drive, wiring as shown in Figure 3-10.

Figure 3-11 wiring diagrams include two schematic diagrams of connection of high-speed output terminal and motor, the external resistance in the schematic diagrams is for example only. In actual applications, users must calculate external resistance according to their selected permissible current on input side of driver and internal resistance.

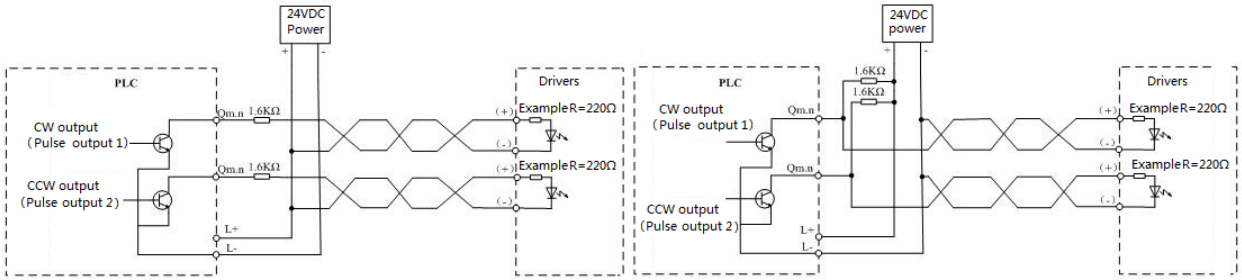


Figure 3-11 CW/CCW Mode Wiring Diagram

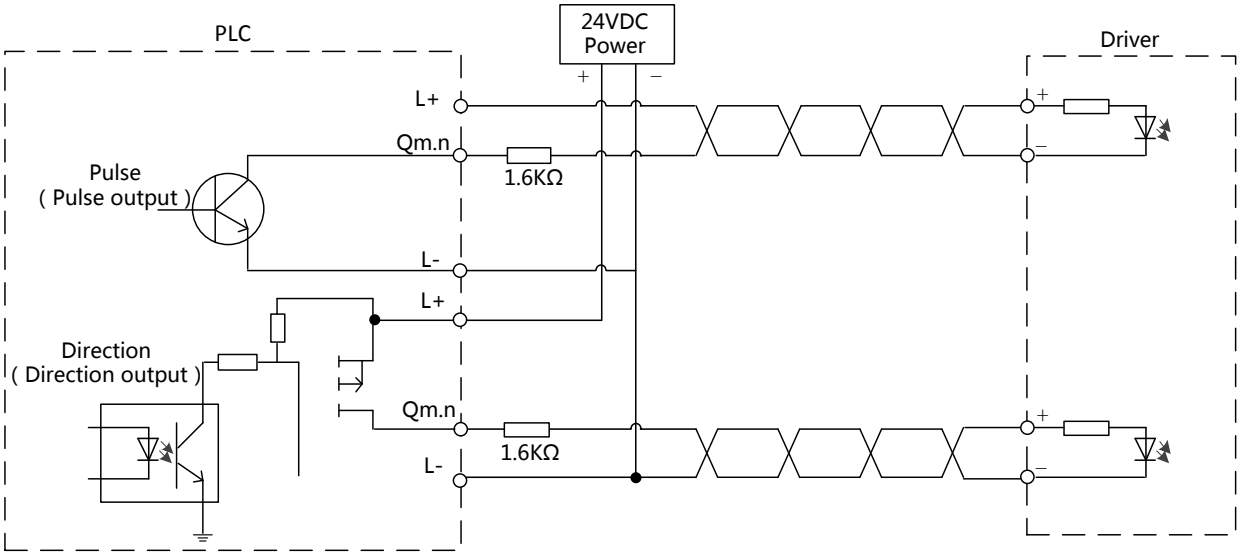


Figure 3-12 Pulse + Direction Mode Wiring Diagram

Description:

CW / CCW mode:

1: Output axis 1, pulse output (CW) Q0.0, pulse output (CCW) Q0.1

Pulse + direction mode:

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

1: Output axis 1, pulse output Q0.0, pulse direction Q0.4

2: Output axis 2, pulse output Q0.1, pulse direction Q0.5

Table 3-11 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	VI-	Input power supply 24VDC negative
●	No connection	VI+	Input power supply 24VDC positive
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of Input
I0.0	Fast external interruption 1/ pulse catch 1/frequency measurement channel 1/single-phase counter 1/ A/B phase counter 1 phase A/ Ordinary input	I0.1	Fast external interruption 2/pulse catch 2/frequency measurement channel 2/single-phase counter 2/A/B phase counter 1 phase B/ Ordinary input
I0.2	Fast external interruption 3/pulse catch 3/frequency measurement channel 3/single-phase counter 3/A/B phase counter 2 phase A/ Ordinary input	I0.3	Fast external interruption 4/pulse catch 4/ frequency measurement channel4/ single-phase counter 4/ A/B phase counter 2 phase B/ Ordinary input
I0.4	Fast external interruption 5/single-phase counter 1 direction control terminal/ Ordinary input	I0.5	Fast external interruption 6/single-phase counter 2 direction control / Ordinary input
I0.6	Single-phase counter 3 direction control terminal/ Ordinary input	I0.7	Single-phase counter 4 direction control/ Ordinary input
I1.0	Single-phase counter 1 reset /A/B phase counter 1 reset / Ordinary input	I1.1	Single-phase counter 2 reset / Ordinary input
I1.2	Single-phase counter 3 reset /A/B phase counter 2 reset / Ordinary input	I1.3	Single-phase counter 4 reset / Ordinary input
I1.4	Ordinary input	I1.5	Ordinary input
RS485-	RS485 Communication	RS485+	RS485 Communication
1L-	Load driving power supply 1 negative (Q0.0～Q0.3)	1L+	Load driving power supply 1 positive (（Q0.0～Q0.3）
Q0.0	High-speed output / Ordinary output	Q0.1	High-speed output / Ordinary output
Q0.2	Ordinary output	Q0.3	Ordinary output
2L-	Load driving power supply 2 negative （Q0.4～Q0.7）	2L+	Load driving power supply 2 positive (Q0.4～Q0.7)
Q0.4	Ordinary output	Q0.5	Ordinary output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
Q0.6	Ordinary output	Q0.7	Ordinary output
3L-	Load driving power supply 3 negative （Q1.0, Q1.1）	3L+	Load driving power supply 3 positive （Q1.0, Q1.1）
Q1.0	Ordinary output	Q1.1	Ordinary output

3.4.3 Electrical Schematic Diagram

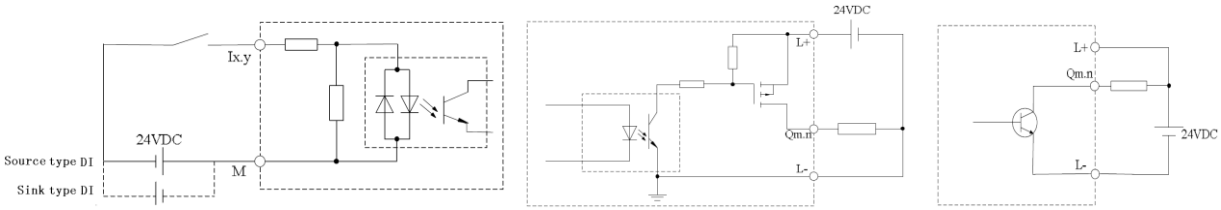


Figure 3-13 Input Channel Ordinary Output Channel High-speed Output Channel

3.5 LE5107 14DI/ 10 DO CPU Module

LE5107 is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection; equipped with 14 DI and10 DO and is a general-purpose CPU module.

3.5.1 Technical Specifications

Table 3-12 Technical Specifications

CPU Characteristics		Power Supply Specification		
On-board I/O	14 DI / 10DO	Input	Rated voltage	220VAC
I/O expansion module (max.)	16 (total modules power consumption ⩽ CPU rating)		Permissible range	85~264VAC （50/60Hz）
Number of expansion board	1		Current consumption (max.)	150mA@220VAC

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Characteristics		Power Supply Specification		
Programming language	LD/ST/CFC/SFC	External output voltage		24VDC
Program memory	128K bytes	External output current (max.)	+24VDC (supply for expansion bus)	500mA
Data memory	36K bytes		+24VDC (supply for peripheral device)	200mA
Power-loss retentive memory	4K bytes		+5VDC (supply for expansion bus)	1200mA
Memory card	Memory card with USB interface	Hold up time (loss of power)		80ms
HSC	4 HSC at 100KHz for single phase	Output Specifications		
	2 HSC at 50KHz for A/B phase	Number of outputs	10	
Pulse catch	4	Output type	Relay	
Fast external interruption	6	Rated voltage	24VDC or 24～230VAC	
Frequency measurement	4	Permissible range	5～30VDC or 5～250VAC	
Basic instruction processing time	0.1μs	Output current	2A (resistance load)	
Input Specifications		Rated current per common (max.)	＜10A	
Number of inputs	14	On state resistance	0.2Ω (max.)	
Input type	Sink/Source	Switching frequency (max.)	1Hz	
Rated voltage	24VDC	Mechanical life of relay	No load: up to 10,000,000 open/close cycles	
Permissible range	0～30VDC		Rated resistance 2A load: up to 100,000 open/close cycles	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Characteristics		Power Supply Specification	
Logic 1 signal	15~30VDC, permissible min current 3mA	Isolation mode	Relay (field side to system)
Logic 0 signal	0~5VDC, permissible max 1mA	Isolation groups	3
Filtering parameter	No.filtering, 5μs, 10μs, 20μs, 100μs, 200μs, 1ms, 5ms, 10ms, 20ms, 50ms, 100ms	Isolation withstand voltage	2500VAC for 1minute, leakage current <5mA
		Communication Specifications	
Isolation mode	Optocoupler (field side to system)	Communication interface	2 RS485
Isolation groups	1	Interface type	PS/2, pluggable terminals
Isolation withstand voltage	500VAC for 1minute, leakage current <5mA	Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Physical Specifications			
Dimensions W x H x D (mm)	117×97×90	Communication protocol	Proprietary protocol, Modbus master-slave, free port communication protocol, multi-PLC interconnection(only for terminal connecting)
Weight	567g		
Operating temperature	0～60°C	Storage temperature	-40～70°C
Relative humidity of operating environment	5%~95% (non-condensing)	Relative humidity of storage environment	5%~95% (non-condensing)

3.5.2 Terminal Definition and Connection

LE5107 is connected with an external 220VAC power and has two pluggable terminals (11x2 and 9x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and wiring is easy and convenient and is secured with screw, which is a typical field connection case.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

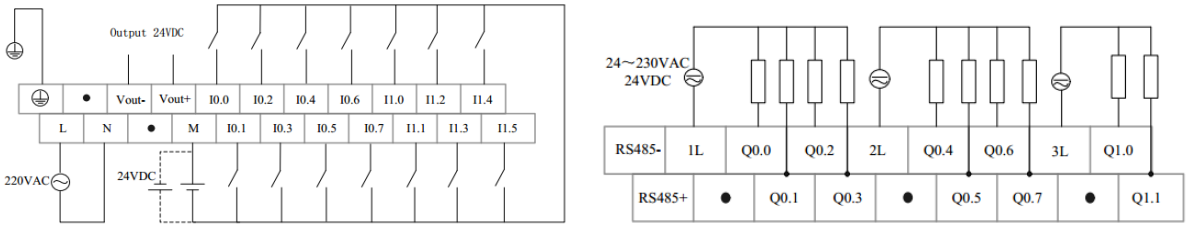


Figure 3-14 Upper Terminals Definition and Wring Diagram Lower Terminals Definition and Wring Diagram

Table 3-13 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	L	Fire wire
●	No connection	N	Null wire
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of Input
I0.0	Fast external interruption 1/ Pulse catch 1/frequency measurement 1/ single-phase counter 1/ A/B phase counter 1 phase A / Ordinary input	I0.1	Fast external interruption 2/ pulse catch 2/frequency measurement 2/ single-phase counter 2/ A/B phase counter 1 phase B /Ordinary input
I0.2	Fast external interruption 3/ Pulse catch 3/frequency measurement 3/ single-phase counter 3/ A/B phase counter 2 phase A / Ordinary input	I0.3	Fast external interruption 4/ pulse catch 4/frequency measurement 4/ single-phase counter 4/ A/B phase counter 2 phase B /Ordinary input
I0.4	Fast external interruption 5 / Single-phase counter 1 direction control /Ordinary input	I0.5	Fast external interruption 6 / Single-phase counter 2 direction control /Ordinary input
I0.6	Single-phase counter 3 direction control /Ordinary input	I0.7	Single-phase counter 4 direction control / Ordinary input
I1.0	Single-phase counter 1 reset/ A/B phase counter 1 reset/Ordinary input	I1.1	Single-phase counter 2 reset/ Ordinary input
I1.2	Single-phase counter 3 reset/ A/B phase counter 2 reset/Ordinary input	I1.3	Single-phase counter 4 reset/ Ordinary input
I1.4	Ordinary input	I1.5	Ordinary input
RS485-	RS485 communication	RS485+	RS485 communication
1L	Common of Output (Q0.0～Q0.3)	●	No connection
Q0.0	Ordinary output	Q0.1	Ordinary output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
Q0.2	Ordinary output	Q0.3	Ordinary output
2L	Common of Output （Q0.4～Q0.7）	●	No connection
Q0.4	Ordinary output	Q0.5	Ordinary output
Q0.6	Ordinary output	Q0.7	Ordinary output
3L	Common of Output (Q1.0～Q1.1)	●	No connection
Q0.0	Ordinary output	Q0.1	Ordinary output

3.5.3 Electrical Schematic Diagram

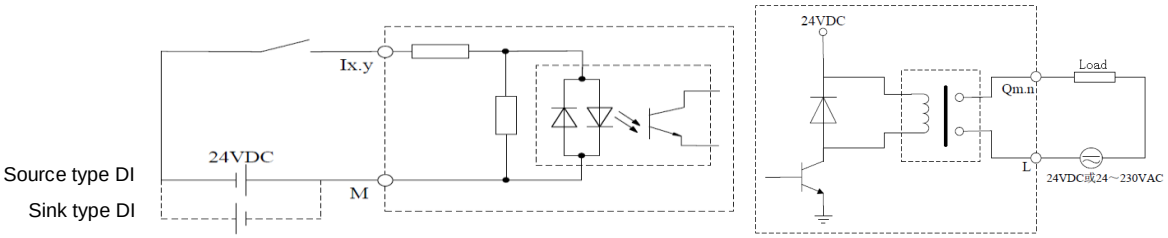


Figure 3-15 Electrical Schematic Diagram of Input Electrical Schematic Diagram of L Output

3.6 LE5107E 12DI / 8DO, 2AI / 2AO CPU Module

LE5107E is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection; equipped with 12 DI, 8 DO, 2 AI and 2 AO.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.6.1 Technical Specifications

Table 3-14 Technical Specifications

CPU Specifications		**Power Supply Specifications**		
On-board I/O	12 DI / 8DO/ 2AI/ 2AO	Input	Rated voltage	220VAC@150mA
I/O expansion module (max.)	4 (total module power consumption ≤ CPU rating)		Permissible range	85-265VAC (50/60Hz)
Number of expansion board	1	External output voltage	Rated voltage	Not supported
Programming language	LD/ST/CFC/SFC		Permissible range	Not supported
Program memory	128K bytes	External output current (max.)	+24VDC (supply for expansion bus)	190mA
Data memory	10496 bytes		+5VDC (supply for expansion bus)	550mA
Power-loss retentive memory	2K bytes	Hold up time (loss of power)		10ms
Memory card	Memory card with USB interface	Communication Specifications		
HSC	2 HSC at 5 KHz for single phase	Communication interface	2 RS485	
	1 HSC at 20 KHz for A/B phase	Interface type	PS/2	
Pulse catch	2	Baud rates (bps)	1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600, 115,200	
Fast external interruption	2			
Frequency measurement	Not supported	Communication protocol	Proprietary protocol, Modbus master-slave, free port protocol, multi-PLC interconnection (only for terminal interface)	
Basic instruction processing time	0.1μs			
Digital Input Specifications		Digital Output Specifications		
Number of inputs	12	Number of outputs		8
Input type	Sink/source	Output type		Relay

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Rated voltage		24VDC	Rated voltage		24VDC or 24 ~ 230VAC
Permissible range		0~30VDC	Permissible range		5 ~ 30VDC or 5 ~ 250VAC
Logic 1 signal		15~30VDC, permissible min. current 4mA	Output current		2A (resistance load)
Logic 0 signal		0~5VDC, permissible max. current 1mA	Current per common		<8A
Filtering parameter		No filtering, 5ms, 10ms, 20ms, 50ms, and 100ms	On state resistance		0.2Ω
			Switching frequency		1Hz
Isolation mode		Optocoupler isolation (field side to system)	Mechanical life of relay		No load: up to 10,000,000 open/close cycles
Isolation groups		1			Rated resistance 2A load: up to 100,000 open/close cycles
Isolation withstand voltage		500VAC,for 1minute, leakage current <5mA	Isolation mode		Relay isolation (field side to system)
Analog Input Specifications			Isolation groups		2
Number of inputs		2	Isolation withstand voltage		1500VAC for 1 minute, leaking current <5mA
Input type		Single-ended	Analog Output Specifications		
Input range	voltage	0~10V	Number of outputs		2
	current	0~20mA/4~20mA	Output range	voltage	0~10V
Range of corresponding code value		0~65535		current	0~20mA/4~20mA
Input accuracy		1% of full scale	Range of corresponding code value		0~65535
Resolution		10 bits	Output accuracy		1% of full scale
Input impedance	Voltage type	>950kΩ	Resolution		12 bits
	Current type	250Ω	Load impedance	voltage	2000Ω（Min.）
Input voltage/current (max.)		±30V/±32mA		current	600Ω (max.)
Common mode voltage		Signal voltage + common mode voltage <12V	Stable time (95% of new value)	voltage	300us (R) 750us (1uF)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Time for step response of analog input	1.5ms (up to 95%)		current	600us (1mH) 2ms (10mH)
Isolation mode (field side to system)	No	Isolation mode (field side to system)		None
Physical Specifications				
Dimensions W x H x D(mm)	117 x 97 x 90	Weight		575g
Operating temperature	0~60°C	Storage temperature		-40~70°C
Relative humidity of operating environment	5%~95% (non-condensing)	Relative humidity of storage environment		5%~95% (non-condensing)

3.6.2 Terminal Definition and Connection

LE5107E is connected with an external 220VAC power and has two pluggable terminals (11x2 and 9x2), the upper terminal offers digital input channel (DI, AI), the lower terminals offers digital output channel (DO, AO), and connection is easy and convenient and is secured with screw, which is a typical field connection case.

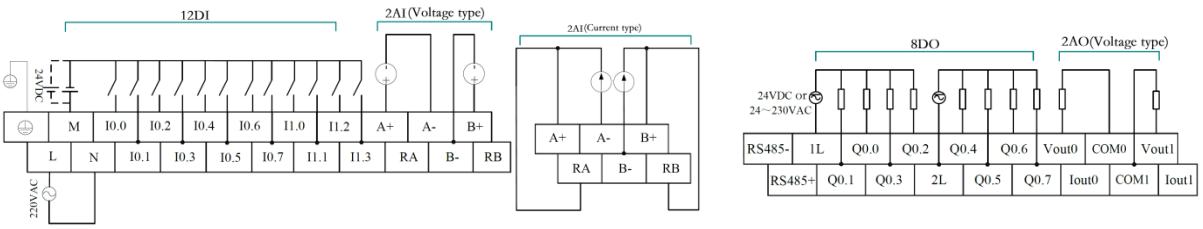


Figure 3-16 Upper Terminal Definition and Wring Diagram Lower Terminal Definition and Wring Diagram

Table 3-15 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	L	Fire wire	RS485-	RS485 communication negative	RS485+	RS-485 communication positive
M	Common of Input	N	Null wire	1L	Output common (Q0.0~Q0.3)	Q0.1	Ordinary output

Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description
I0.0	Fast external interruption 1/Pulse catch 1/Single-phase counter 1/ A/B phase counter 1 phase A/Ordinary input	I0.1	Fast external interruption 2/Pulse catch 2/Single-phase counter 2/Ordinary input	Q0.0	Ordinary output	Q0.3	Ordinary output
I0.2	Single-phase counter 1 reset /Ordinary input	I0.3	Single-phase counter 2 reset /Ordinary input	Q0.2	Ordinary output	2L	Output common (Q0.4~Q0.7)
I0.4	A/B phase counter phase B / Single-phase counter 1 direction control /Ordinary input	I0.5	Single-phase counter 2 direction control /Ordinary input	Q0.4	Ordinary output	Q0.5	Ordinary output
I0.6	Ordinary input	I0.7	Ordinary input	Q0.6	Ordinary output	Q0.7	Ordinary output
I1.0	Ordinary input	I1.1	Ordinary input	Vout 0	Analog voltage output	Iout0	Analog current output
I1.2	Ordinary input	I1.3	Ordinary input	COM0	Analog output common	COM1	Analog output common
A+	Channel A voltage input	RA	Channel A current input	Vout1	Analog voltage output	Iout1	Analog current output
A-	Analog input common	B-	Analog input common	--	--	--	--
B+	Channel B voltage input	RB	Channel B current input	--	--	--	--

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.6.3 Electrical Schematic Diagram

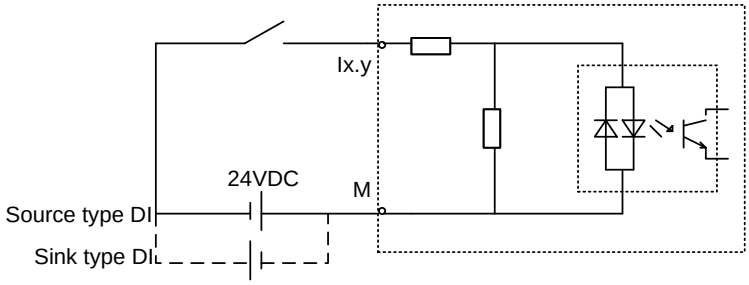


Figure 3-17 Input Channel (DI)

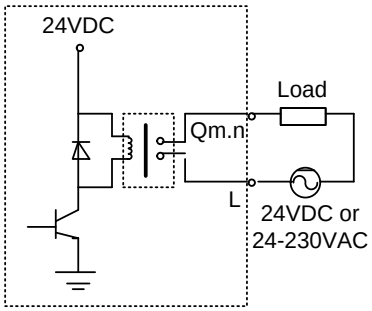


Figure 3-18 Output Channel (DO)

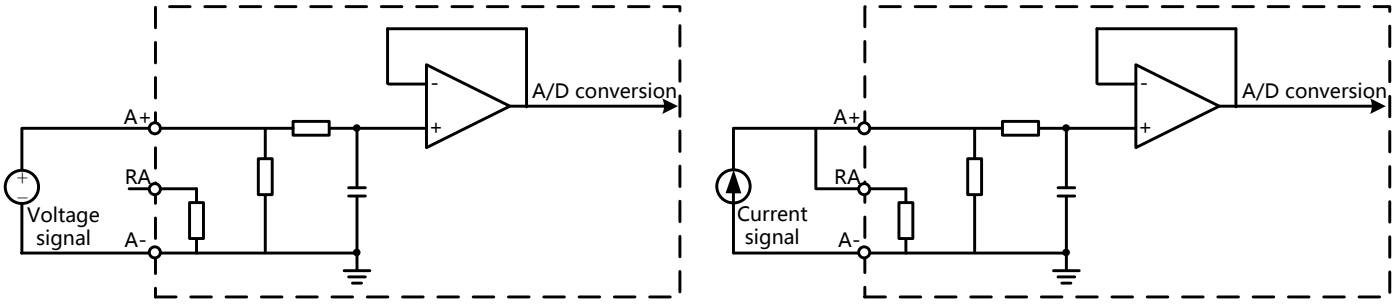


Figure 3-19 Input Channel (AI)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

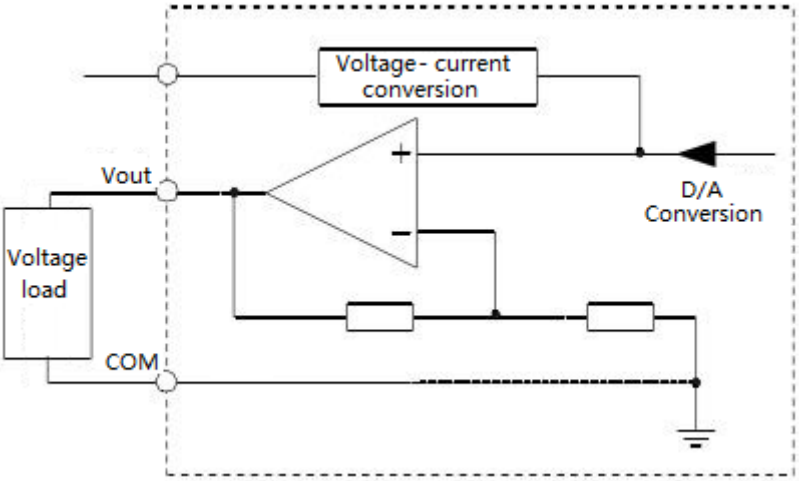


Figure 3-20 Output Channel (AO)

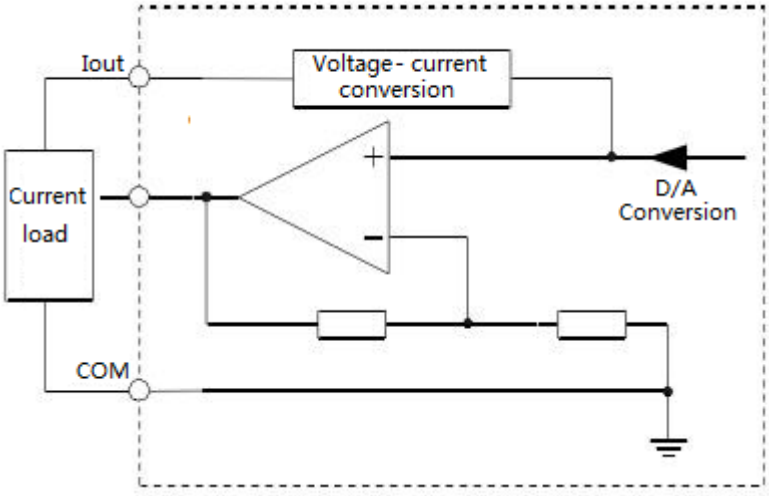


Figure 3-21 Output Channel (AO)

3.7 LE5107L 14DI/ 10 DO CPU Module

LE5107L is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection; equipped with 14 DI and10 DO.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.7.1 Technical Specifications

Table 3-16 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	14 DI / 10 DO	Input	Rated voltage	220VAC@150mA
I/O expansion module (max.)	4 (total modules power consumption ≤ CPU rating)		Permissible range	85~264VAC（50/60Hz）
Number of expansion board	1	External output voltage	Rated voltage	Not supported
Programming language	LD/ST/CFC/SFC		Permissible range	Not supported
Program memory	128K bytes	External output current (max.)	+24VDC (supply for expansion bus)	190mA
Data memory	10496 bytes		+5VDC (supply for expansion bus)	550mA
Power-loss retentive memory	2K bytes	Hold up time (loss of power)		10ms
Memory card	Memory card with USB interface	Communication Specifications		
HSC	2 HSC at 5KHz for single phase	Communication interface	2 RS485	
	1 HSC at 20KHz for A/B phase	Interface type	PS/2, pluggable terminals	
Pulse catch	2	Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200	
Fast external interruption	2			
Frequency measurement	Not supported	Communication protocol	Proprietary protocol, Modbus master-slave, free port communication protocol, multi-PLC interconnection (only for terminal connecting)	
Basic instruction processing time	0.1μs			
Input Specifications		Output Specifications		
Number of inputs	14	Number of outputs	10	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Input type	Sink/source	Output type	Relay
Rated voltage	24VDC	Permissible range	5～30VDC or 5～250VAC
Permissible range	0～30VDC	Output current	2A (resistance load)
Logic 1 signal	15~30VDC, permissible min. current 4mA	Rated current per common (max.)	＜8A
Logic 0 signal	0~5VDC, permissible max. current 1mA	ON state resistance	0.2Ω (max.)
Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, 100ms	Switching frequency (max.)	1Hz
		Mechanical life of relay	No load: up to 10,000,000 open/close cycles
Isolation mode	Optocoupler (field side to system)		Rated resistance 2A load: up to 100,000 open/close cycles
Isolation groups	1	Isolation mode	Relay isolation (field side to system)
Isolation withstand voltage	500VAC for 1minute, leakage current <5mA	Isolation groups	2
		Isolation withstand voltage	2500VAC for 1minute, leakage current <5mA
Physical Specifications			
Dimensions W x H x D (mm)	117×97×90	Operating temperature	0～60°C
Weight	586g	Storage temperature	-40～70°C
Relative humidity	5%~95% (non-condensing)		

3.7.2 Terminal Definition and Connection

LE5107L is connected with an external 220VAC power and has two pluggable terminals (11x2 and 9x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and wiring is easy and convenient and is secured with screw, which is a typical field connection case.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

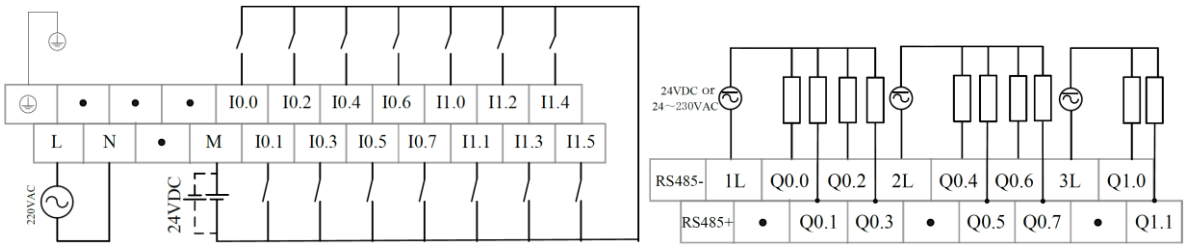


Figure 3-22 Upper Terminals Definition and Wring Diagram Lower Terminals Definition and Wring Diagram

Table 3-17 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	L	Fire wire
●	No connection	N	Null wire
●	No connection	●	No connection
●	No connection	M	Common of Input
I0.0	Fast external interruption 1/ Pulse catch 1/ single-phase counter 1/ A/B phase counter phase A / Ordinary input	I0.1	Fast external interruption 2/ pulse catch 2/ single-phase counter 2/ Ordinary input
I0.2	Single-phase counter 1 reset/Ordinary input	I0.3	Single-phase counter 2 reset/Ordinary input
I0.4	A/B phase counter Phase B /Single-phase counter 1 direction control /Ordinary input	I0.5	Single-phase counter 2 direction control /Ordinary input
I0.6	Ordinary input	I0.7	Ordinary input
I1.0	Ordinary input	I1.1	Ordinary input
I1.2	Ordinary input	I1.3	Ordinary input
I1.4	Ordinary input	I1.5	Ordinary input
Terminal Identification	**Description**	**Terminal Identification**	**Description**
RS485-	RS485 Communication negative	RS485+	RS485 Communication positive
1L	Common of Output (Q0.0～Q0.3)	●	No connection
Q0.0	Ordinary output	Q0.1	Ordinary output
Q0.2	Ordinary output	Q0.3	Ordinary output
2L	Common of Output （Q0.4～Q0.7）	●	No connection

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
Q0.4	Ordinary output	Q0.5	Ordinary output
Q0.6	Ordinary output	Q0.7	Ordinary output
3L	Common of Output (Q1.0～Q1.1)	•	No connection
Q1.0	Ordinary output	Q1.1	Ordinary output

3.7.3 Electrical Schematic Diagram

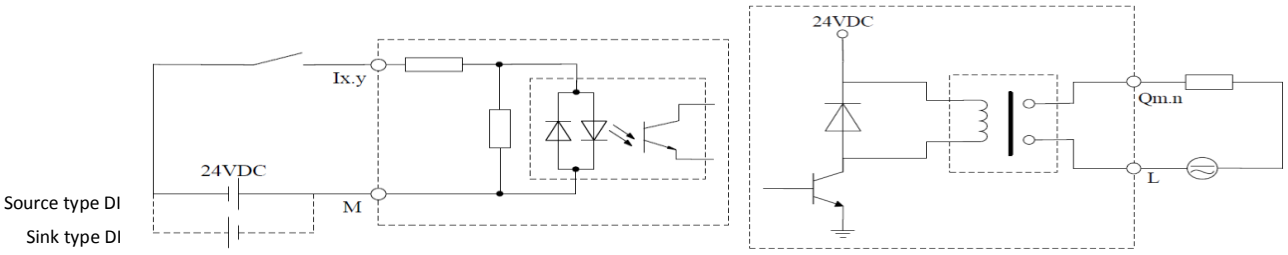


Figure 3-23 Electrical Schematic Diagram of Input **Electrical Schematic Diagram of Output**

3.8 LE5108 24 DI/ 16 DO CPU Module

LE5108 is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection; equipped with 24 DI and16 DO. It is a CPU Module with relatively strong control capability.

3.8.1 Technical Specifications

Table 3-18 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	24 DI/ 16 DO	Input	Rated voltage	24VDC
I/O expansion module (max.)	20 (total module power consumption ≤ CPU rating)		Permissible range	20.4～28.8VDC

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications		
Number of expansion board	1		Current consumption (max.)	2200mA@24VDC
Programming	LD/ST/CFC/SFC	External output voltage		24VDC
Program memory	256K bytes	External output current (max.)	+24VDC (supply for expansion bus)	950mA
Data memory	64K bytes		+24VDC(supply for peripheral device)	400mA
Power-loss retentive memory	8K bytes		+5VDC (supply for expansion bus)	2500mA
Memory card	Memory card with USB interface	Hold up time (loss of power)		10ms
HSC	8 HSC at 200KHz for single phase（Ix0.0~Ix0.7）	Output Specifications		
	4 HSC at 100KHz for A/B phase（Ix0.0~Ix0.7）	Number of outputs	16	
Pulse output (max.)	4, 100KHz（Qx0.0~Qx0.3）	Output type	Transistor	
Pulse catch	8（Ix0.0~Ix0.7）	Rated voltage	24VDC	
Fast external	6（Ix0.0~Ix0.5）	Permissible	20.4～28.8VDC	
Frequency measurement	8（Ix0.0~Ix0.3）	Output current	Max. 500mA for PTO channel; max. 1A for ordinary channel	
Basic instruction	0.1μs	Current per common (max.)	2A max. for PTO channel; 4A max. for ordinary channel	
Input Specifications		Residual voltage	＜0.5V (output logic 1 at current 1A)	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Number of inputs	24	On state resistance	0.3Ω (typical), 0.6Ω (max.)
Input type	Sink/source	Isolation mode	Optocoupler (field side to system)
Rated voltage	24VDC	Isolation	4
Permissible range	0～30VDC	Isolation withstand	500VAC for 1 minute, leakage current <5mA
Logic 1 signal	15~30VDC, permissible min. current 3mA	Communication Specifications	
Logic 0 signal	0~5VDC, permissible max. current 1mA	Communication interface	2 RS485
Filtering parameter	Ix0.0~Ix0.7: No filtering, 5μs, 10μs, 20μs,100μs, 200μs, 1ms, 5ms, 10ms, 20ms, 50ms, 100ms, see Note③ Ix1.0~Ix2.7: No filtering, 5ms, 10ms, 20ms, 50ms, 100ms	Interface type	PS/2, pluggable terminals
		Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Isolation mode	Optocoupler (field side to system)		
Isolation groups	1	Communication protocol	Proprietary protocol, Modbus master-slave, free port communication protocol, multi-PLC interconnection (only for terminal interface)
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA		

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Physical Specifications			
Dimensions W x H x D	147×97×90	Operating temperature	0～60°C
Weight	725g	Storage temperature	-40～70°C
Relative humidity	5%~95% (non-condensing)		

Note ③: The filtering of 5μs, 10μs, 20μs, 100μs, 200μs, 1ms are effective for motion control instruction; the filtering of 5ms, 10ms, 20ms, 50ms, 100ms are invalid for motion control instruction.

3.8.2 Terminal Definition and Connection

LE5108 is connected with an external 24VDC power and has two pluggable terminals (16x2 and 13x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and connection is easy and convenient and is secured with screw, which is a typical field connection case.

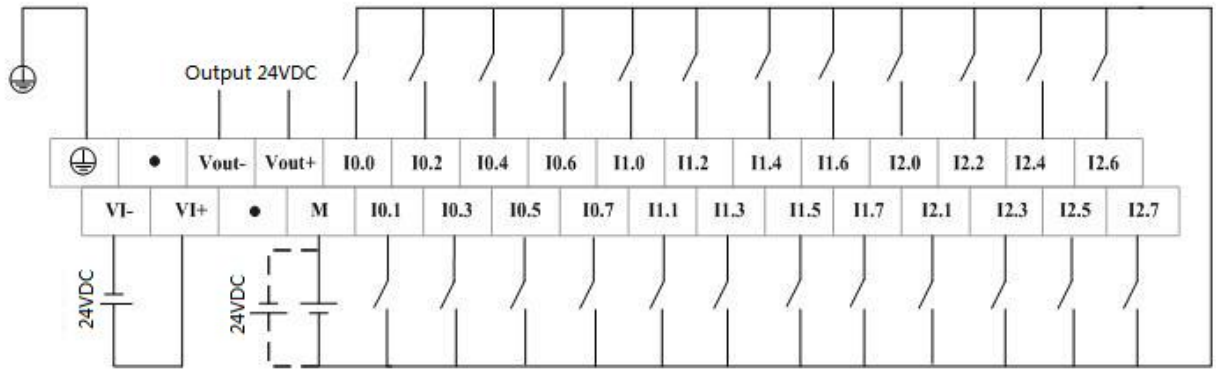


Figure 3-24 Upper Terminal Definition and Wiring

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

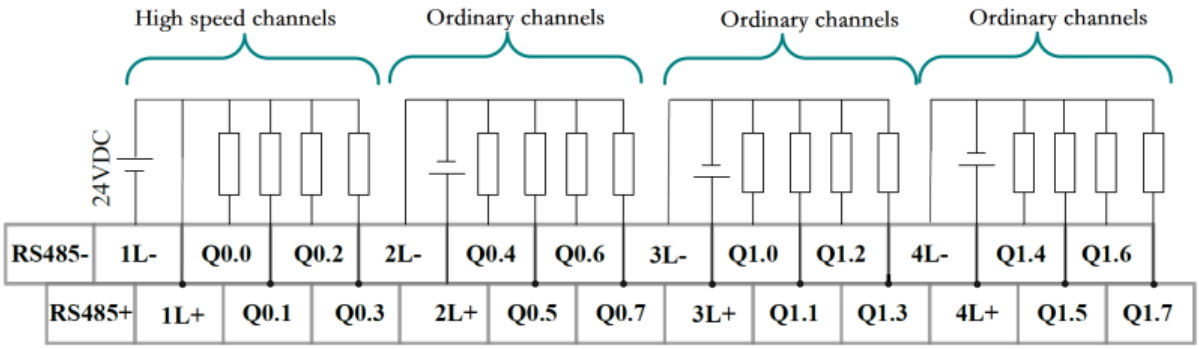


Figure 3-25 Lower Terminal Definition and Wiring

- Wiring description

  High-speed channel output mode for the open set; ordinary channel output mode for the high-side drive, wiring as shown in Figure 3-25.

Figure 3-26 wiring diagrams include two schematic diagrams of connection of high-speed output terminal and motor, the external resistance in the schematic diagrams is for example only. In actual applications, users must calculate external resistance according to their selected permissible current on input side of driver and internal resistance.

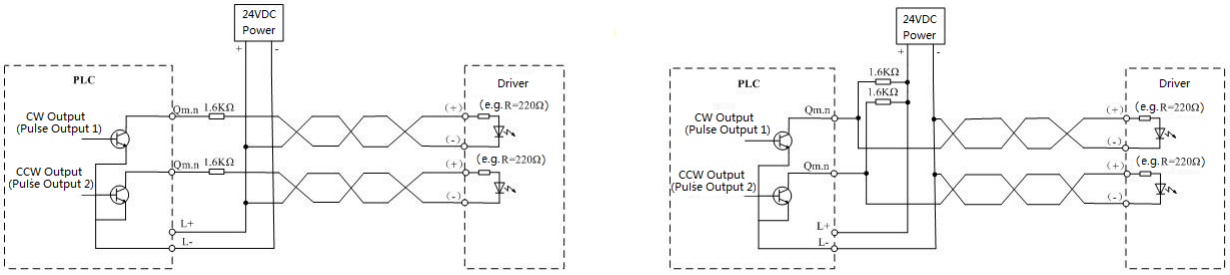


Figure 3-26 CW/CCW Mode Wiring Diagram

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

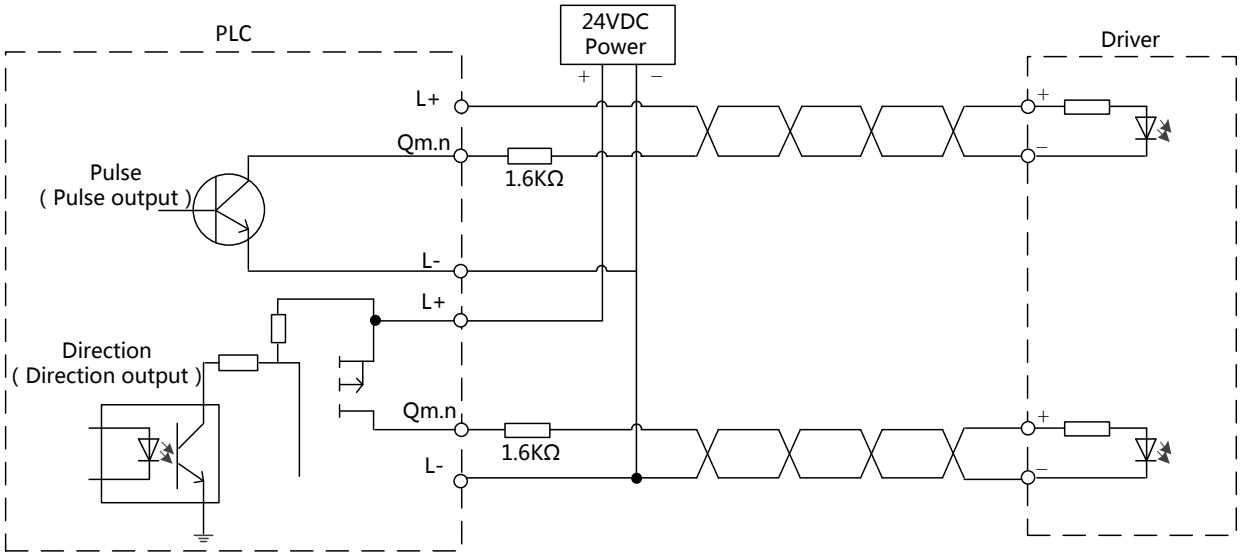


Figure 3-27 Pulse + Direction Mode Wiring Diagram

Description:

CW / CCW mode:

1: Output axis 1, pulse output (CW) Q0.0, pulse output (CCW) Q0.1

2: Output axis 2, pulse output (CW) Q0.2, pulse output (CCW) Q0.3

Pulse + direction mode:

1: Output axis 1, pulse output Q0.0, pulse direction Q0.4

2: Output axis 2, pulse output Q0.1, pulse direction Q0.5

3: Output axis 3, pulse output Q0.2, pulse direction Q0.6

4: Output axis 4, pulse output Q0.3, pulse direction Q0.7

Table 3-19 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	VI-	Input power supply 24VDC negative
●	No connection	VI+	Input power supply 24VDC positive

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of input
I0.0	Fast external interruption 1/ Pulse catch 1/ Frequency measurement channel 1/single-phase counter 1/ A/B phase counter1 phase A / Ordinary input	I0.1	Fast external interruption 2/ Pulse catch 2/ Frequency measurement channel 2/single-phase counter 2/ A/B phase counter1 Phase B/ Ordinary input
I0.2	Fast external interruption 3/ Pulse catch 3/ Frequency measurement channel 3/ single-phase counter 3/ A/B phase counter 2 phase A / Ordinary input	I0.3	Fast external interruption 4/ Pulse catch 4/ Frequency measurement channel 4/ single-phase counter 4/ A/B phase counter 2 phase B / Ordinary input
I0.4	Single-phase counter 1 direction control / Ordinary input	I0.5	Single-phase counter 2 direction control/ Ordinary input
I0.6	Single-phase counter 3 direction control / Ordinary input	I0.7	Single-phase counter 4 direction control/ Ordinary input
I1.0	Single-phase counter 1 reset/ A/B phase counter 1 reset/Ordinary input	I1.1	Single-phase counter 2 reset/ Ordinary input
I1.2	Single-phase counter 3 reset / A/B phase counter 2 reset / Ordinary input	I1.3	Single-phase counter 4 reset/ Ordinary input
I1.4	Fast external interruption 5/ Pulse catch 5/ Frequency measurement channel 5/ single-phase counter 5/ A/B phase counter 3 phase A / Ordinary input	I1.5	Fast external interruption 6/ Pulse catch6/ Frequency measurement channel 6/ single-phase counter 6/ A/B phase counter 3 phase B / Ordinary input
I1.6	Pulse catch 7/ Frequency measurement channel 7/ single-phase counter 7/ A/B phase counter 4 phase A / Ordinary input	I1.7	Pulse catch8/ Frequency measurement channel 8/ single-phase counter 8/ A/B phase counter 4 phase B / Ordinary input
I2.0	Single-phase counter 5 direction control/ Ordinary input	I2.1	Single-phase counter 6 direction control/ Ordinary input
I2.2	Single-phase counter 7 direction control/ Ordinary input	I2.3	Single-phase counter 8 direction control/ Ordinary input

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
I2.4	Single-phase counter 5 reset/ A/B phase counter 3 reset/ Ordinary input	I2.5	Single-phase counter 6 reset/ Ordinary input
I2.6	Single-phase counter 7 reset/ A/B phase counter 4 reset/ Ordinary input	I2.7	Single-phase counter 8 reset/ Ordinary input
Terminal Identification	Description	Terminal Identification	Description
RS485-	RS485 Communication	RS485+	RS485 Communication
1L-	Load driving power supply 1 negative（Q0.0～Q0.3）	1L+	Load driving power supply 1 positive（Q0.0～Q0.3）
Q0.0	High-speed output / Ordinary output	Q0.1	High-speed output / Ordinary output
Q0.2	High-speed output / Ordinary output	Q0.3	High-speed output / Ordinary output
2L-	Load driving power supply 2 negative（Q0.4～Q0.7）	2L+	Load driving power supply 2 positive（Q0.4～Q0.7）
Q0.4	Ordinary output	Q0.5	Ordinary output
Q0.6	Ordinary output	Q0.7	Ordinary output
3L-	Load driving power supply 3 negative（Q1.0～Q1.3）	3L+	Load driving power supply 3 positive（Q1.0～Q1.3）
Q1.0	Ordinary output	Q1.1	Ordinary output
Q1.2	Ordinary output	Q1.3	Ordinary output
4L-	Load driving power supply 4 negative（Q1.4～Q1.7）	4L+	Load driving power supply 4 positive（Q1.4～Q1.7）
Q1.4	Ordinary output	Q1.5	Ordinary output
Q1.6	Ordinary output	Q1.7	Ordinary output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.8.3 Electrical Schematic Diagram

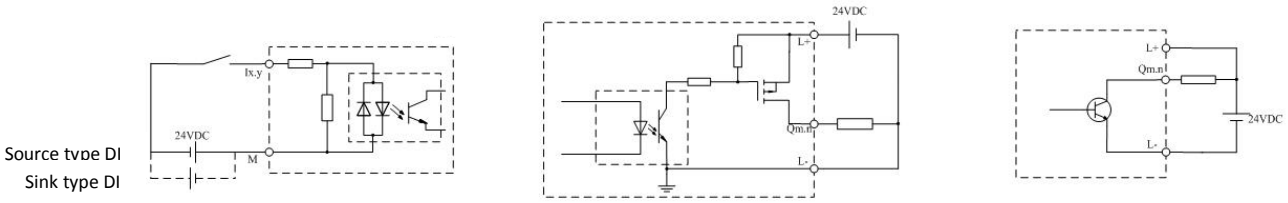


Figure 3-28 Input Channel Ordinary Output Channel High-speed Output Channel

3.9 LE5109 24DI/ 16 DO CPU Module

LE5109 is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection; equipped with 24 DI and16 DO. It is a CPU Module with relatively strong control capability.

3.9.1 Technical Specifications

Table 3-20 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	24 DI / 16 DO	Input	Rated voltage	220VAC
			Permissible range	85~264VAC（50/60Hz）
I/O expansion module (max.)	20 (total modules power consumption ≤ CPU rating)		Current consumption (max.)	250mA@220VAC
Number of expansion board	1	External output voltage	24VDC	
Programming language	LD/ST/CFC/SFC	External output current (max.)	+24VDC (supply for expansion bus)	950mA
Program memory	256K bytes		+24VDC (supply for peripheral device)	400mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications		
Data memory	64K bytes		+5VDC (supply for expansion bus)	2500mA
Power-loss retentive memory	8K bytes	Hold up time (loss of power)		80ms
Memory card	Memory card with USB interface	Output Specifications		
HSC	8 HSC at 200KHz for single phase	Number of outputs	16	
	4 HSC at 100KHz for A/B phase	Output type	Relay	
Pulse catch	8	Rated voltage	24VDC or 24～230VAC	
Fast external interruption	6	Permissible range	5～30VDC or 5～250VAC	
Basic instruction processing time	0.1μs	Output current	2A (resistance load)	
Input Specifications		Rated current per common (max.)	＜8A	
Number of inputs	24	ON state resistance	0.2Ω (max.)	
Input type	Sink/source	Switching frequency (max.)	1Hz	
Rated voltage	24VDC	Lifetime mechanical	No load: up to 10,000,000 open/close cycles	
Permissible range	0～30VDC		Rated resistance 2A load: up to 100,000 open/close cycles	
Logic 1 signal	15~30VDC, permissible min. current 3mA	Isolation mode	Relay isolation (field side to system)	
Logic 0 signal	0~5VDC, permissible max. 1mA	Isolation groups	4	
Filtering parameter	No filtering, 5μs, 10μs, 20μs, 100μs, 200μs, 1ms, 5ms, 10ms, 20ms, 50ms, 100ms	Isolation withstand voltage	2500VAC for 1minute, leakage current <5mA	
		Communication Specifications		
Isolation mode	Optocoupler (field side to system)	Communication interface	2 RS485	
Isolation groups	1	Interface type	PS/2, pluggable terminals	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
		Communication protocol	Proprietary protocol, Modbus master-slave, free port communication protocol,multi-PLC interconnection(only for terminal connecting)
Physical Specifications			
Dimensions W x H x D (mm)	147×97×90	Operating temperature	0～60°C
Weight	875g	Storage temperature	-40～70°C
Relative humidity	5%~95% (non-condensing)		

3.9.2 Terminal Definition and Wiring

LE5109 is connected with an external 220V AC power and has two pluggable terminals (16x2 and 13x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and connection is easy and convenient and is secured with screw, which is a typical field connection case.

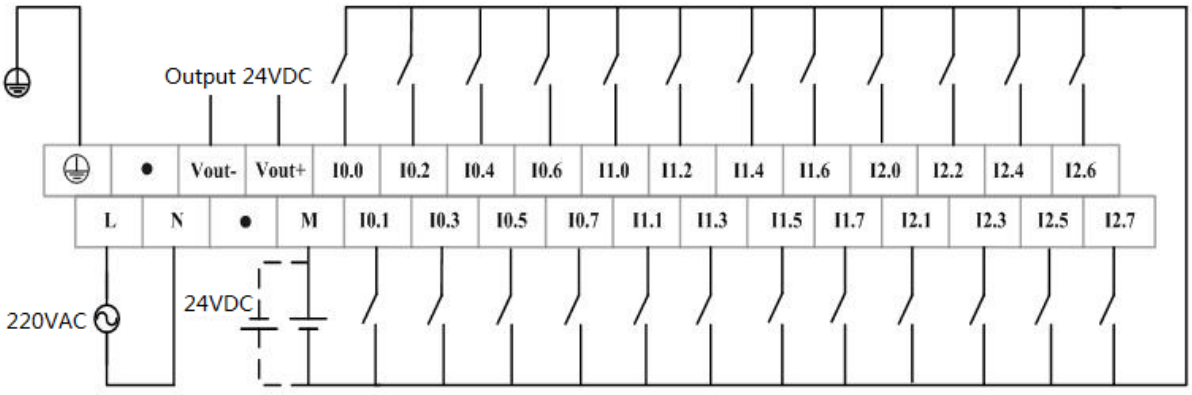


Figure 3-29 LE5109 Upper Terminals Definition and Wring Diagram

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

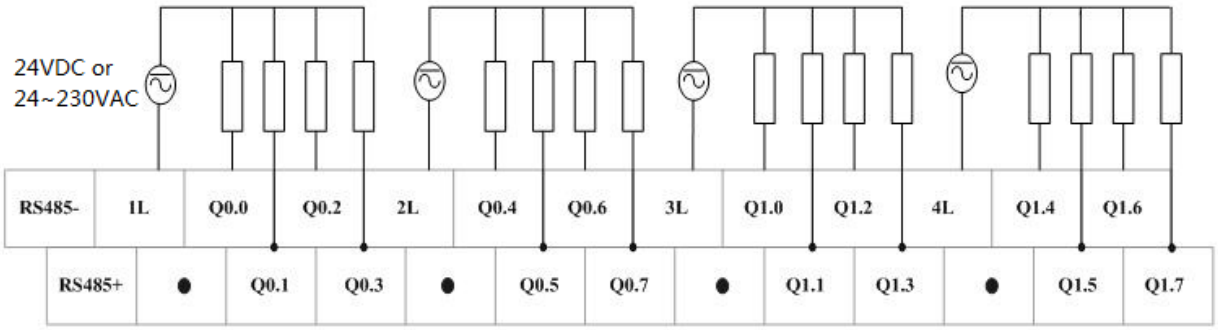


Figure 3-30 LE5109 Lower Terminals Definition and Wring Diagram

Table 3-21 Terminal Identification

LE5109 Upper Terminals Definition

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	L	Fire wire
●	No connection	N	Null wire
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of Input
I0.0	Fast external interruption 1/ Pulse catch 1/frequency measurement 1/single-phase counter 1/ A/B phase counter 1 phase A / Ordinary input	I0.1	Fast external interruption 2/ Pulse catch 2/frequency measurement 2/single-phase counter 2/ A/B phase counter 1 phase B / Ordinary input
I0.2	Fast external interruption 3/ Pulse catch 3/frequency measurement 3/Single-phase counter 3/ A/B phase counter phase A / Ordinary input	I0.3	Fast external interruption 4/ Pulse catch 4/frequency measurement 4/single-phase counter 4/ A/B phase counter 2 phase B / Ordinary input
I0.4	Single-phase counter 1 direction control /Ordinary input	I0.5	Single-phase counter 2 direction control /Ordinary input
I0.6	Single-phase counter 3 direction control /Ordinary input	I0.7	Single-phase counter 4 direction control /Ordinary input
I1.0	Single-phase counter 1 reset/ A/B phase counter 1 reset/Ordinary input	I1.1	Single-phase counter 2 reset/Ordinary input
I1.2	Single-phase counter 3 reset/ A/B phase counter 2 reset/Ordinary input	I1.3	Single-phase counter 4 reset/Ordinary input
I1.4	Fast external interruption 5/ Pulse	I1.5	Fast external interruption 6/

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
	catch 5/frequency measurement 5/single-phase counter 5/ A/B phase counter 3 phase A /Ordinary input		Pulse catch 6/frequency measurement 6/single-phase counter 6/ A/B phase counter 3 phase B /Ordinary input
I1.6	Pulse catch 7/frequency measurement 7/single-phase counter 7/ A/B phase counter 4 phase A /Ordinary input	I1.7	Pulse catch 8/frequency measurement 8/single-phase counter 8/ A/B phase counter 4 phase B/Ordinary input
I2.0	Single-phase counter 5 direction control /Ordinary input	I2.1	Single-phase counter 6 direction control /Ordinary input
I2.2	Single-phase counter 7 direction control /Ordinary input	I2.3	Single-phase counter 8 direction control /Ordinary input
I2.4	Single-phase counter 5 reset/ A/B phase counter 3 reset/Ordinary input	I2.5	Single-phase counter 6 reset /Ordinary input
I2.6	Single-phase counter 7 reset/ A/B phase counter 4 reset/Ordinary input	I2.7	Single-phase counter 8 reset/ /Ordinary input
Terminal Identification	Description	Terminal Identification	Description
RS485-	negative(RS485-)	RS485+	positive (RS485-)
1L	Common of Output (Q0.0～Q0.3)	●	No connection
Q0.0	Ordinary output	Q0.1	Ordinary output
Q0.2	Ordinary output	Q0.3	Ordinary output
2L	Common of Output（Q0.4～Q0.7）	●	No connection
Q0.4	Ordinary output	Q0.5	Ordinary output
Q0.6	Ordinary output	Q0.7	Ordinary output
3L	Common of Output (Q1.0 ～ Q1.3)	●	No connection
Q1.0	Ordinary output	Q1.1	Ordinary output
Q1.2	Ordinary output	Q1.3	Ordinary output
4L	Common of Output (Q1.4 ～ Q1.7)	●	No connection
Q1.4	Ordinary output	Q1.5	Ordinary output
Q1.6	Ordinary output	Q1.7	Ordinary output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.9.3 Electrical Schematic Diagram

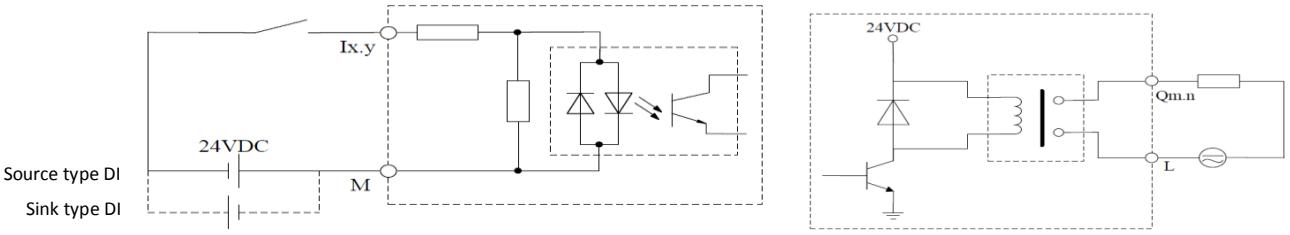


Figure 3-31 Electrical Schematic Diagram of Input Electrical Schematic Diagram of Output

3.10 LE5109L 24DI/ 16 DO CPU Module

LE5109L is a CPU module of LE Series micro PLC which can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection; equipped with 24 DI and16 DO.

3.10.1 Technical Specifications

Table 3-22 Technical Specifications

CPU Specifications		**Power Supply Specifications**		
On-board I/O	24 DI / 16 DO	Input	Rated voltage	220VAC@250mA
I/O expansion module (max.)	7 (total modules power consumption ≤ CPU rating)		Permissible range	85~265VAC（50/60Hz）
Number of expansion board	1	External output voltage	Rated voltage	Not supported
Programming language	LD/ST/CFC/SFC		Permissible range	Not supported
Program memory	128K bytes	External output current (max.)	+24VDC (supply for expansion bus)	400mA
Data memory	10496 bytes		+5VDC (supply for expansion bus)	1000mA
Power-loss retentive memory	2K bytes	Hold up time (loss of power)		10ms

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Memory card	Memory card with USB interface	Communication Specifications	
HSC	2 HSC at 5KHz for single phase	Communication interface	2 RS485
	1 HSC at 20KHz for A/B phase	Interface type	PS/2, pluggable terminals
Pulse catch	2	Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Fast external interruption	2		
Frequency measurement	Not supported	Communication protocol	Proprietary protocol, Modbus master-slave, free port communication protocol,multi-PLC interconnection(only for terminal connecting)
Basic instruction processing time	0.1μs		
Input Specifications		Output Specifications	
Number of inputs	24	Number of outputs	16
Input type	Sink/source	Output type	Relay
Rated voltage	24VDC	Rated voltage	24VDC or 24～230VAC
Permissible range	0～30VDC	Permissible range	5～30VDC or 5～250VAC
Logic 1 signal	15~30VDC, permissible min. current 4mA	Output current	2A (resistance load)
Logic 0 signal	0~5VDC, permissible max. 1mA	Rated current per common (max.)	＜8A
Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, 100ms	ON state resistance	0.2Ω (max.)
Isolation mode	Optocoupler (field side to system)	Switching frequency (max.)	1Hz
Isolation groups	1	Lifetime mechanical	No load: up to 10,000,000 open/close cycles
Isolation withstand voltage	500VAC for 1minute, leakage current <5mA		
Physical Specifications			Rated resistance 2A load: up to 100,000 open/close cycles
Dimensions W x H x D (mm)	147×97×90	Isolation mode	Relay isolation (field side to system)
Weight	700g	Isolation groups	4
Operating temperature	0～60°C		
Storage temperature	-40～70°C	Isolation withstand	1500VAC for 1minute, leakage current

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Relative humidity	5%~95% (non-condensing)	voltage	<5mA

3.10.2 Terminal Definition and Wiring

LE5109L is connected with an external 220 VAC power and has two pluggable terminals (16x2 and 13x2), the upper terminal offers digital input channel (DI), the lower terminal offers digital output channel (DO), and connection is easy and convenient and is secured with screw, which is a typical field connection case.

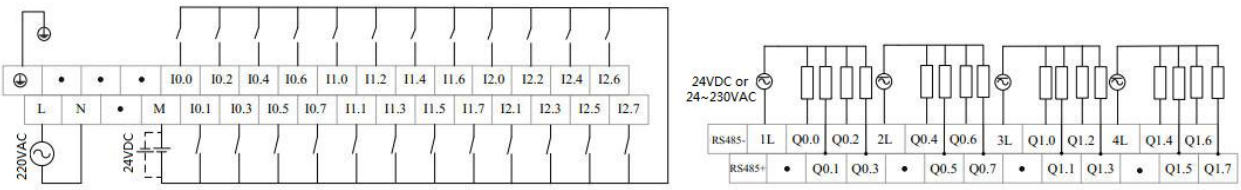


Figure 3-32 Upper Terminals Definition and Wring Diagram Lower Terminals Definition and Wring Diagram

Table 3-23 Terminal Identification

LE5109 Upper Terminals Definition

Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	L	Fire wire	RS485-	Negative(RS485-)	RS485+	Positive (RS485+)
•	No connection	N	Null line	1L	Common of Output (Q0.0～Q0.3)	•	No connection
•	No connection	•	No connection	Q0.0	Ordinary output	Q0.1	Ordinary output
•	No connection	M	Common of Input	Q0.2	Ordinary output	Q0.3	Ordinary output
I0.0	Fast external interruption 1/ Pulse catch 1/single-phase counter 1/	I0.1	Fast external interruption 2/ Pulse catch 2/single-phase counter 2/	2L	Common of Output （ Q0.4 ～ Q0.7）	•	No connection

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description	Terminal Identification	Description
	A/B phase counter phase A / Ordinary input		Ordinary input				
I0.2	Single-phase counter 1 reset/Ordinary input	I0.3	Single-phase counter 2 reset/Ordinary input	Q0.4	Ordinary output	Q0.5	Ordinary output
I0.4	A/B phase counter phase B / Single-phase counter 1 direction control / Ordinary input	I0.5	Single-phase counter 2 direction control / Ordinary input	Q0.6	Ordinary output	Q0.7	Ordinary output
I0.6	Ordinary input	I0.7	Ordinary input	3L	Common of Output (Q1.0～Q1.3)	●	No connection
I1.0	Ordinary input	I1.1	Ordinary input	Q1.0	Ordinary output	Q1.1	Ordinary output
I1.2	Ordinary input	I1.3	Ordinary input	Q1.2	Ordinary output	Q1.3	Ordinary output
I1.4	Ordinary input	I1.5	Ordinary input	4L	Common of Output (Q1.4～Q1.7)	●	No connection
I1.6	Ordinary input	I1.7	Ordinary input	Q1.4	Ordinary output	Q1.5	Ordinary output
I2.0	Ordinary input	I2.1	Ordinary input	Q1.6	Ordinary output	Q1.7	Ordinary output
I2.2	Ordinary input	I2.3	Ordinary input	—	—	—	—
I2.4	Ordinary input	I2.5	Ordinary input	—	—	—	—
I2.6	Ordinary input	I2.7	Ordinary input	—	—	—	—

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Only one can be chosen among pulse capture, high-speed counting and quick external interrupt. Please be cautious about filtering parameter of channel when using high-speed counting and quick external interrupt.

3.10.3 Electrical Schematic Diagram


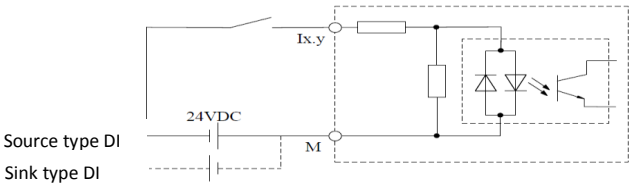


Figure 3-33 Electrical Schematic Diagram of LE5109L Input

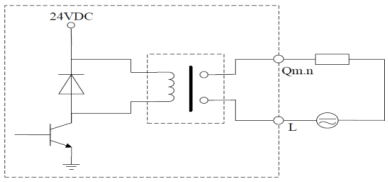

Electrical Schematic Diagram of LE5109L Output

3.11 LE5128 Special CPU Module for Motion Control

LE5128 is dedicated motion control module in micro PLC in LE series. It has the functions of data latching, rapid locating, automatically arrange-line, electronic gear and periodically fast PID adjustment. It can independently control 4 servo motors or stepper motors to locate with 16 DI, 10 DO, 2 AI and 4 AO.

3.11.1 Technical Specifications

Table 3-24 Technical Specifications

CPU Specifications		Power Supply Specifications		
On-board I/O	16 DI/ 10 DO/ 2 AI / 4 AO	Input	Rated voltage	24VDC@2200 mA
I/O expansion module (max.)	5(total module power consumption ⩽ CPU rating).		Permissible range	20.4～28.8VDC
Number of expansion board	1	External output voltage		24VDC

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications		
Programming language	LD/ST/CFC/SFC	External output current (max.)	+24VDC (supply for expansion bus)	950mA
Program memory	128K bytes		+24VDC (supply for peripheral device)	400mA
Data memory	64K bytes		+5VDC (supply for extensive bus)	2500mA
Power-loss retentive memory	8K bytes	Hold up time (loss of power)		10ms
Memory card	Memory card with USB interface	Communication Specifications		
HSC	4 HSC at 100KHz (Ix0.0~Ix0.3 for single-phase counter (Ix0.0~Ix0.3)	Communication interface	2 RS485	
		Interface type	PS/2, pluggable terminals	
	2 HSC at 400KHz (Ix0.0~Ix0.3 after four multiplying frequency) for A/B phase counter	Baud rates (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200	
Pulse output	4CH, 100KHz(Qx0.0~Qx0.3)			
Pulse catch	4(Ix0.0~Ix0.3)	Communication protocol	Proprietary protocol (only for round port), Modbus master-slave, free port communication protocol, multi-PLC interconnection (only for terminal interface)	
Fast external interruption	6(Ix0.0~Ix0.5)			
Frequency measurement	4(10Hz~100KHz)(Ix0.0~Ix0.3)	Digital Output Specifications		
Basic instruction processing time	0.1μs	Number of outputs	10 (4 high-speed Qx0.0~Qx0.3, 6 low-speed Qx0.4~Qx1.1)	
Digital Input Specifications		Output type	Transistor	
Number of inputs	16	Rated voltage	24VDC	
Input type	Sink/source	Permissible range	20.4～28.8VDC	
Rated voltage	24VDC	Output current	Max. 0.3A for PTO channel; max. 0.5A for ordinary channel	
Permissible range	0～30VDC	Current per common	<3A	
Logic 1	15～30VDC, permissible	On state	0.3Ω (typical), 0.6Ω (max.)	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
signal	min. current 3mA	resistance	
Logic 0 signal	0 ～ 5VDC, permissible max. current 1mA	Isolation mode	Optocoupler (field side to system)
Filtering parameter	Ix0.0~Ix0.3 No filtering , 5us, 10us, 20us, 100us, 200us, 1ms, 5ms, 10ms, 20ms, 50ms, 100ms;Ix0.4~Ix1.7:No filtering, 5ms, 10ms, 20ms, 50ms, 100ms	Isolation groups	3
		Isolation withstand voltage	500VAC for 1 minute, leaking current <5mA
Isolation mode	Optocoupler (field side to system)	Analog Output Specifications	
Isolation groups	1	Number of outputs	4
Isolation withstand voltage	500VAC for 1minute, leakage current <5mA		
Analog Input Specifications		Output range	Channel 1, 2:0～10V
Number of inputs	2		Channel 3, 4:0～10V/0～20mA/4～20mA
Input type	Single-ended	Range of corresponding code value	0～65535
Input range	0 ～ 10V/0 ～ 20mA/4 ～ 20mA	Output accuracy	Full scale 0.5%@0~60℃
Range of corresponding code value	0～65535	Resolution	12bits
Input accuracy	Full scale 0.5% @0～60℃	Load impedance	voltage: ≥2000Ω/ current:≤ 600Ω
Resolution	12 bits	Stable time (95% of new value)	Voltage:300us(R),750us(1uF)current:600us(1mH), 2ms(10mH)
Differential mode rejection ratio	>30dB		
Time for data update	2ms (full-channel)	Isolation mode	Magnetic coupling (field side to system)
Input impedance	voltage type: >950KΩ	Isolation withstand voltage	500VAC for 1 minute, leaking current <5mA
	Current type: 250Ω	Physical Specifications	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications		Power Supply Specifications	
Maximum withstand voltage	±30V	Dimensions W x H x D (mm)	147×97×90
Maximum withstand current	±32mA	Weight	571g
Time for step response of analog input	1.5ms (up to 95%)	Operating temperature	0～60°C
Isolation mode	Magnetic coupling (field side to system)	Storage temperature	-40～70°C
Isolation withstand voltage	500VAC for 1 minute, leaking current <5mA	Relative humidity	5%~95% (non-condensing)

3.11.2 Definition of Indicators

Table 3-25 Definition of Indicators

Type	Color	Status		Description
Power supply PWR	Green	ON		Power supply works in normal mode.
		OFF		Power is defective or not supplied.
Channel status indicator Ix.y Qm.n	Green	ON		The channel is ON.
		OFF		The channel is OFF.
Operation status indicator RUN/STOP	Green Yellow	Green		PLC is in RUN mode and user program is running.
		ON yellow		PLC is in STOP mode and user program is not running.
		Flashing alternatively	1Hz	PLC is in a status which waits to load user program from memory card.
			4Hz	PLC is in a status of loading user program from memory card.
Failure status indicator ERR	Red	ON		The CPU is in failed mode.
		OFF		PLC is in normal operating mode.

- Possibility and solutions if ERR indicator is ON:
  - System configuration of programming software is inconsistent with actual hardware configuration.

    Solutions: check system configuration in programming software.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- ☐ Communication with expansion module is failed.

  Solutions: check whether the expansion module is connected correctly.

- ☐ Report faults occurring to each expansion module.

  Solutions: replace faulty expansion module.

Terminal Definition and Connection

LE5128 is connected with an external 24VDC power and has two pluggable terminals (16×2 and 13×2), the upper terminal offers input channel (DI, AI), the lower terminal offers output channel (DO, AO), and connection is easy and convenient and terminals are secured with screw, which is a typical field connection case.

Table 3-26 Terminal Identification

Terminal Identification	Description	Terminal Identification	Description
⏚	Grounding	VI-	Input power supply 24VDC negative
●	No connection	VI+	Input power supply 24VDC positive
Vout-	Output 24VDC negative	●	No connection
Vout+	Output 24VDC positive	M	Common of Input
I0.0	Fast external interruption 1/Pulse catch 1/Frequency measurement channel 1/High-speed single-phase counter 1/High-speed A/B phase counter I phase A/Ordinary input	I0.1	Fast external interruption 2 /Pulse catch 2 /Frequency measurement channel 2 / High-speed single-phase counter 2/ High-speed A/B phase counter 1 phase B /Ordinary input
I0.2	Fast external interruption 3/Pulse catch 3/Frequency measurement channel 3/High-speed single-phase counter 3/High-speed A/B phase counter 2 phase A /Ordinary input	I0.3	Fast external interruption 4 /Pulse catch 4 /Frequency measurement channel 4 /High-speed single-phase counter 4 /High-speed A/B phase counter 2 phase B /Ordinary input
I0.4	Fast external interruption 5/High-speed single-phase counter 1 direction control/Ordinary input	I0.5	Fast external interruption 6/High-speed single-phase counter 2 direction control /Ordinary input
I0.6	High-speed single-phase counter 3 direction control /Ordinary input	I0.7	High-speed single-phase counter 4 direction control /Ordinary input

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Terminal Identification	Description	Terminal Identification	Description
I1.0	Ordinary input	I1.1	Ordinary input
I1.2	Ordinary input	I1.3	Ordinary input
I1.4	Ordinary input	I1.5	Ordinary input
I1.6	Ordinary input	I1.7	Ordinary input
A+	A channel voltage input positive	A-	A channel input negative
RA	A channel current input positive	●	No connection
RB	B channel current input positive	B-	B channel input negative
B+	B channel voltage input positive	●	No connection
Terminal Identification	Description	Terminal Identification	Description
RS485-	RS485 Communication negative	RS485+	RS485 Communication positive
1L-	Load driving power source 1 negative (Q0.0～Q0.3)	1L+	Load driving power source 1 positive (Q0.0～Q0.3)
Q0.0	High-speed output / Ordinary output	Q0.1	High-speed output /Ordinary output
Q0.2	High-speed output /Ordinary output	Q0.3	High-speed output /Ordinary output
2L-	Load driving power source 2 negative (Q0.4-0.7)	2L+	Load driving power source 2 positive (Q0.4-0.7)
Q0.4	Ordinary output	Q0.5	Ordinary output
Q0.6	Ordinary output	Q0.7	Ordinary output
3L-	Load driving power source 3 negative (Q1.0~1.1)	3L-	Load driving power source 3 negative (Q1.0~1.1)
Q1.0	Ordinary output	Q1.1	Ordinary output
COM	Analog output common	●	No connection
Vout0	Analog voltage output	Vout1	Analog voltage output
Vout2	Analog voltage output	Iout2	Analog current output
Vout3	Analog voltage output	Iout3	Analog current output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

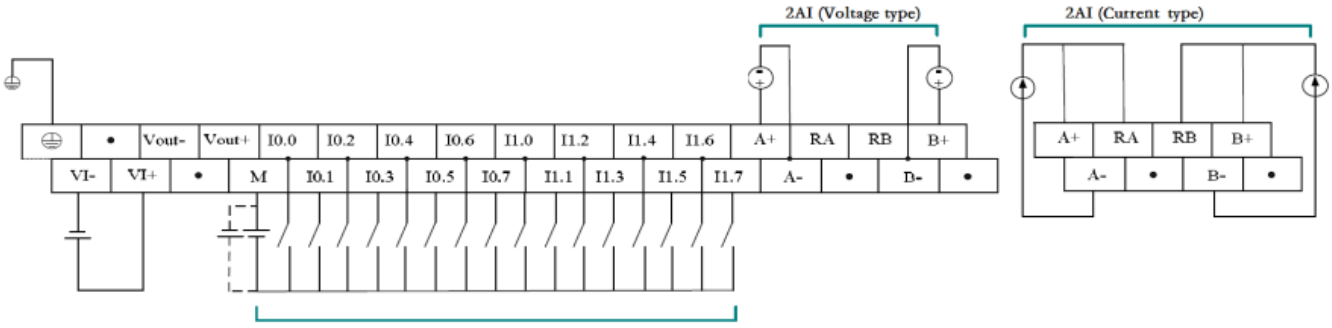


Figure 3-34 LE5128 Upper Terminals Definition and Wring Diagram

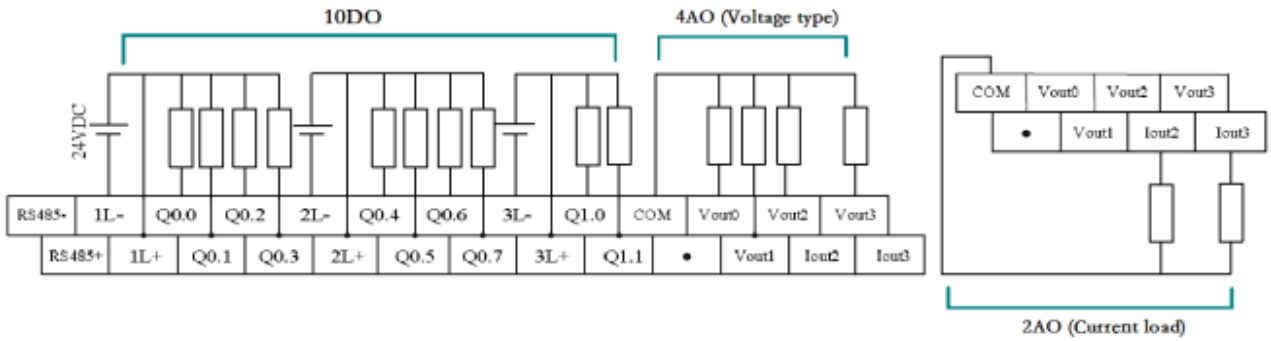


Figure 3-35 LE5128 Lower Terminals Definition and Wring Diagram

Figure 3-36 wiring diagrams include two schematic diagrams of connection of high-speed output terminal and motor, the external resistance in the schematic diagrams is for example only. In actual applications, users must calculate external resistance according to their selected permissible current on input side of driver and internal resistance.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

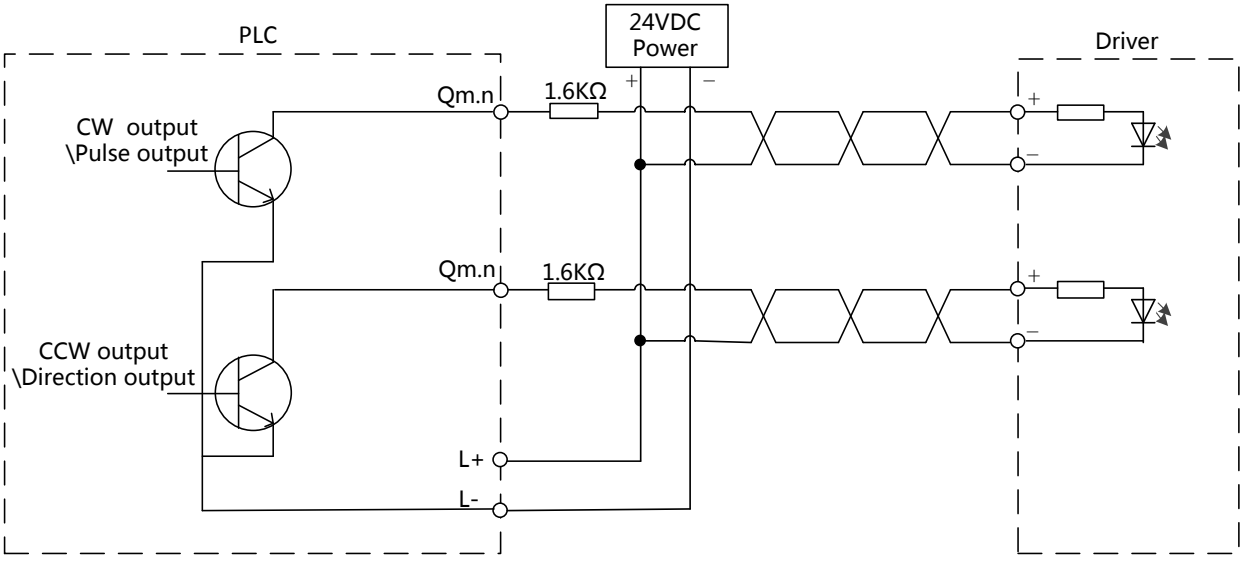


Figure 3-36 Wiring Diagram of High-speed Output Terminal and Motor

Description:

CW / CCW mode:

1: Output axis 1, pulse output (CW) Q0.0, pulse output (CCW) Q0.1

2: Output axis 2, pulse output (CW) Q0.2, pulse output (CCW) Q0.3

Pulse + direction mode:

1: Output axis 1, pulse output Q0.0, pulse direction Q0.4


2: Output axis 2, pulse output Q0.1, pulse direction Q0.5

3: Output axis 3, pulse output Q0.2, pulse direction Q0.6

4: Output axis 4, pulse output Q0.3, pulse direction Q0.7

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.11.4 Electrical Schematic Diagram

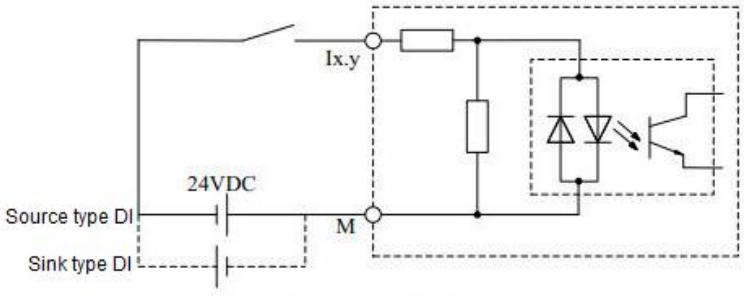

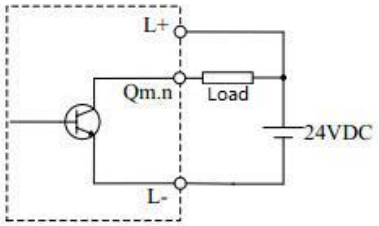
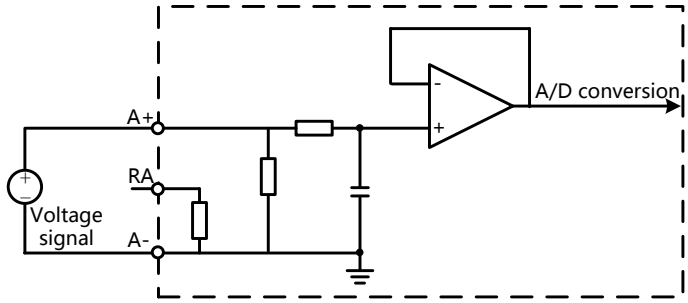


Figure 3-37 Input Channel (DI) *Output Channel (DO)*



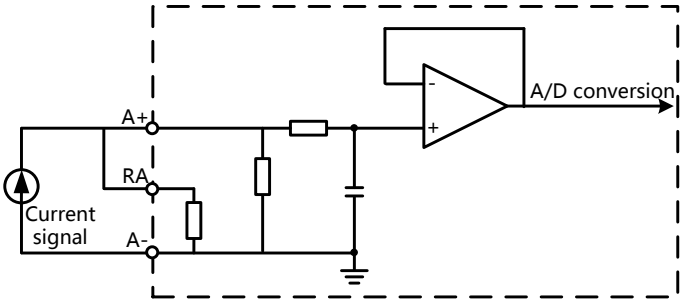
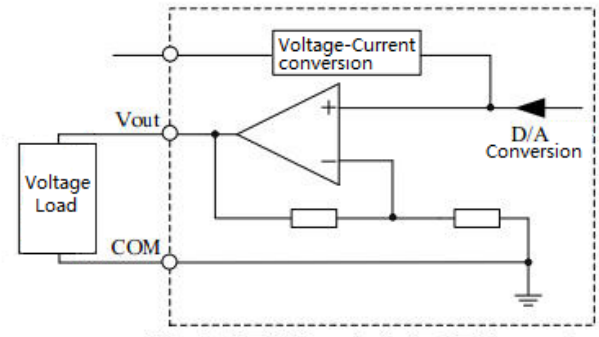


Figure 3-38 Input Channel (AI)



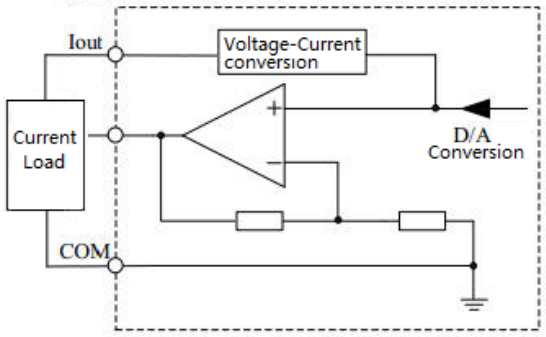


Figure 3-39 Output Channel (Voltage) *Output Channel (Current)*

3.11.5 Communication Interface

RS485 communication interface can establish connection to personal computer (PC) through programming cable, realize download of user program and on-line debugging and be applied to

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

communication with field devices. Junction and communication between LE5128 CPU module and PC are achieved through PS/2 of LE5128 (as shown in Figure 3-40 ①), junction and communication between LE5128 CPU module and expansion module are achieved through connector (as shown in Figure 3-40 ②).

Table 3-27 Pins Definition of 8 Core Round Interface Socket

Pin No.	Definition	Pin No.	Definition	Pin No.	Definition	Pin No.	Definition
1	-	3	-	5	RS-485 signal positive	7	System GND
2	-	4	-	6	RS-485 signal negative	8	System GND



Figure 3-40 Communication Interface Identification

3.11.6 Software Configuration

Both programming software and CPU module provide the setting of “Run” and “Stop” status, therefore the software and hardware are constrained each other.

Table 3-28 RUN/STOP Switch Setting Instructions

RUN/STOP selective	Status of programming software	Module status
Run (Switch to upper position)	RUN	RUN: automatically changed into STOP if users download user program in this status.
	STOP	STOP
Stop (Switch to lower position)	RUN/STOP	STOP(user's program stops, unable to run)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.12 LE5708 Air Condition Controller Module

LE5708 is air conditioning controller of LE series PLC, which does not support extended LE IO series module. It can complete control, detection, diagnosis, RS485 communication needed for system. Functions specifically achieved as follows: RUN/STOP switch selects running and stopping mode of module; RTC records operation time; equipped with USB memory card interface to facilitate download user program; RS485 interface provides channel to download application program and supports access to peripheral device and multi-PLC interconnection.It meets the user requirements with 24-channel digital inputs (dry contact), 20-channel relay outputs (where the first 16 for the electromagnetic relay output, after 4 for the solid state relay output) and 4-channel analog inputs (through the internal jumper and software configuration to set input signal range for 0 ~ 20mA, 0 ~ 10V or 0 ~ 5V), 8-channel NTC thermistor inputs (can collect -50 ~ 150 ℃ temperature range) and 2-channel analog outputs (output 0 ~ 20mA current signal or 0 ~ 10V voltage signal). It is suitable for follows models of screw compressor: air-cooled heat pump (modular), air-cooled heat pump (non-modular), air-cooled cool-water model (modular), air-cooled cool-water model (non-modular), water source heat pump (modular), water source heat pump (non-modular), water-cooled cool-water model (modular), water-cooled cool-water model (non-modular), water-cooled cool- air model (modular), water-cooled cool- air model (non-modular), which can achieve two screw compressor control.

3.12.1 Technical Specifications

Table 3-29 Technical Specifications

<table>
<tr><th colspan="6">CPU Specifications</th></tr>
<tr><td rowspan="5">On-board I/O</td><td>Digital input</td><td>24</td><td>Programming language</td><td colspan="2">LD/ST/CFC/SFC</td></tr>
<tr><td>Digital output</td><td>20</td><td>Program memory</td><td colspan="2">256K bytes</td></tr>
<tr><td rowspan="2">Analog input</td><td>4 (voltage / current, partitioned by jumper covering)</td><td>Data memory</td><td colspan="2">56K bytes</td></tr>
<tr><td>8（NTC）</td><td>Power-loss retentive memory</td><td colspan="2">2K bytes (1000 bytes addressability)</td></tr>
<tr><td rowspan="2">Analog output</td><td rowspan="2">2 (voltage / current output at the same time, partitioned by different terminals)</td><td>Basic instruction processing time</td><td colspan="2">0.1μs</td></tr>
<tr><td>Memory card</td><td colspan="2">Memory card with USB interface</td></tr>
<tr><td colspan="6">Power Source Specifications</td></tr>
<tr><td rowspan="2">Input power supply</td><td>Power source</td><td>External 24VDC input</td><td rowspan="2">Output power supply</td><td rowspan="2">Load capacity</td><td rowspan="2">5VDC±5%@10mA (AI external power</td></tr>
<tr><td>Permissible range</td><td>24VDC±10%</td></tr>
</table>

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications					
	Power dissipation (max.)	1200mA@24V	(5VDC)		supply)
Digital Input Specifications					
Number of inputs		24	Input type		Dry contact
Logic 1 signal		External dry contact close	Power supply query		Built-in
			Logic 0 signal		External dry contact open
Filtering parameter		No filtering, 5 ms, 10 ms（default）, 20 ms, 50 ms, 100 ms	Fault Diagnosis		Not supported
Isolation mode		Optocoupler isolation (field side to system)	Isolation withstand voltage		500VAC for 1 minute, leakage current <5mA
Digital Output Specifications					
Number of outputs		20	Output type	Electromagnetic relay	Q0.0～Q0.7、Q1.0～Q1.7
Output current	Electromagnetic relay*16	5A@30VDC/250VAC (resistive load)		Solid-state relay	Q2.0～Q2.3
	Solid-state relay*4	500mA @250VAC (the relay is in OFF mode, leaking current is 7.5mA@220VAC)	On state resistance (contact impedance)		<0.2Ω （ excluding Q2.0~Q2.3）
Switching frequency （max.）		1Hz	On-off times		No load, up to 10,000,000 open/close cycles
Rated current per common (max.)		<10A			Rated resistance 5A load, up to 100,000 open/close cycles
Warm reset keeping		Supported	Isolation mode		Relay isolation (field side to system)
Isolation withstand voltage		1000VAC for 1 minute, leaking current < 5mA			
Analog Input Specifications					
Number of inputs		4	Input type		Voltage / current (configured by jumper, refer to instruction for details)
Input range	Voltage	0～10V，0～5V	Range of corresponding code value	Voltage	0～65535
	Current	0～20mA（default）		Current	0～65535
Accuracy		Full scale1%@25℃	ADC resolution		12digits
Time for data update		1s (full-channel)	Filtering parameter		16, 32 (default), 64, 128
Channel withstand voltage /		±30V (voltage channel) /	Differential mode rejection ratio		>40dB@50Hz

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

CPU Specifications					
over-current value		±30mA (current channel)			
Input impedance	Current	<300Ω	Alarm diagnosis		Supported
	Voltage	>200KΩ	Temperature drift		±100ppm/℃
Isolation mode		None			
Analog Output Specifications					
Number of outputs		2	Output range	Current	0～20mA(corresponding code value: 0-65535)
Output type		Voltage / current (partitioned by different terminals)		Voltage	0～10V(corresponding code value: 0-65535)
Accuracy		1%F.S@25℃	Driving capability	Voltage	>2000Ω
Temperature drift		±100ppm/℃		Current	≤600Ω
Warm reset keeping		Supported	Isolation mode		None
NTC Temperature Acquisition Specifications					
Number of inputs		8	Input type		Thermistor R: 10K; B: 3976 @25℃
Input range		-50～150℃	Corresponding code valuerange		-500～1500
Temperature resolution	-30～0℃	0.5℃	Accuracy	-30～85℃	±1℃
	0～100℃	0.1℃		85～120℃	±1.6℃
	100～150℃	0.5℃		120～150℃	±2.1℃
Time for data update		1s (full-channel)	Filtering parameter		8, 16, 32（default）
Differential mode rejection ratio		>40dB@50Hz	Temperature drift		±100ppm/℃
Isolation mode		None			
Physical Specifications					
Dimensions L x W x H (mm)		302 x 132.6 x 47 （with lugs）	Installation mode		Screw mounting
Wiring method		Screw fixation			DIN rail mounting
Terminal		Pluggable	Terminal preventing confusion		None
Outgoing method		Parallel with printed board	Range of wire		12～24AWG
Operating temperature		-10℃～＋60°C	Storage temperature		-40℃～＋70°C
Relative humidity		5%~95% (no non-condensing)	Altitude		3000m

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

3.12.2 Indicator Definition of Indicators

Table 3-29 Definition of Indicators

Type	Color	Status	Description
Power supply PWR	Green	ON	Power supply works in normal mode.
		OFF	Power is defective or not supplied.
Operation status indicator RUN/STOP	Green	ON	Controller is in RUN mode, user program is running
		Flashing	1Hz flashing: waiting to load user program from memory card.
			4Hz flashing: loading user program from memory card.
		OFF	Controller is in STOP mode, user program is OFF
COM1	Yellow	Flashing	RS485-1 with communication
		OFF	No communication
COM2	Yellow	Flashing	RS485-2 with communication
		OFF	No communication
COM3	Yellow	Flashing	RS485-3 with communication
		OFF	No communication
Failure status indicator ERR	Red	ON	A certain fault or some faults which can be diagnosed happen to controller.
		OFF	Controller is in normal operation.

3.12.3 Status Code of DIP Switch

Table 3-30 Status Code of DIP Switch

1	2	3	4	5	6	7	8	Function
RUN/STOP	Baud Rates			Slave Station Address				
ON	X	X	X	X	X	X	X	STOP
OFF	X	X	X	X	X	X	X	RUN
X	OFF	OFF	OFF	X	X	X	X	38400
X	ON	OFF	OFF	X	X	X	X	115200
X	OFF	ON	OFF	X	X	X	X	57600
X	ON	ON	OFF	X	X	X	X	19200
X	OFF	OFF	ON	X	X	X	X	9600

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

1	2	3	4	5	6	7	8	Function
X	X	X	X	OFF	OFF	OFF	OFF	Station 1
				…				
X	X	X	X	OFF	OFF	OFF	ON	Station 9
				…				
X	X	X	X	ON	ON	ON	ON	Station 16

Baud rate and slave address dial setting are valid only for RS485 communication port 2.

3.12.4 Terminal Definition and Connection

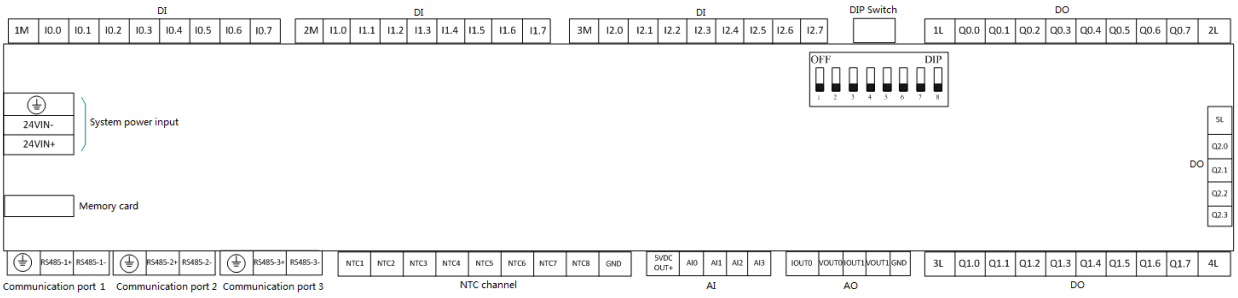


Figure 3-41 Wiring Method of Input and Output Signal


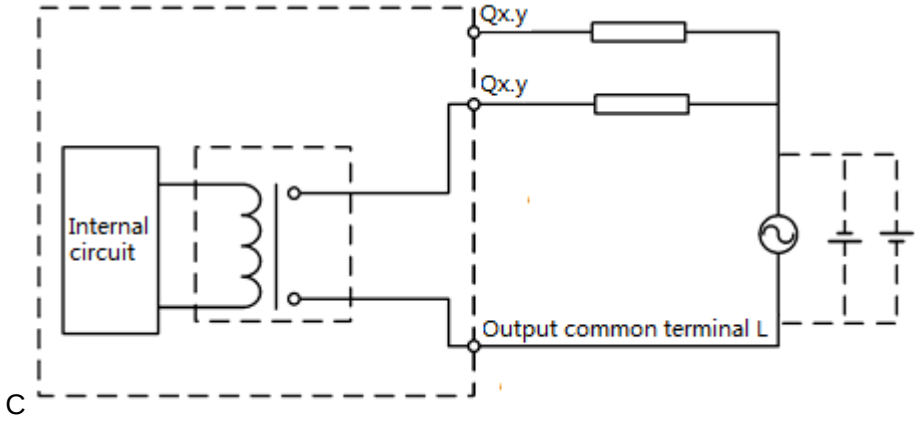


Figure 3-42 Wiring Method of DO

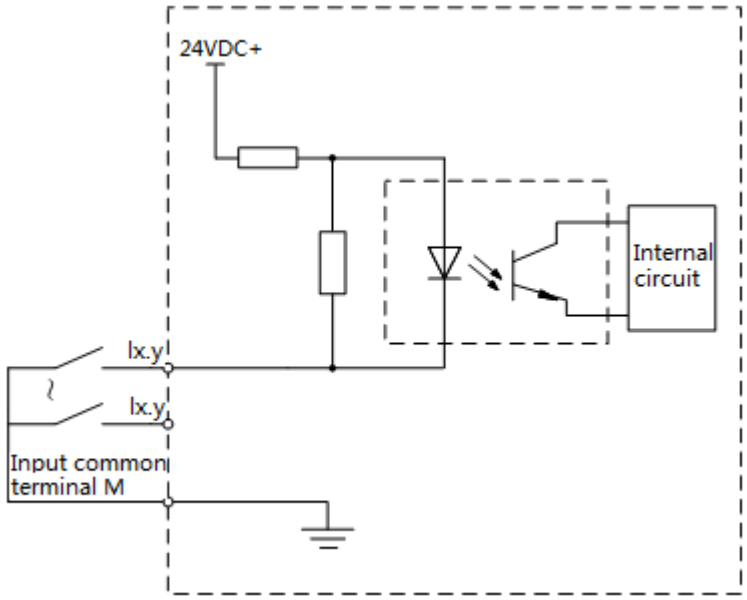

C

Figure 3-43 Wiring Method of DI

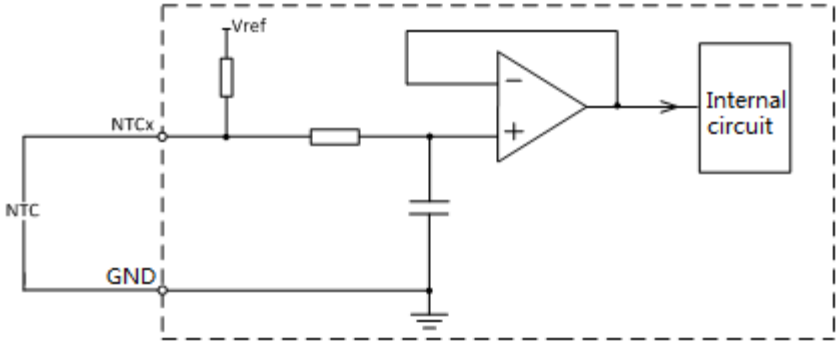


Figure 3-44 Wiring Method of NTC

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

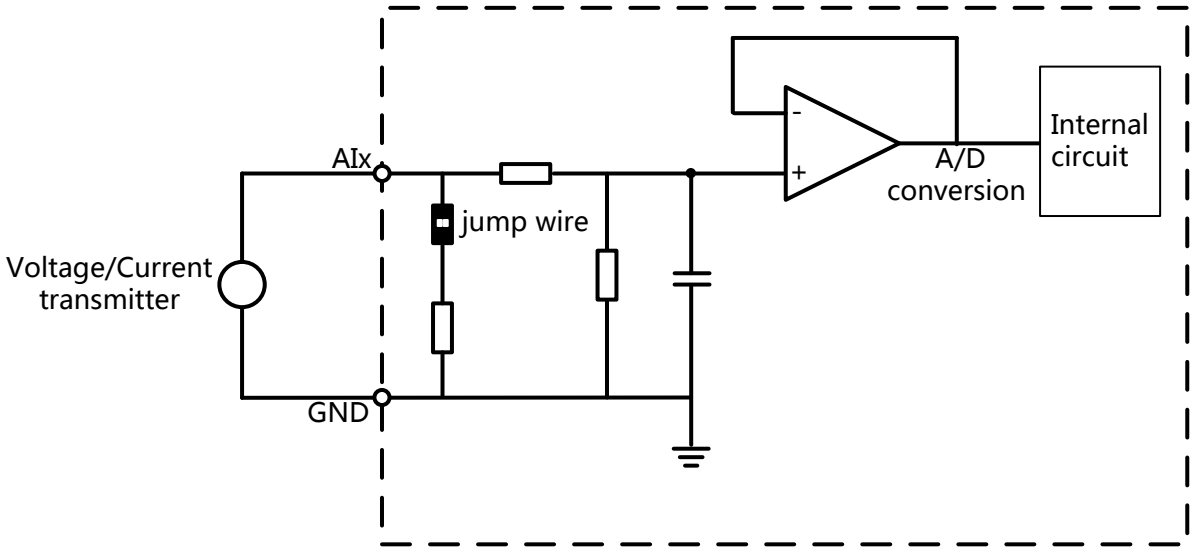


Figure 3-45 Wiring Method of AI

AI signal: supports 4 AI, 4-channel common. When being used as current signal input, using jumper covering for short-circuit connection of the corresponding channel on J24 connector of template; when being used as voltage signal input, remove jumper covering in corresponding channel, as shown in the right figure.

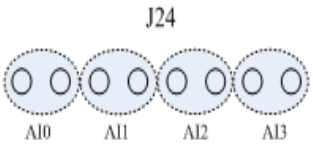


Figure 3-46 J24 Connector

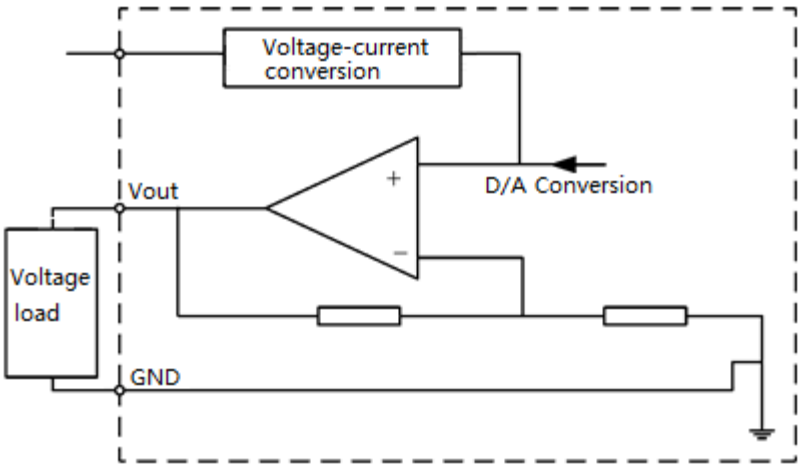


Figure 3-47 Wiring Method 1 of Analog Output

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

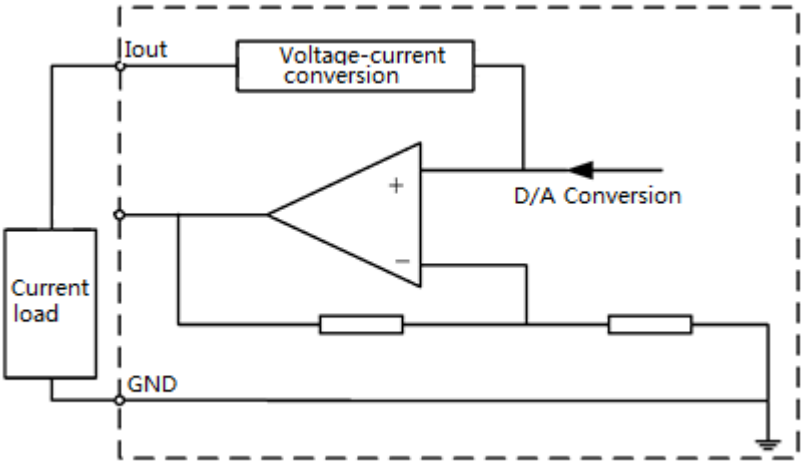


Figure 3-48 Wiring Method 2 of Analog Output

3.12.5 Communication Signal

LE5708 supports 3 ways RS485 communication, Detail parameters information as shown in Table 3-31:

Table 3-31 Parameters Information List

Parameter	Communication port 1	Communication port 2	Communication port 3
Function	Download engineering or HMI communication	Modules cascade	Communication with the third party
Baud rate (bps)	9600, 19200, 38400, 57600, 115200	9600, 19200, 38400, 57600, 115200	9600, 19200, 38400, 57600, 115200
Configuration mode of communication rate	Software configuration	Dial switch 2-4 digit control	Software configuration
Physical layer protocol	1 bit for stopping bit, 8 bits for data bit, no check, odd/even check		
Communication protocol	AT communication, Modbus master-slave, Free port protocol	Modbus master-slave , multi-PLC interconnection, Free port protocol	Modbus master-slave, Free port protocol

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Parameter	Communication port 1	Communication port 2	Communication port 3
Connection cable	Twisted-pair cable Shielded		

- Instructions
  - Power Signal: Output of the external power supply as the power (+5VDC) signal of voltage signal transmitter and the load capacity is less than 10mA.
  - DI signal: Support 24 channel digital inputs, a group sharing the public terminal is used by 8 channels, I0.0 - I0.7, I1.0 - I1.7, I2.0 - I2.7.
  - DO signal: Support 20-channel digital outputs. Among them, 16 channel electromagnetic relay outputs, 4 channels use a group sharing the public terminal Q0.0-Q0.3, Q0.4-Q0.7, Q1.0-Q1.3, Q1.4-Q1.7; 4 channel solid-state relay outputs, 4 channels use a group sharing the public terminal Q2.0-Q2.3.
  - NTC signal: Support 8 channel NTC signal inputs, 8 channels sharing the public terminal.
  - Communication signal: See Chapter 3.12.3 Status Code of DIP Switch
  - for specific information of baud rate in RS485 terminal interface 2 and station addresses settings, modification of DIP switch will takes effect via re-power or cold reset.
  - Instructions on communication port: Following configuration is recommended to use during the using process: Communication port 1 is used for AT debugging, communication port 2 is used for multi-machine interconnections and communication port 3 is used to connected with Modbus master equipment (such as touch screen);
  - Instruction on communication delayed response setting: the delayed response settings are recommended as follows: 9600 is 4ms, 19200 is 2ms, 38400, 57600, and 115200 is 1ms.

3.12.6 Fault Diagnosis

- AI fault definition:
  - 0~20mA current signals: over upper limit (>22mA).
  - 0~5V voltage signal: over upper limit (>5.5V).
  - 0~10V voltage signal: over upper limit (>10.2V).
- NTC input fault definition: NTC line broken checking
  - Remain: fault occurs, remain current value.
  - Positive limit: fault occurs, value 1500.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- ☐ Negative limit: fault occurs, value -500.

■ Possibilities of fault indicator ERR is ON

- ☐ Storage card loading failure.
- ☐ Controller reset is abnormal.
- ☐ Hardware parameters configuration is error.



- In the case of strong interference, it is recommended to use the speed limit function block in the project to filter out the transient jump that may occur in the AI and NTC channels.
- If DO load is a contactor, it is recommended that the arc - suppression device supplied by Hollysys is paralleled on both sides of the contactor coil, 9A-32A contactor using 2140600323, 40A-90A contactor using 2140600322.

■ Air Conditioning Module Diagnosis

Fault diagnosis data of air conditioning controller module are as shown in Table 3-32.

Table 3-32 Fault Diagnosis Information

Diagnostic Area	Channel	Diagnosis Bit	Channel	Diagnosis
%SB790	Module diagnosis information			
%SB791	AI0	Over upper limit: BIT1	AI1	Over upper limit: BIT5
%SB792	AI2	Over upper limit: BIT1	AI3	Over upper limit: BIT5
%SB793	NTC0	Over lower limit: BIT0	NTC1	Over lower limit: BIT4
		Over upper limit: BIT1		Over upper limit: BIT5
		Break line: BIT2		Break line: BIT6
%SB794	NTC2	Over lower limit: BIT0	NTC3	Over lower limit: BIT4
		Over upper limit: BIT1		Over upper limit: BIT5
		Break line: BIT2		Break line: BIT6
% SB795	NTC4	Over lower limit: BIT0	NTC5	Over lower limit: BIT4
		Over upper limit: BIT1		Over upper limit: BIT5

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Diagnostic Area	Channel	Diagnosis Bit	Channel	Diagnosis
		Break line: BIT2		Break line: BIT6
% SB796	NTC6	Over lower limit: BIT0	NTC7	Over lower limit: BIT4
		Over upper limit: BIT1		Over upper limit: BIT5
		Break line: BIT2		Break line: BIT6

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 4 Function Expansion Board

4.1 LE5600 RS232 Communication Expansion Board

LE5600 is the communication function expansion board of LE series PLC, offers 1-channel RS232 communication.

4.1.1 Technical Specifications

Table 4-1 Technical Specifications

<table>
<tr><th colspan="3">Communication Specifications</th><th colspan="3">Current Consumption</th></tr>
<tr><td colspan="2">Number of communication port</td><td>1</td><td colspan="2">+3.3VDC (supplied by CPU module)</td><td>1mA</td></tr>
<tr><td colspan="2">Connection</td><td>Terminals</td><td colspan="2">+5VDC (supplied by CPU module)</td><td>90mA</td></tr>
<tr><td colspan="2">Communication protocol</td><td>Modbus RTU master / slave, free port communication protocol</td><td colspan="3">Physical Specifications</td></tr>
<tr><td colspan="2">Communication data memory</td><td>I/Q/M</td><td>Dimensions W x H x D (mm)</td><td colspan="2">29×26×62</td></tr>
<tr><td colspan="2">Baud rates (bps)</td><td>1200, 2400, 4800, 9600, 19200, 38400</td><td>Weight</td><td colspan="2">24g</td></tr>
<tr><td colspan="3">Isolation Specifications</td><td>Operating temperature</td><td colspan="2">0～60°C</td></tr>
<tr><td>Isolation Mode</td><td colspan="2">Optocoupler (field side to system)</td><td>Storage temperature</td><td colspan="2">-40～70°C</td></tr>
<tr><td>Isolation withstand voltage</td><td colspan="2">500VAC for 1 minute, leakage current <5mA</td><td>Relative humidity</td><td colspan="2">5%~95% (non-condensing)</td></tr>
</table>

4.1.2 Terminal Definition and Connection

LE5600 RS232 expansion module adopts a double-row non-pluggable terminal (3x2).

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

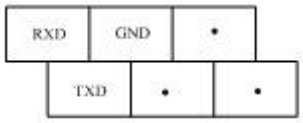


Figure 4-1 LE5600 RS232 Terminal

Table 4-2 LE5600 Terminal Definition

Terminal name	RXD	TXD	GND
Definition	RS232_Receive Data	RS232_Transmit Data	Signal ground

4.1.3 Principle Diagram

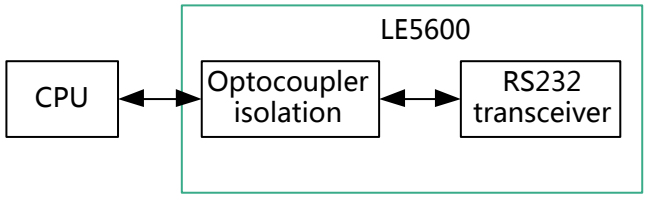


Figure 4-2 LE5600 Principle Diagram

4.1.4 Expansion Connection

1. Remove the left and bottom terminal block covers from the CPU.



Figure 4-3 the Removal of Cover

2. Place the expansion board down onto the mounting position on the top of the CPU module, as shown in Figure 4-4.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 4-4 the Installation of LE5600 Expansion Board

- LE expansion board can be connected to 24I/O or 40I/O CPU module;
- Do not directly touch circuit during mounting or removing;
- A flat-head screwdriver is needed for dismounting.

4.2 LE5601 RS485 Communication Expansion Board

LE5601 is a communication expansion board of LE series PLC and offers 1-channel RS485 communication.

4.2.1 Technical Specifications

Table 4-3 Technical Specifications

Communication Function		Current Consumption	
Number of communication port	1	+3.3VDC (supplied by CPU module)	1.5mA
Connection	Terminals	+5VDC (supplied by CPU module)	50mA
Communication protocol	Modbus RTU master / slave, free port communication protocol	Physical Specifications	
Communication data memory	I/Q/M	Dimension W×H×D(mm)	29×26×62

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Communication Function		Current Consumption	
Baud rates	1200, 2400, 4800, 9600, 19200, 38400bps	Weight	26g
Isolation Withstand Voltage		Operating temperature	0～60°C
Isolation mode	Magnetic coupling (field side to system)	Storage temperature	-40～70°C
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	Relative humidity	5%~95% (non-condensing)

4.2.2 Terminal Definition and Connection

LE5601 RS485 expansion module adopts a double-row non-pluggable terminal (3x2).

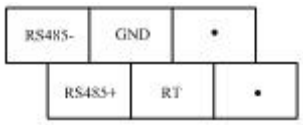


Figure 4-5 LE5601 RS485 Terminal of Small Extension Board

Table 4-4 LE5601 Terminal Definition

Upper Terminal	RS485-	GND	•
Description	RS485 communication negative	Signal ground	No connection
Lower Terminal	RS485+	RT	•
Description	RS485 communication positive	Match resistance	No connection

- RT is terminal matching resistance, which should be connected with RS485+ when necessary.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

4.2.3 Principle Diagram

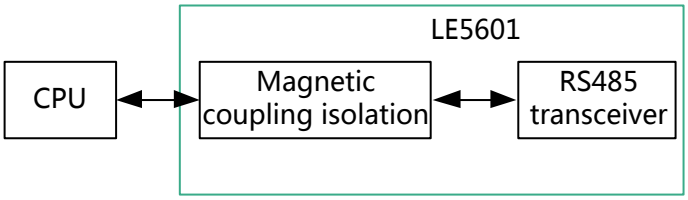


Figure 4-6 LE5601 Principle Diagram

4.2.4 Expansion Connection

Please refer to Chapter 4.1.4 Expansion Connection.

4.3 LE5611 2-Channel AI Expansion Board

LE5611 is an AI expansion board of LE series PLC, which provides acquisition function for two channels AI signal.

4.3.1 Technical Specifications

Table 4-5 Technical Specifications

Input Specifications				
Number of inputs		2	Input current (max.)	32mA
Input type		single-ended	Time for step response of input	1.5ms (up to 95%)
Input range	Voltage	0~10V	Common mode voltage	Signal voltage + common mode voltage <12V
	Current	0~20mA/4~20mA	Physical Specifications	
Accuracy		1% of full scale	Dimensions W x H x D （mm）	29 x 26 x 62
Resolution		10 bits	Weight	22g
Input impedance	Voltage	>1MΩ	Operating temperature	0~60°C
	Current	250Ω	Storage temperature	-40~70°C

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications			
Maximum withstand voltage	15V	Relative humidity	5%~95% (non-condensing)

4.3.2 Signal Type and Scale Range of Input Channels

Table 4-6 Signal Type and Scale Range of Input Channels

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage signal	0~10V	0~65535	0x0000~0xFFFF
Current signal	0~20mA	0~65535	0x0000~0xFFFF
	4~20mA	0~65535	0x0000~0xFFFF

4.3.3 Terminal Definition and Connection

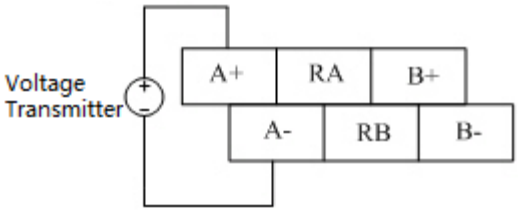


Figure 4-7 Terminal Definition and Wring Diagram (Voltage Type)

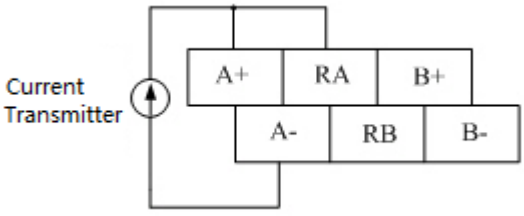


Figure 4-8 Terminal Definition and Wiring Diagram (Current Type)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Input channels of LE5611 module can accept either voltage signal or current signal.
- Voltage signal: 'A+' connects to positive pole of voltage transmitter, 'A-' connects to negative pole of voltage transmitter. Channel B follows the same rule.
- Current signal: “RA” and “A+” connects to positive pole of current transmitter after short-circuit connection, “A-” connects to negative pole of current transmitter. Channel B follows the same rule.
- 2-wire wiring and 4-wire wiring are as shown in Figure 4-9. The transmitter shall be supplied power through external power and also can choose 24VDC output of CPU module according to requirement of power capacity.

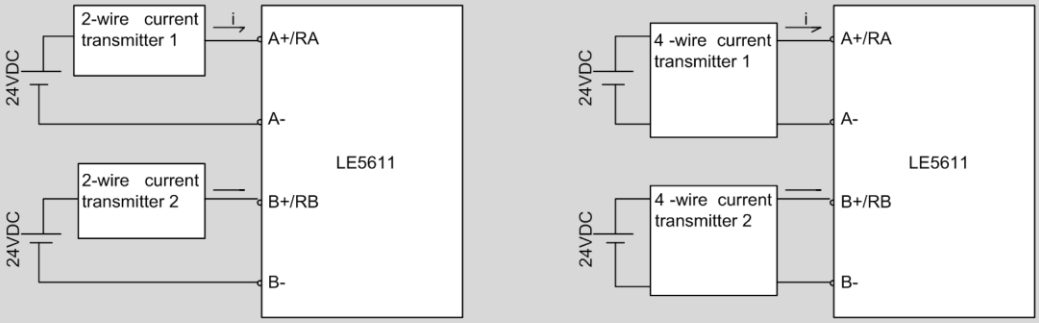


Figure 4-9 Wiring Diagram with 2-Wire Type Current Transmitter Wiring Diagram with 4-Wire Type Current Transmitter

4.3.4 Electrical Schematic Diagram

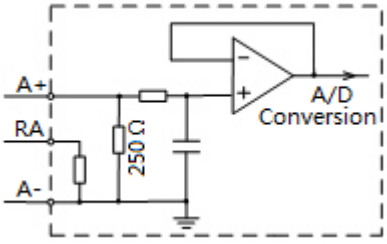


Figure 4-10 Electrical Schematic Diagram

4.3.5 Expansion Connection

Please refer to Chapter 4.1.4 Expansion Connection.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

4.4 LE5621 1 AO Expansion Board

LE5621 is an AO expansion board of LE series PLC and can offer 1-output channel for analog signal.

4.4.1 Technical Specification

Table 4-7 Technical Specifications

Output Specifications			**Current Consumption**	
Number of outputs		1	+3.3VDC (supplied by CPU module)	10mA
Output range	Voltage	0～10V	+5VDC (supplied by CPU module)	15mA
	Current	0～20mA / 4～20mA	+24VDC (external driving voltage)	Calculated by practical load
Accuracy		1% of full scale	Physical Specifications	
Resolution		12 bits	Dimension W x H x D (mm)	29×26×62
Stable time	Voltage	300us（R） 1ms（uF）	Weight	26g
	Current	600us（1mH） 2ms（10mH）	Operating temperature	0～60°C
Load impedance	Voltage	≥2000Ω	Storage temperature	-40～70°C
	Current	≤600Ω	Relative humidity	5%~95% (non-condensing)
Isolation mode		Optocoupler (field side to system)	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA

4.4.2 Signal Type and Scale Range of Output Channel

Table 4-8 Signal Type and Scale Range of Output Channel

Signal type	**Scale range**	**Corresponding digital code value range**	
		Decimal	Hexadecimal
Voltage signal	0～10V	0～65535	0x0000~0xFFFF
Current signal	0～20mA	0～65535	0x0000~0xFFFF
	4～20mA	0～65535	0x0000~0xFFFF

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

4.4.3 Terminal Definition and Connection

Table 4-9 Terminal Definition and Connection

Upper Terminal	Vout	COM	VI-
Description	Analog voltage output	Analog of common	24VDC power supply negative
Lower Terminal	Iout	•	VI+
Description	Analog current output	No connection	24VDC power supply negative

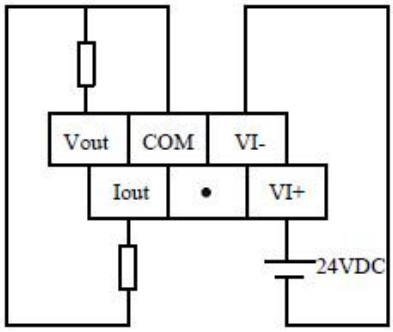


Figure 4-11 Terminal Wiring

4.4.4 Electrical Schematic Diagram


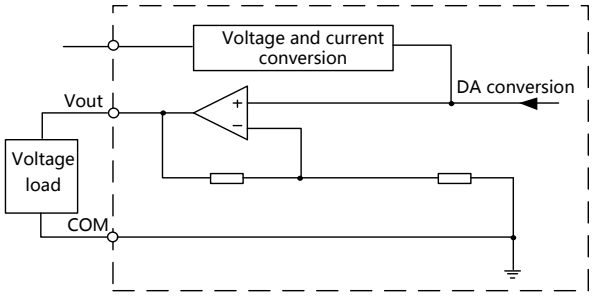


Figure 4-12 Voltage-Type Load Output

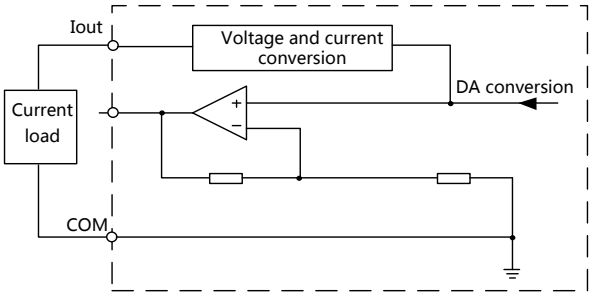

Current-Type Load Output

4.4.5 Expansion Connection

Please refer to Chapter 4.1.4 Expansion Connection.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 5 DI Module

5.1 LE5210 8-Channel DI Module

LE5210 module is an expansion module of LE series PLC and can offer 8 input channels for digital signal.

5.1.1 Technical Specification

Table 5-1 Technical Specifications

Input Specification				
Number of inputs	8	Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, and 100ms	
Input type	Sink/source	Isolation mode	Optocoupler (field side to system)	
Rated voltage	24VDC	Isolation groups	2	
Permissible range	0～30VDC	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	
Logic 1 signal	15~30VDC, permissible min. current 3mA	Current consumption	+24VDC (supplied by expansion bus)	0mA
Logic 0 signal	0~5VDC, permissible max. current 1mA		+5VDC (supplied by expansion bus)	50mA
Physical Specification				
Dimensions W x H x D (mm)	47×97×89	Operating temperature	0～60°C	
Installation mode	DIN rail mounting or screw mounting	Storage temperature	-40～70°C	
Weight	137g	Relative humidity	5%~95% (non-condensing)	

5.1.2 Definition of Indicators


Type	Color	Status	Description

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Type	Color	Status	Description
Channel indicator Ix.y	Green	ON	The channel is ON.
		OFF	The channel is OFF.

5.1.3 Terminal Definition and Connection

8-channel digital input module LE5210 adopts two double-row pluggable terminals (3 x 2 and 3 x 2) and its definition of terminal and typical field wiring are shown below.

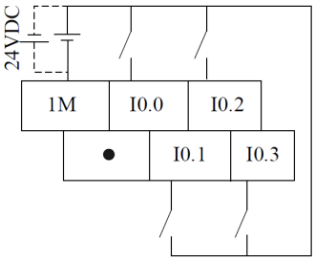

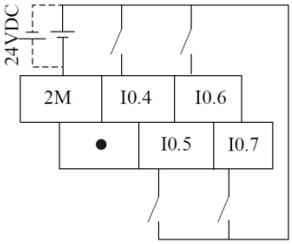


Figure 5-1 Upper Terminal Definition and Wiring Diagram and Wiring Diagram ***Lower Terminal Definition***

- 1M and 2M terminals of input channel (DI) are common terminal for peripheral DI. users can choose to connect them to positive terminal or negative terminal of 24VDC power to fit sink/source type DI.
- '●' means the channel cannot be connected or connection is not available.

5.2 LE5211 16-Channel DI Module

LE5211 module is an expansion module of LE series PLC and can offer 16 input channels for digital signal.

5.2.1 Technical Specification

Table 5-2 Technical Specifications

Input Specifications			
Number of inputs	16	Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, and 100ms

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications				
Input type	Sink/source	Isolation mode	Optocoupler (field side to system)	
Rated voltage	24VDC	Isolation groups	2	
Permissible range	0~30VDC	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	
Logic 1 signal	15~30VDC, permissible min. current 3mA	Current consumption	+24VDC (supplied by expansion bus)	0mA
Logic 0 signal	0~5VDC, permissible max. current 1mA		+5VDC (supplied by expansion bus)	65mA
Physical Specifications				
Dimensions W x H x D (mm)	70×97×89	Operating temperature	0~60°C	
Installation mode	DIN rail mounting or screw mounting	Storage temperature	-40~70°C	
Weight	205g	Relative humidity	5%~95% (non-condensing)	

5.2.2 Definition of Indicators

Please refer to Chapter 5.1.2 Definition of Indicators.

5.2.3 Terminal Definition and Connection

16-channel digital input module LE5211 adopts two double-row pluggable terminals (6 x 2 and 6 x 2) and its definition of terminal and typical field wiring are shown below.

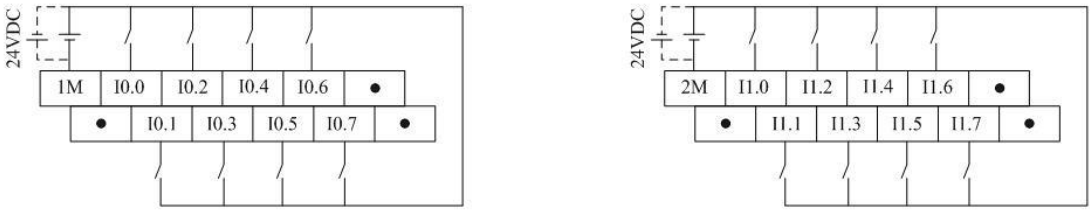


Figure 5-2 Upper Terminal Definition and Wiring Diagram Lower Terminal Definition and Wiring Diagram

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- 1M and 2M terminals of input channel (DI) are common terminal for peripheral DI, users can choose to connect them to positive terminal or negative terminal of 24VDC power to fit sink/source type DI.
- "●"means the channel cannot be connected or connection is not available.

- Connecting external field power supply to two DI channel of same common terminal will cause close of channel (indicating as right diagram in Figure 5-2), whereas no damage to module will be caused.

5.3 LE5212 32-Channel DI Module

LE5212 module is an expansion module of LE series PLC and can offer 32 input channels for digital signal.

5.3.1 Technical Specification

Table 5-3 Technical Specifications

Input Specifications				
Number of inputs	32	Filtering parameter	No filtering, 5ms, 10ms, 20ms, 50ms, and 100ms	
Input type	Sink/source	Isolation mode	Optocoupler (field side to system)	
Rated voltage	24VDC	Isolation groups	2	
Permissible range	0~30VDC	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	
Logic 1 signal	15~30VDC, permissible min. current 3mA	Current consumption	+24VDC(supplied by expansion bus)	0mA
Logic 0 signal	0~5VDC, permissible max. current 1mA		+5VDC(supplied by expansion bus)	105mA
Physical Specifications				
Dimensions W x H x D (mm)	108 x 97x 89	Operating temperature	0~60°C	
Installation mode	DIN rail mounting or screw mounting	Storage temperature	-40~70°C	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications			
Weight	314g	Relative humidity	5%~95% (non- condensing)

5.3.2 Definition of Indicators

Please refer to Chapter 5.1.2 Definition of Indicators.

5.3.3 Terminal Definition and Connection

The 32-channel digital input module LE5212 adopts two double-row pluggable terminals (10 x 2 and 10 x 2) and its definition of terminal and typical field wiring are shown below.

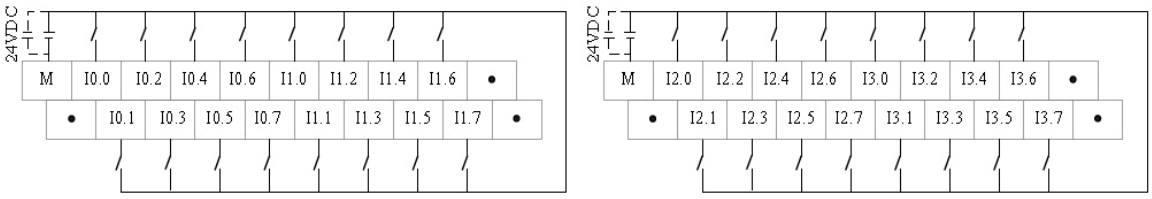


Figure 5-3 Upper Terminal Definition and Wiring Lower Terminal Definition and Wiring

- 1M and 2M terminals of input channel (DI) are common terminal for peripheral DI, users can choose to connect them to positive terminal or negative terminal of 24VDC power to accommodate sink/source type DI.
- "●" means that channels cannot be connected or physical connection is not available.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 6 DO Module

6.1 LE5220 8-Channel DO Module

LE5220 module is an expansion module of LE series PLC and can offer 8 output channels for digital signal.

6.1.1 Technical Specification

Table 6-1 Technical Specifications

Output Specifications				
Number of outputs	8	On state resistance	0.3Ω (typical), 0.6Ω (max.)	
Output type	Transistor	Isolation mode	Optocoupler (field side to system)	
Rated voltage	24VDC	Isolation groups	2	
Permissible range	20.4~28.8VDC	Isolation withstand voltage	500VAC for 1 minute, leaking current <5mA	
Output current	1A	Current consumption	+24VDC (supplied by expansion bus)	0mA
Current per common	<4A		+24VDC (supplied by peripheral device)	Calculated by practical load
Residual voltage	<0.5V (output logic 1 at 1A current)		+5VDC (supplied by expansion bus)	90mA
Physical Specifications				
Dimensions W x H x D (mm)	47 x 97 x 89	Operating temperature	0~60°C	
Installation mode	DIN rail mounting or screw mounting	Storage temperature	-40~70°C	
Weight	141g	Relative humidity	5%~95% (non- condensing)	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved


6.1.2 Definition of Indicators

Table 6-2 Definition of Indicators

Type	Color	Status	Description
Channel indicator Qm.n	Green	ON	The channel is ON.
		OFF	The channel is OFF.

6.1.3 Terminal Definition and Connection

The 8-channel DO module LE5220 adopts two double-row pluggable terminals (3 x 2 and 3 x 2), terminal definition and typical field wiring are shown in Figure 6-1.

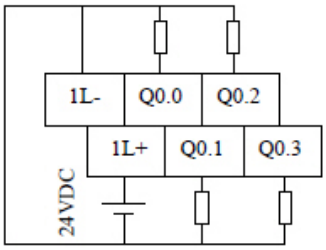

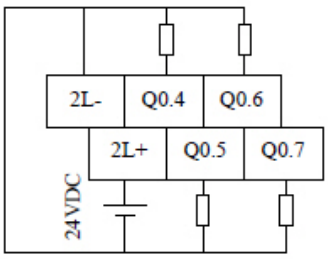


Figure 6-1 Upper Terminal Definition and Wiring *Lower Terminal Definition and Wiring*

- 1L+, 2L+ and 1L- and 2L- of output channel (DO) are connected respectively with positive terminal and negative terminal of load driving power supply 24VDC.

6.2 LE5221 8 -Channel Relay DO Module

LE5221 module is an expansion module of LE series PLC and can offer 8 output channels for digital signal.

6.2.1 Technical Specification

Table 6-3 Technical Specifications

Output Specifications

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Output Specifications				
Number of outputs	8	Mechanical life of relay	No load: up to 10,000,000 open/close cycles	
Output type	Relay		Rated resistance 2A load: up to 100,000 open/close cycles	
Rated voltage	24VDC or 24～230VAC	Isolation mode	Relay (field side to system)	
Permissible range	5～30VDC or 5～250VAC	Isolation groups	2	
Output current	2A (resistance load)	Isolation withstand voltage	2500VAC for 1 minute, leakage current <5mA	
Current per common	＜10A	Current consumption	+24VDC (supplied by expansion bus)	60mA
On state resistance	0.2Ω		+24VDC (supplied by peripheral device)	Calculated by practical load
Switching frequency （max.）	1Hz		+5VDC (supplied by expansion bus)	50mA
Physical Specifications				
Dimensions W x H x D (mm)	47×97×89	Operating temperature	0～+60°C	
Mounting mode	DIN rail mounting or screw mounting	Storage temperature	-40～+70°C	
Weight	162g	Relative humidity	5%~95% (non-condensing)	


6.2.2 Definition of Indicators

Please refer to Chapter 6.1.2 Definition of Indicators.

6.2.3 Terminal Definition and Wiring

The 8-channel DO module LE5221 adopts two double-row pluggable terminals (3 X 2 and 3 X 2), terminal definition and typical field wiring are shown in Figure 6-2.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

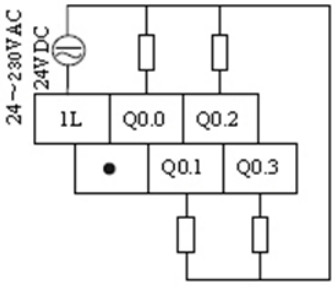

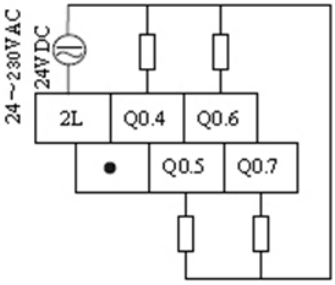


Figure 6-2 Upper Terminal Definition and Wiring ***Lower Terminal Definition and Wiring***

- 1L and 2L are respectively common terminal of load driving power supply for four groups output, which can be supplied via DC and AC.
- "●" means the channel cannot be connected or connection is not available.
- "⏦" means load voltage can be 24VDC or 24～230VAC.

6.3 LE5223 16-Channel Relay DO Module

LE5223 module is an expansion module of LE series PLC and can offer 16 output channels for digital signal.

6.3.1 Technical specifications

Table 6-4 Technical Specifications

Output Specifications			
Number of outputs	16	Mechanical life of relay	No load: up to 10,000,000 open/close cycles
Output type	Relay		Rated resistance 2A load: up to 100,000 open/close cycles
Rated voltage	24VDC or 24~230VAC	Isolation mode	Relay (field side to system)
Permissible range	5~30VDC or 5~250VAC	Isolation groups	4
Output current	2A (resistance load)	Isolation withstand voltage	2500VAC for 1 minute, leaking current<5mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Output Specifications				
Current per common	<10A	Current consumption	+24VDC (supplied by expansion bus)	120mA
On state resistance	0.2Ω		+24VDC (supplied by peripheral device)	Calculated by practical load
Switching frequency (max.)	1Hz		+5VDC (supplied by expansion bus)	135mA
Physical Specifications				
Dimensions W x H x D(mm)	70 x 97 x 89	Operating temperature	0~60°C	
Mounting mode	DIN rail mounting or screw mounting	Storage temperature	-40~70°C	
Weight	285g	Relative humidity	5%~95% (non-condensing)	

6.3.2 Definition of Indicators

Please refer to Chapter 6.1.2 Definition of Indicators.

6.3.3 Terminal Definition and Connection

The 16-channel DO module LE5223 adopts two double-row pluggable terminals (6 X 2 and 6 X 2), terminal definition and typical field wiring are shown in Figure 6-3.

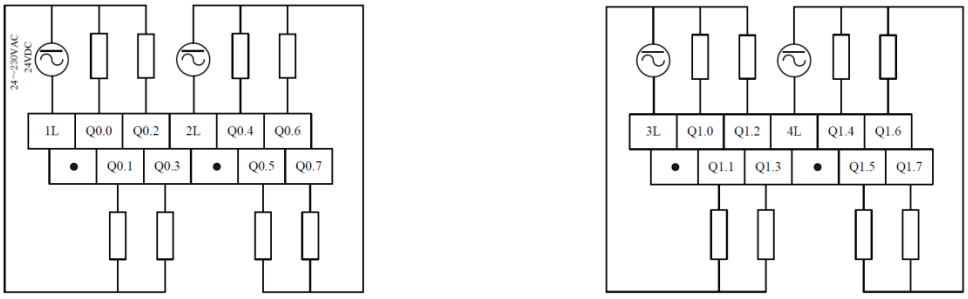


Figure 6-3 Upper Terminal Definition and Wiring Lower Terminal Definition and Wiring

- 1L, 2L, 3L and 4L are respectively common terminal of load driving power supply for four groups output, which can be supplied via DC and AC.
- "●" means the channel cannot be connected or connection is not available
- "⏦" means load voltage can be 24VDC or 24-230VAC.

6.4 LE5224 32-channel DO Module

LE5224 module is an expansion module of LE series PLC and can offer 32 output channels for digital signal.

6.4.1 Technical Specification

Table 6-5 Technical Specifications

Output Specifications				
Number of outputs	32	On state resistance	0.3Ω (typical), 0.6Ω (max.)	
Output type	Transistor	Isolation mode	Optocoupler (field side to system)	
Rated voltage	24VDC	Isolation groups	4	
Permissible range	20.4～28.8VDC	Isolation withstand	500VAC for 1 minute, leaking current <5mA	
Output current	1A	Current consumption	+24VDC (supplied by expansion bus)	0mA
Current per common	＜8A		+24VDC (supplied by peripheral device)	Calculated by practical load
Residual voltage	＜0.5V (output logic 1 at current 1A)		+5VDC (supplied by expansion bus)	265mA
Physical Specifications				
Dimensions W x H x D (mm)	108×97×89	Operating temperature	0～+60°C	
Mounting mode	DIN rail mounting or screw mounting	Storage temperature	-40～+70°C	
Weight	326g	Relative humidity	5%~95% (non-condensing)	

6.4.2 Definition of Indicators

Please refer to Chapter 6.1.2 Definition of Indicators.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

6.4.3 Terminal Definition and Connection

32-channel DO module LE5224 has two double-row pluggable terminals (10 x 2 and 10 x 2), definition of terminal and typical field wiring are shown in Figure 6-4.

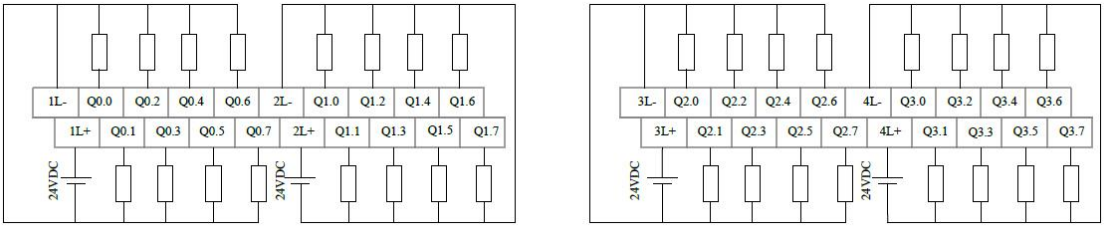


Figure 6-4 Upper Terminal Definition and Wiring Lower Terminal Definition and Wiring

- 1L+, 2L+, 3L+, 4L+ and 1L-, 2L-, 3L-, 4L- of the output channel (DO) are connected respectively with positive terminal and negative terminal of load driving power 24VDC.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 7 AI Module

7.1 LE5310 4 AI Module

LE5310 is an expansion module of LE series PLC and can offer 4 input channels for analog signal.

7.1.1 Technical Specifications

Table 7-1 Technical Specifications

Input Specifications			**Current Consumption**	
Number of inputs		4	+24VDC (supplied by expansion bus)	15mA
Input type		Differential / single-ended	+5VDC (supplied by expansion bus)	95mA
Input range	Voltage	0～10V	Isolation Withstand Voltage	
	Current	0 ～ 20 mA /4 ～ 20mA	Isolation mode	Optocoupler (channel side to system)
Input accuracy		0.5% of full scale		No isolation between channels
Resolution		12 bits	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA
Input impedance	Voltage type	>1MΩ	Physical Specifications	
	Current type	250Ω	Dimensions W x H x D (mm)	70×97×89
Withstand voltage		15V	Weight	213g
Withstand current		32mA	Installation mode	DIN rail mounting or screw mounting
Common mode voltage		Signal voltage + common mode voltage <12V	Operating temperature	0～60°C
Common mode rejection ratio		>80dB	Storage temperature	-40～70°C
Differential mode		>60dB（50Hz and	Relative humidity	5%~95% (non-condensing)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications		Current Consumption	
rejection ratio	60Hz）		

7.1.2 Definition of Indicators

Table 7-2 Definition of Indicators

Type	Color	Status	Description
Power supply PWR	Green	ON	Power supply works in normal mode.
		OFF	Power is defective or not supplied.
Failure status indicator ERR	Red	ON	The module is in failed mode.
		OFF	No errors occurred or were detected.



- If ERR indicator in CPU module is ON, the diagnosis information is meaningless.

7.1.3 Signal Types and Scale Range of Input Channels


Table 7-3 Signal Type and Scale Range of Input Channels

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage signal	0～10V	0～65535	0x0000～0xFFFF
Current signal	0～20mA	0～65535	0x0000～0xFFFF
	4～20mA	0～65535	0x0000～0xFFFF

7.1.4 Terminal Definition and Connection

The 4-channel AI module LE5310 adopts two double-row pluggable terminals (6 X 2 and 6 X 2), and its definition of terminal and typical wiring are shown below.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

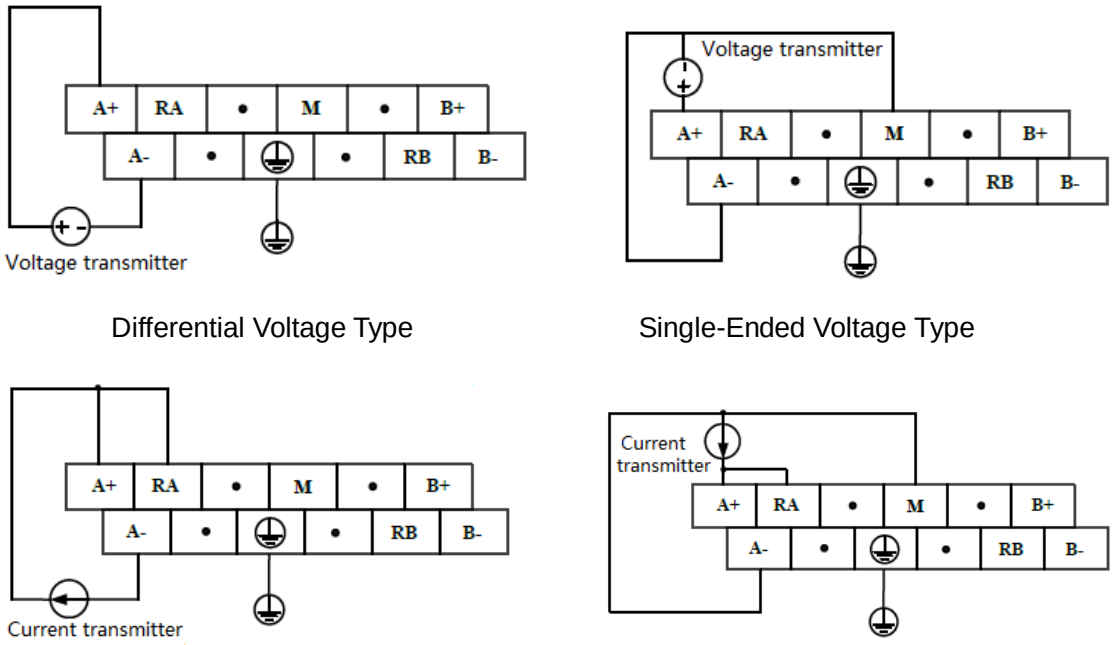

Differential Voltage Type　　Single-Ended Voltage Type

Current Type: Mutual Independence of Signal Negative Pole　Current Type: Short-circuit Connection of Signal Negative Pole

Figure 7-1　Terminal Wiring Diagram

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- LE5310 input channels can accept differential or single-ended voltage signal, or current signal. All 4-channel analog input follows the same rule.
- Differential voltage signal: “A+” connects to positive pole of voltage transmitter, “A-” connects to negative pole of voltage transmitter.
- Single-ended voltage signal: “A+” connects to positive pole of voltage transmitter, “A-” and “M” connect to negative pole of voltage transmitter after short-circuit connection.
- Current signal (mutual independence of negative pole): “RA” and “A+” connects to positive pole of current transmitter after short-circuit connection, “A-” connects to negative pole of current transmitter.
- Current signal (short-circuit connection of negative pole): “RA” and “A+” connects to positive pole of current transmitter after short-circuit connection, “A-” and “M” connect to negative pole of current transmitter after short-circuit connection.
- Figure 7-2 shows wiring mode of 2-wire and 4-wire type current transmitter, using external power supply or CPU module 24VDC output power supply for transmitter.
- '⏚' means grounding, can be connected to cabinet to offer electrostatic discharging channel for internal analog processing circuit.
- '•' means the channel cannot be connected or connection is not available.

- Only select one type for each input channel (voltage type or current type), and cannot use both types at the same time.

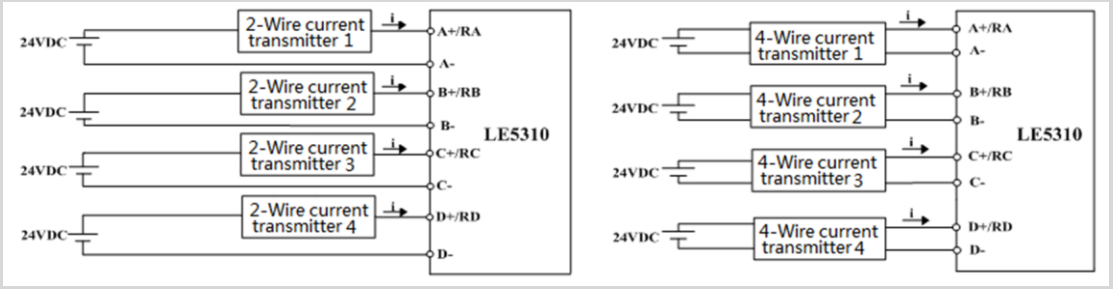


Figure 7-2 2-wire Type and 4-wire Type Circuit Diagram

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.1.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5310.

1. Module parameter information

Module parameter

Number	name	value	Default value	Maximum	Minimum
1	Filter parameters	64	64		
2	Dead zone value	0	0	4080	0

- Filter Parameters: Users can select based on actual needs. Maximum filtering parameter value is 256, the minimum value is 2, and the default value is 64. The greater value is, the better filtering effect is.
- Dead zone value: The module does not support dead zone.

2. Channel parameter information

Parameters of channel M2_CH_1

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Channel input signal	4-20mA	4-20mA		
2	Channel enable	Prohibit	Enable		

- Channel parameter: Users select type of input signal according to actual conditions (0-10V/0-20mA /4-20mA), and the default value is 4-20mA.
- Channel enable: Users can select based on actual needs. If the channel is used to measure signals, you will select Enable (default value), otherwise Prohibit.

7.2 LE5311 8 AI Module

LE5311 is an expansion module of LE series PLC and can offer 8 input channels for analog signal.

7.2.1 Technical Specifications

Table 7-4 Technical Specifications

Input Specifications		**Current consumption**	
Number of inputs	8	+24VDC (supplied by expansion bus)	0mA
Input type	Single-ended	+5VDC (supplied by expansion bus)	75mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications			Current consumption	
Input range	Voltage	0～10V	Isolation Withstand Voltage	
	Current	0～20mA/4～20mA	Isolation mode	Optocoupler (channel side to system)
Input accuracy		0.5% of full scale		No isolation between channels
Resolution		12 bits	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA
Input impedance	Voltage type	>1MΩ	Physical Specifications	
	Current type	250Ω	Dimensions W x H x D (mm)	70×97×89
Withstand voltage		±30V	Weight	200g
Withstand current		±32mA	Installation mode	DIN rail mounting or screw mounting
Step response time of analog input		1.5ms (up to 95%)	Operating temperature	0～60°C
Storage temperature		-40～70°C	Relative humidity	5%~95% (non-condensing)

7.2.2 Definitions of Indicator

Please refer to Chapter 7.1.2 Definition of Indicators.

7.2.3 Signal Type and Scale Range of Input Channels

Table 7-5 Signal Type and Scale Range of Input Channels

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage signal	0～10V	0～65535	0x0000～0xFFFF
Current signal	0～20mA	0～65535	0x0000～0xFFFF
	4～20mA	0～65535	0x0000～0xFFFF

7.2.4 Terminal Definition and Connection

The 8-channel analog input module LE5311 adopts two double-row pluggable terminals (6 x 2 and 6 x 2) and its definition of terminal and typical wiring are shown below.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

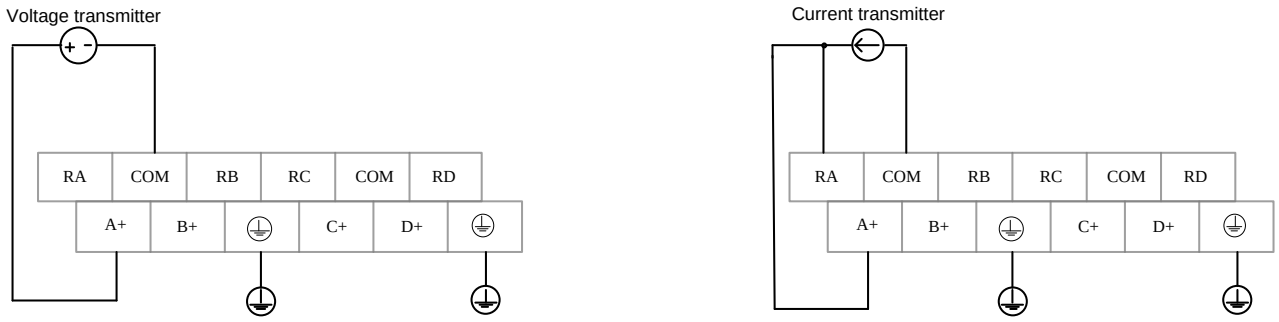


Figure 7-3 Upper Terminals Definition and Wring (voltage type) Upper Terminals Definition and Wring (current type)



Figure 7-4 Lower Terminals Definition

- LE5311 input channels can accept voltage signal or current signal.
- Voltage signal: “A+” connects to positive pole of voltage transmitter, “COM” connects to negative pole of voltage transmitter. Other channels follow the same rule.
- Current signal: “RA” and “A+” connects to positive pole of current transmitter after short-circuit connection, “COM” connects to negative pole of current transmitter. Other channels follow the same rule.
- The following figure shows wiring mode of 2-wire and 4-wire type current transmitter, using external power supply or CPU module 24VDC output power supply for transmitter.
- '⏚' means grounding, can be connected to cabinet to offer electrostatic discharging channel for internal analog processing circuit.

- Only select one type for each input channel (voltage type or current type), and cannot use both types at the same time.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

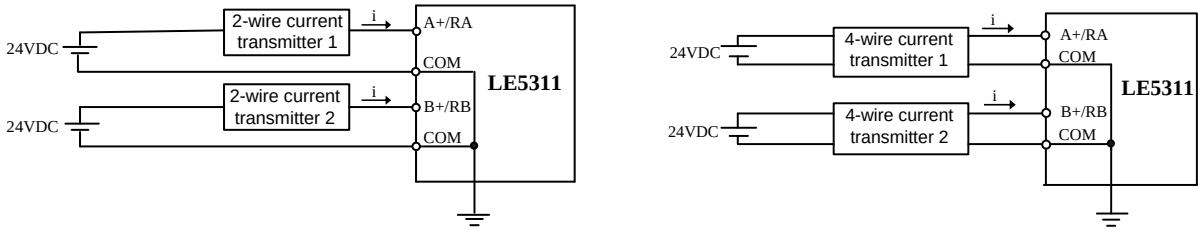


Figure 7-5 2-wire Type and 4-wire Type Wiring

7.2.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5311.

1. Module parameter information

Module parameter

Number	Name	Value	Default value	Maximum	Minimum
1	Filter parameters	64	64		
2	Dead zone value	0	0	4080	0

- Filter Parameters: Available values: 2, 4, 8, 16, 32, 64 (default value), 128 and 256.
- Dead zone value: Invalid parameter, no needs for setting.

2. Channel parameter information

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Channel input signal	4-20mA	4-20mA		
2	Channel enable	Enable	Enable		

- Channel input signal: Users select type of input signal according to actual conditions: 0-10V / 0-20mA / 4-20mA (default).
- Channel enable: Users can select based on actual needs. If the channel is used to measure signals, you will select Enable (default value), otherwise Prohibit.

7.3 LE5340 4-channel Thermocouple Input Module

LE5340 module is an expansion module of LE series PLC and works as a 4-channel thermocouple input module, it provides connection interface with one temperature measuring component thermocouple for the collection and disposal of thermocouple or millivolt voltage signals from field side.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.3.1 Technical Specifications

Table 7-6 Technical Specifications

Input Specifications		**Current consumption**	
Number of inputs	4	+24VDC (supplied by expansion bus)	0mA
Input type	J, K, T, N, E, R, S, B type floating thermocouple,-80～80mV voltage signal	+5VDC (supplied by for expansion bus)	135mA
		Isolation Withstand Voltage	
Input accuracy	0.1% of full scale (voltage signal, 25℃)	Isolation mode	Magnetic coupling (channel side to system)
Input impedance	≥1MΩ		No isolation between channels
Temperature resolution	0.1℃	Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA
Cold junction compensation	Supported	Physical Specifications	
Cold junction error	±1.5℃	Dimensions W x H x D (mm)	70×97×89
Wire break detection	Supported	Weight	210g
Sample refresh time	450ms (every 4 channels)	Installation mode	DIN rail mounting or screw mounting
Temperature floating	±35ppm/℃	Operating temperature	0～60°C
Common mode rejection ratio	>100dB	Storage temperature	-40～70°C
Differential mode rejection ratio	>50dB	Relative humidity	5%~95% (non-condensing)
Loop resistance of conductor (max.)	100Ω		

7.3.2 Definition of Indicators

Please refer to Chapter 7.1.2 Definition of Indicators.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.3.3 Signal Type and Scale Range of Input Channel

Table 7-7 Signal Type and Scale Range of Input Channel

Input Signal Type	Temperature Range(℃)	Corresponding Digital Code Value Range
S	-50～1768	-500～17680
R	-50～1768	-500～17680
B	250～1820	2500～18200
K	-270～1370	-2700～13700
N	-270～1300	-2700～13000
E	-270～1000	-2700～10000
J	-210～1200	-2100～12000
T	-270～400	-2700～4000
-80～80mV	-	-8000～8000

- Corresponding relationship between input signal and digital code: Digital code=temperature value* 10, Digital code= Millivolt signal * 100.

7.3.4 Terminal Definition and Connection

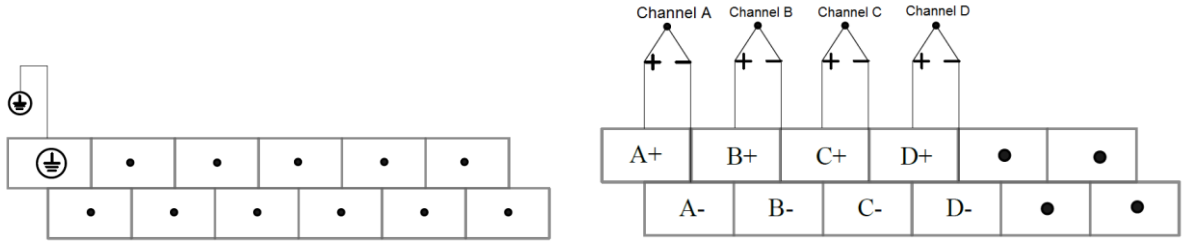


Figure 7-6 Upper Terminal Definition and Wiring Lower Terminal Definition and Wiring

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Terminal A+ and A- are two terminals of one input channel when being connected to external thermocouple. Connection methods of other channels follow the same rule.

  means grounding.

- • means the channel cannot be connected or connection is not available.

7.3.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5340.

1. Module Parameter Information

Number	Name	Value	Default value	Maximum	Minimum
1	Filter parameters	1	1		
2	Cold junction compensation	Yes	Yes		
3	Disconnection detection	Remain	Remain		

- Filter parameters: Advisable values: 1 (default value), 2, 4, 8, 16 or 32.
- Cold junction compensation: Yes (default), No.
- Disconnection detection:
  - Remain:——maintain current value when wire break error occurs.
  - Positive limit——when wire break error occurs, take the positive limit as 32767.
  - Negative limit——when wire break error occurs, take the negative limit as 32768.

2. Channel parameter information

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Signal type	J	J		
2	Channel enable	Enable	Enable		

- Signal type: Floating thermocouple type——J, K, T, N, E, R, S, B type.

  Millivolt voltage signal——-80～80mV.

- Channel enable: Enable (default) and Prohibit.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.4 LE5341 4-Channel RTD Input Module

As a 4-channel RTD input module, LE5341 module is an expansion module of LE series PLC, which can provide an interface connecting to RTD temperature measurement element and is used to acquire and process RTD signal.

7.4.1 Technical Specifications

Table 7-8 Technical Specifications

Input Specifications		**Current Consumption**	
Number of inputs	4	+24VDC (supplied by expansion bus)	0mA
Input type	Refer to signal type and measuring range of input channel	+5VDC (supplied by expansion bus)	80mA
Input range		Isolation Withstand Voltage	
Max. deviation of input		Isolation mode	Magnetic coupling (field side to system)
Input accuracy	0.5% of full scale (25℃)		No isolation between channels
Wiring mode	Three-wire connection	Isolation withstand voltage	500V AC for 1minute, leakage current <5mA
Temperature drift	±35ppm/℃	Physical Specifications	
Sampling refresh time	540ms (every 4 channels)	Dimensions W x H x D(mm)	70 X 97X 89
Differential mode rejection ratio	>60dB	Weight	215g
Common mode rejection ratio	>100dB	Mounting mode	DIN rail mounting or screw mounting
Short-circuit detection	Supported	Operating temperature	0~60°C
Wire break detection	Supported	Storage temperature	-40~70°C
Wire length	100m (the longest length away from sensor)	Relative humidity	5%~95% (non-condensing)
Wire loop resistance	20Ω, 2.7Ω(Cu50)		

7.4.2 Definition of Indicators

Please refer to Chapter 7.1.2 Definition of Indicators.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.4.3 Signal Type and Scale Range of Input Channels

Table 7-9 Signal Type and Scale Range of Input Channels

RTD Type	0℃ Resistance (Ω)	Resistance Range(Ω)	Temperature Measure Range(℃)	Absolute Error	Engineering Value Calculation Method
Cu:50Ω	50	39.242 ～ 82.136	-50～150	±1℃	Displayed resistance: resistance value=digital code value/100 displayed temperature: temperature=(digital code value-10000)/10
Pt 385-100Ω	100	18.5201 ～ 390.481	-200～200	±1℃	
			200～850	±2℃	
Pt 3916-100Ω	100	16.9960 ～ 327.744	-200～200	±1℃	
			200～630	±2℃	

7.4.4 Terminal Definition and Connection


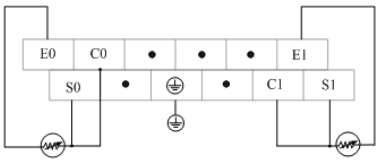


Figure 7-7 Upper Terminal Definition and Wiring

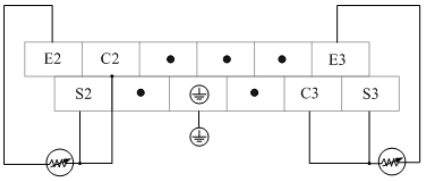

Lower Terminal Definition and Wiring

- Three-wire connection: one end of RTD is connected to “E”, the two wires at another end are connected to “S” and “C” respectively.
- ⏚ means grounding.
- • means the channel cannot be connected or connection is not available.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.4.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5341.

1. Module Parameter Information

Number	Name	Value	Default value	Maximum	Minimum
1	Filter parameters	64	64		
2	Filter mode	50HZ	50HZ		
3	Dead zone value	0	0	4080	0
4	Short circuit detection	Remain	Remain		
5	Disconnection detection	Remain	Remain		
6	Temperature or resistance output	Resistance_Output	Resistance_Output		

- Filter parameters: Advisable values: 2, 4, 8, 16, 32, 64 (default value), 128 and 256.
- Filter mode: 50Hz (default value), 60Hz.
- Dead area value: invalid parameter, no need to set.
- Short circuit detection (Disconnection detection):
  - Remain (default)-- when short circuit (disconnection) fault occurs, hold the current value.
  - Positive limit-- when short circuit (disconnection) fault occurs, temperature output: take the digital code corresponding to the max. temperature value of the RTD. Resistance output: 65535.
  - Negative limit-- when short circuit (disconnection) fault occurs, temperature output: take the digital code value corresponding to the min. temperature value of the RTD. Resistance output: 0.
- Temperature or resistance output: Temperature_Output, Resistance_Output (default)

2. Channel Parameter Information









Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Signal type	Cu50	Cu50		
2	Channel enable	Enable	Enable		

- Signal type: Refer to signal type and scale range of input channel.
- Channel enable: Enable (default) and Prohibit.

Wire break detection and short circuit detection functions can detect the follows faults:

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Table 7-10 Broken Line Detection and Short-circuit Detection

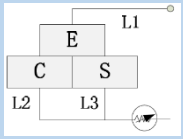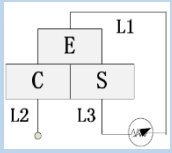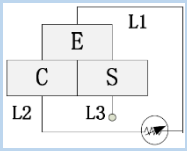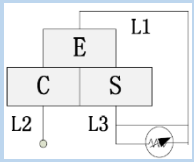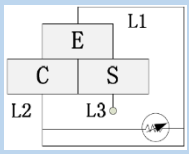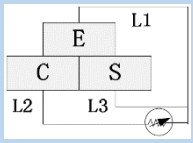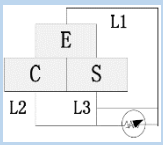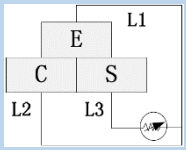Type	Wire break detection	Wire break detection	Wire break detection	Wire break detection
Wiring mode	 Wire break detection in E terminal	 Wire break detection in C terminal	 Wire break detection in S terminal	 Wire break detection in C terminal and ES short circuit
Type	Wire break detection	Error wiring	Short circuit detection	Short circuit detection
Wiring mode	 Wire break detection in S terminal and EC short circuit	 Error wiring	 Short circuit detection: all three wires short circuit	 Short circuit detection: EC short circuit

7.5 LE5342 8-Channel Thermistor Input Module

LE5342 is an expansion module of LE series PLC and can offer 8 input channels for thermistor signal.

7.5.1 Technical Specifications

Table 7-11 Technical Specifications

Input Specifications			Power Supply Specifications	
Number of inputs	8		Power source	Power supply via internal bus
Input type	Thermistor		Input voltage	5VDC±2%
NTC type	R is 10K under 25℃ and B is 3,976		Ripple wave	300mV
Input signal range	-30~130℃（300Ω~177KΩ）		Voltage changing rate	5V/10ms（10uF）
Accuracy	-30～80℃	1℃	Load capacity	400mA@5VDC
	80～105℃	2℃	Current Consumption	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications			Power Supply Specifications	
			+24VDC (supplied by expansion bus)	0mA
	105～130℃	5℃	+5VDC (supplied by expansion bus)	130mA
			Isolation Withstand Voltage	
Temperature resolution	-30～0℃	0.5℃	Channel to system	500VAC for 1min, leaking current <5mA
	0～100℃	0.1℃	Channel to channel	No isolation
	100～130℃	0.5℃	Physical Specifications	
Temperature drift	±100ppm/℃		Dimensions W x H x D (mm)	70×97×89
Differential mode rejection ratio	>60dB@50Hz		Installation mode	DIN rail mounting or screw mounting
Sampling refresh time	1s (every 8 channels)		Weight	220g
Wire break detection	Supported		Operating temperature	0~60°C
Software filtering	Supported, filtering parameter: 1, 2, 4, 8, 16 and 32 can be chosen.		Storage temperature	-40~70°C
Error reported time	Synchronization with data		Relative humidity	5%~95% (non-condensing)

7.5.2 Definition of Indicators

Table 7-12 Definition of Indicators

Power Supply PWR (Green)	Failure Status Indicator ERR (Red)	Description
ON	OFF	Module is in normal operation.
ON	ON	The module is in failed mode.
OFF	OFF	Power supply failure or module fault.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

7.5.3 Scale Range

Table 7-13 Scale Range

Measure temperature signal range	Corresponding Digital Code Value Range
-30～130℃	-300～1300

- Corresponding relationship between temperature value and digital code value: digital code value= temperature value× 10.

7.5.4 Terminal Definition and Connection

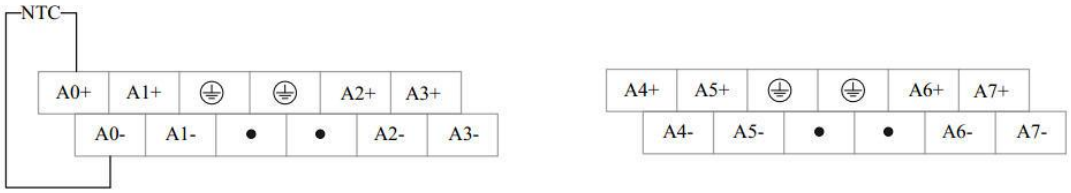


Figure 7-8 Terminals Schematic

- A0+ and A0- are input terminals of channel 0. Wiring of other channels follows the same rule.
- ⏚ means grounding.
- • means the channel cannot be connected or connection is not available.

7.5.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5342.

1. Module parameter information

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Number	Name	Value	Default value	Maximum	Minimum
1	NTC B value	3950	3950	4000	3000
2	NTC filter parameters	1	1		
3	NTC disconnection detection	Remain	Remain		

- NTC B value: Default value 3950.
- NTC filter parameters: Advisable values: 1, 2, 4, 8, 16 and 32.
- NTC disconnection detection:
  - Remain: Hold the last value.
  - Positive limit: value 1300.
  - Negative limit: value -300.

2. Channel parameter information

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Channel enable	Enable	Enable		

- Channel enable: Users can select based on actual needs. If the channel is used to measure signals, you will select Enable (default value), otherwise Prohibit.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 8 AO Module

8.1 LE5320 2 AO Module

LE5320 module is an expansion module of LE series PLC and can offer 2 output channels for analog signal.

8.1.1 Technical Specifications

Table 8-1 Technical Specifications

Output Specifications			**Current consumption**	
Number of outputs		2	+24VDC (supplied by expansion bus)	0mA
Output range	Voltage	0～10V	+24VDC (supplied by peripheral device)	Calculated by practical load
	Current	0～20mA/4～20mA	+5VDC (supplied by expansion bus)	90mA
Output accuracy		0.5% of full scale	Physical Specifications	
Resolution		12 bits	Dimensions W x H x D (mm)	47×97×89
Load impedance	Voltage	2000Ω（min.）	Weight	155g
	Current	600Ω（max.）	Installation mode	DIN rail mounting or screw mounting
Stable time (95% of new value)	Voltage	300us（R） 750us（1uF）	Operating temperature	0~60°C
	Current	600us （ 1mH ） 2ms （10mH）	Storage temperature	-40～70°C
Isolation mode		Optocoupler (field side to system)	Relative humidity	5%~95% (non-condensing)
Isolation withstand voltage		500VAC for 1 minute, leakage current <5mA		

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

8.1.2 Definition of Indicators

Table 8-2 Definition of Indicators

Type	Color	Status	Description
Power supply PWR	Green	ON	Power supply works in normal mode.
		OFF	Power is defective or not supplied. ④
Failure status indicator ERR	Red	ON	The module is in failed mode.
		OFF	No errors occurred or were detected.

Note ④: Generally, module components are damaged or module is powered off.

8.1.3 Signal Types and Corresponding Digital Code value

Table 8-3 Signal Type and Scale Range of Output Channels

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage signal	0～10V	0～65535	0x0000~0xFFFF
Current signal	0～20mA	0～65535	0x0000~0xFFFF
	4～20mA	0～65535	0x0000~0xFFFF

8.1.4 Terminal Definition and Connection

2-channel AO module LE5320 adopts two double-row pluggable terminals (3 x 2 and 3 x 2) and its definition of terminal and typical field wiring are shown in Figure 8-1.

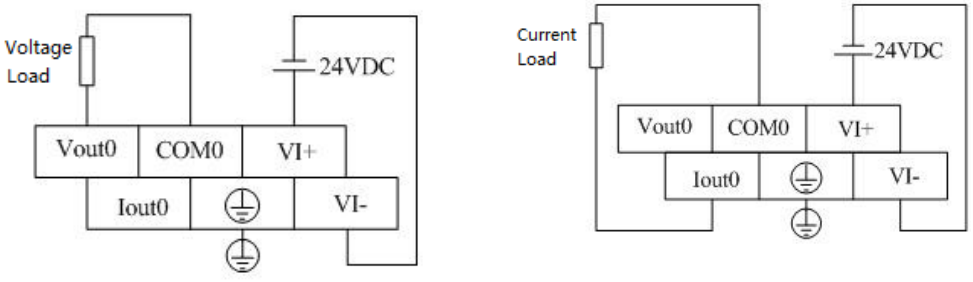


Figure 8-1 Upper Terminal Definition and Wiring (voltage load) Upper Terminal Definition and Wiring (current load)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved




Figure 8-2 Lower Terminal

- Vout0 and Vout1 are output terminals for external voltage load.
- Iout0 and Iout1 are output terminals for external current load.
- COM0 and COM1 are corresponding common output terminals of voltage type and current type.
- ⏚ means grounding.
- • means the channel cannot be connected or connection is not available.

- Only select one type for each Output channel (voltage type or current type), and cannot use both at the same time.


Table 8-4 Wiring Terminal Instruction

Signs	Description	Signs	Description	Signs	Description
Vout0	Voltage output channel 1 positive	Iout0	Current output channel 1 positive	COM0	Voltage (current) output channel 1 negative
Vout1	Voltage output channel 2 positive	Iout1	Current output channel 2 positive	COM1	Voltage (current) output channel 2 negative
VI+	External supply 24VDC positive	VI-	External supply 24VDC negative	•	No connection

8.1.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5320.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

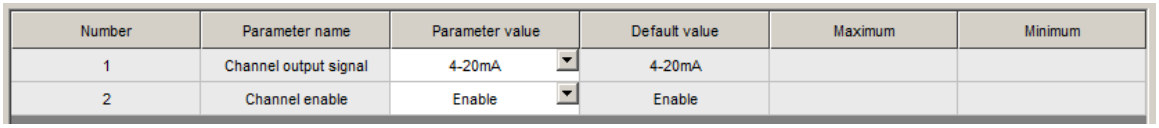

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Channel output signal	4-20mA	4-20mA		
2	Channel enable	Enable	Enable		

- Users select type of output signal according to actual conditions (0～10V/0～20 mA /4～20mA). The default value is 4～20mA.
- Users can select based on actual needs. If the channel is used to measure signals, you will select Enable (default value), otherwise Prohibit.

8.2 LE5321 4 AO Module

LE5321 module is an expansion module of LE series PLC and can offer 4 output channels for analog signal.

8.2.1 Technical Specifications

Table 8-5 Technical Specifications

Output Characteristics			**Current Consumption**	
Number of outputs		4	+24VDC (supplied by expansion bus)	0mA
Output range	Voltage	0～10V	+24VDC (supplied by peripheral device)	Calculated by practical load
	Current	0～20mA /4～20mA	+5VDC (supplied by expansion bus)	45mA
Output accuracy		0.5% of full scale	Physical Characteristics	
Resolution		12 bits	Dimensions W x H x D (mm)	70×97×89
Load impedance	Voltage	2000Ω（min.）	Weight	215g
	Current	600Ω（max.）	Installation mode	DIN rail mounting or screw mounting
Stable time (95% of the new value)	Voltage	300us（R） 750us（1uF）	Operating temperature	0~60°C
	Current	600us（1mH） 2ms（10mH）	Storage temperature	-40～+70°C
Isolation mode		Optocoupler (field side to	Relative humidity	5%~95%

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Output Characteristics		Current Consumption	
	system)		(non-condensing)
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA		

8.2.2 Definition of Indicators

Please refer to Chapter 8.1.2 Definition of Indicators.

8.2.3 Signal Type and Range Capacity of Output Channel

Table 8-6 Signal Type and Range Capacity of Output Channel

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage signal	0～10V	0～65535	0x0000~0xFFFF
Current signal	0～20mA	0～65535	0x0000~0xFFFF
	4～20mA	0～65535	0x0000~0xFFFF

8.2.4 Terminal Definition and Connection

4-channel analog output module LE5321 adopts two double-row pluggable terminals (6 x 2 and 6 x 2) and its definition of terminal and typical field wiring are show below.


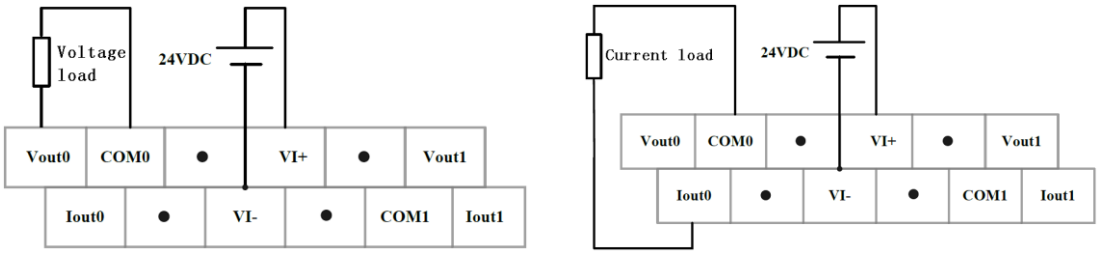


Figure 8-2 Upper Terminal Definition and Wiring (Voltage load) Upper Terminal Definition and Wiring (Current load) Lower Terminals

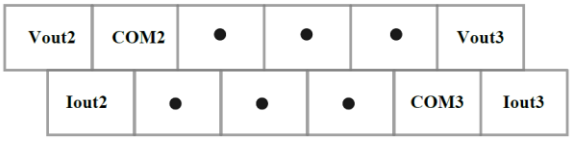

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Figure 8-2 Lower Terminal Definition and Wiring

- Vout0, Vout1, Vout2 and Vout3 are output terminals for external voltage type load.
- Iout0, Iout1, Iout2 and Iout3 are output terminals for external current type load.
- COM0, COM1, COM2 and COM3 are corresponding output common terminals of voltage type and current type.
- ⏚ means grounding.
- • means the channel cannot be connected or connection is not available.

Table 8-7 Terminal Definition and Instructions

Signs	Description	Signs	Description	Signs	Description
Vout0	Voltage output channel 1 positive	Iout0	Current output channel 1 positive	COM0	Voltage (current) output channel 1 negative
Vout1	Voltage output channel 2 positive	Iout1	Current output channel 2 positive	COM1	Voltage (current) output channel 2 negative
Vout2	Voltage output channel 3 positive	Iout2	Current output channel 3 positive	COM2	Voltage (current) output channel 3 negative
Vout3	Voltage output channel 4 positive	Iout3	Current output channel 4 positive	COM3	Voltage (current) output channel 4 negative
VI+	External supply 24VDC positive	VI-	External supply 24VDC negative	•	No connection

8.2.5 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5321.

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Channel output signal	4-20mA	4-20mA		
2	Channel enable	Enable	Enable		

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Users select type of output signal according to actual conditions (0-10V/0-20mA /4-20mA). The default value is 4-20mA.
- Users can select based on actual needs. If the channel is used to measure signals, you will select Enable (default value), otherwise Prohibit.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 9 AI/AO Module

9.1 LE5330 4 AI/ 2 AO Module

LE5330 module is an expansion module of LE series PLC and can offer 4 input channels and 2 output channels for analog signal.

9.1.1 Technical Specifications

Table 9-1 Technical Specifications

Input Specifications			**Output Specifications**		
Number of inputs		4	Number of outputs		2
Input range	Voltage	0～10V	Output range	Voltage	0～10V
	Current	0～20mA /4～20mA		Current	0～20mA /4～20mA
Input accuracy		0.5% of full scale	Output accuracy		0.5% of full scale
Resolution		12 bits	Resolution		12 bits
Input impedance	Voltage type	>1MΩ	Load impedance	Voltage	2000Ω（min.）
	Current type	250Ω		Current	600Ω（max.）
Input type		Differential / single-ended	Stable time (95% of new value)	Voltage	300us（R）750us（1uF）
Withstand voltage		15V		Current	600us （ 1mH ） 2ms （10mH）
Withstand current		32mA	Isolation mode		Magnetic coupling (field side to system)
Common mode voltage		Signal voltage + common mode voltage <12V	Isolation withstand voltage		500VAC for 1 minute, leakage current <5mA
Common mode rejection ratio		>80dB	Current Consumption		
Differential mode rejection ratio		>60dB （ 50Hz and 60Hz）	+24VDC (supplied by expansion bus)		0mA
Step response time of analog input		1.5ms (up to 95%)	+24VDC±5% (supplied by peripheral device)		34mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input Specifications		Output Specifications	
Isolation mode	Magnetic coupling (field side to system)	+5VDC (supplied by expansion bus)	35mA
Isolation withstand voltage	500VAC for 1 minute, leakage current <5mA	Physical Specifications	
Weight	231g	Dimensions W x H x D (mm)	70×97×89
Operating temperature	0～60°C	Installation mode	DIN rail mounting or screw mounting
Storage temperature	-40～70°C	Relative humidity	5%~95% (non-condensing)

9.1.2 Definition of Indicators

Table 9-2 Definition of Indicators

Type	Color	Status	Description
Power supply PWR	Green	ON	Power supply works in normal mode.
		OFF	Power is defective or not supplied. ⑤
Failure status indicator ERR	Red	ON	The module is in failed mode. see Note ⑤.
		OFF	No errors occurred or were detected.

Note ⑤: The module can't work in normal mode if ERR is on, a status which might be caused by circuit break of external supplied 24V or other circumstances.

- If ERR indicator in CPU module is ON, the diagnosis information is meaningless.

9.1.3 Signal Type and Scale Range of Input Channel

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage	0～10V	0～65535	0x0000～0xFFFF
Current	0～20mA	0～65535	0x0000～0xFFFF
	4～20mA	0～65535	0x0000～0xFFFF

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

9.1.4 Signal Type and Range Capacity of Output Channel

Signal Type	Scale Range	Corresponding Digital Code Value Range	
		Decimal	Hexadecimal
Voltage Signal	0～10V	0～65535	0x0000～0xFFFF
Current Signal	0～20mA	0～65535	0x0000～0xFFFF
	4～20mA	0～65535	0x0000～0xFFFF

9.1.5 Terminal Definition and Connection

4-channel AI and 2-channel AO module LE5330 adopts two double-row pluggable terminals (6 x 2 and 6 x 2) and its definition of terminal and typical field wiring are shown in Figure 9-1.

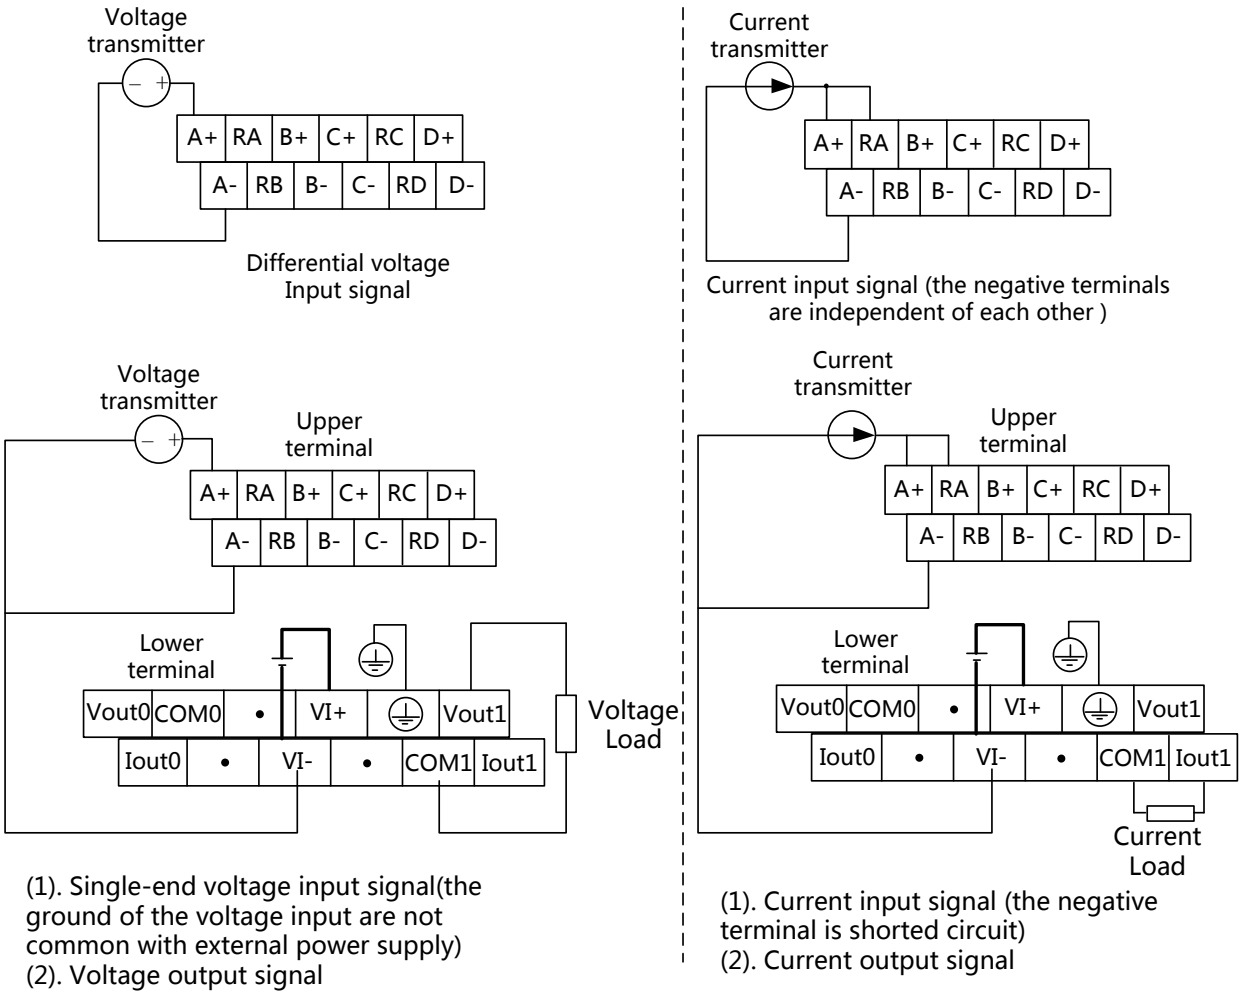


Figure 9-1 Terminal Definition and Field Wiring

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Input channels of LE5330 module can accept differential or single-ended voltage signal, or current signal. All 4-channel analog input follows the same rule.

- Differential voltage signal: “A+” connects to positive pole of voltage transmitter, “A-” connects to negative pole of voltage transmitter.
- Single-end voltage signal:
  - When the input voltage signal of single-ended shares the same grounding with the external power supply, “A+” connects to positive pole of voltage transmitter, “A-” connects to negative pole of voltage transmitter.
  - When the input voltage signal of single-ended does not share the same grounding with the external power supply, “A+” connects to positive pole of voltage transmitter, “A-” and “VI-” connect to negative pole of voltage transmitter after short-circuit connection.
- Current Signal:
  - When negative pole of multiple-circuit current signals are mutual independence, “RA” and “A+” connects to positive pole of current transmitter after short-circuit connection, “A-” connects to negative pole of current transmitter.
  - When negative pole of multiple-circuit current signals are short-circuit connection, “RA” and “A+” connects to positive pole of current transmitter after short-circuit connection, “A-” and “VI-” connect to negative pole of current transmitter after short-circuit connection.
- External power supply range : 24V±10%



- ⏚ means grounding, can be connected to cabinet to offer electrostatic discharging channel for internal analog processing circuit.
- • means the channel cannot be connected or connection is not available.



- Only select one type for each input/output channel (voltage type or current type), and cannot use both types at the same time.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

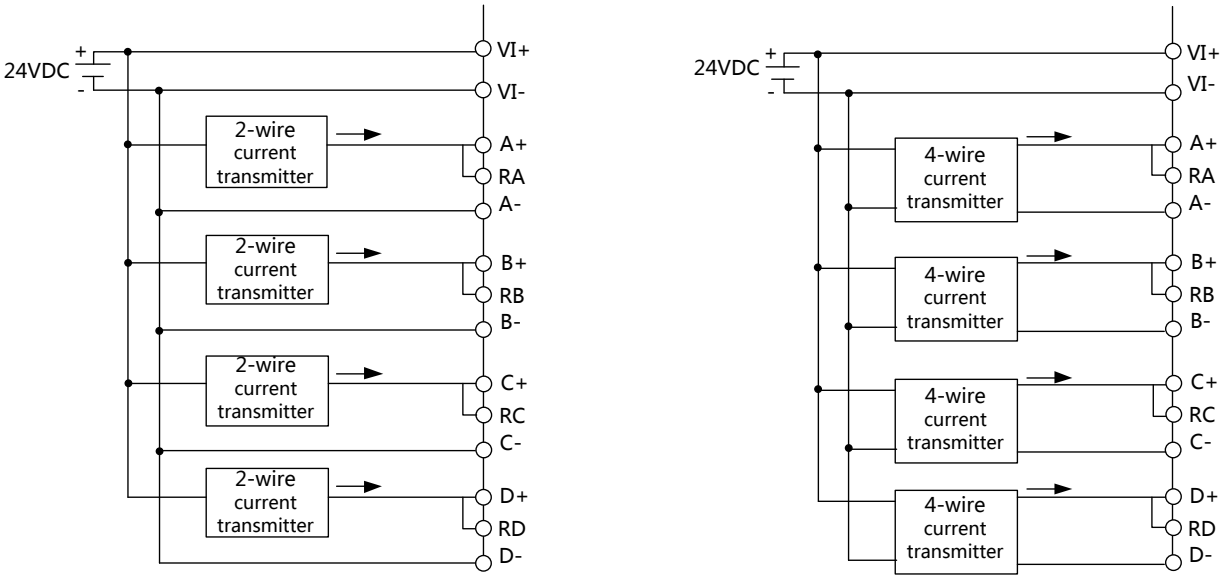


Figure 9-2 2-wire Type and 4-wire Type Wiring

9.1.6 Electrical Schematic Diagram

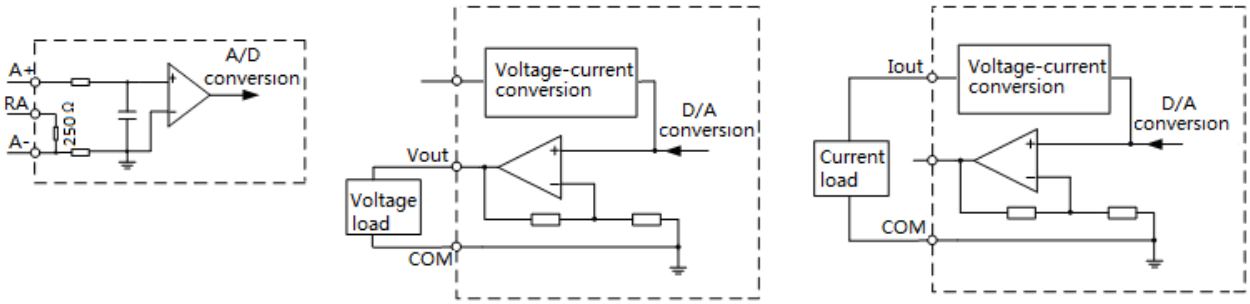


Figure 9-3 Input Channel Voltage Type Load Output Channel Current Type Load Output Channel

9.1.7 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5330.

1. Module Parameter Information

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Number	Name	Value	Default value	Maximum	Minimum
1	Filter parameters	64	64		
2	Dead zone value	0	0	4080	0

- Module parameter:
  - ☐ Filtering parameter can be selected according to the needs.
  - ☐ Filtering parameter maximum value is 256, minimum value is 2, default value is 64. The greater the filtering parameter, the best the filtering effect.
  - ☐ This module does not support the dead zone function.

2. Channel parameter Information

Number	Parameter name	Parameter value	Default value	Maximum	Minimum
1	Channel input signal	4-20mA	4-20mA		
2	Channel enable	Enable	Enable		

- Channel parameters: Users select type of input signal according to actual conditions (0～10V／0～20mA／4～20mA). The default value is 4-20mA.
- Users can select based on actual needs. If the channel is used to measure signals, you will select Enable (default value), otherwise Prohibit.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 10 Communication Module

10.1 LE5401 Profibus-DP Slave Station Module

- Latest GSD of LE5401 module is stored in the file 'local disk:\AutoThink\DP_GSD'. Please get and use.

LE5401 module is a communication expansion module of LE series PLC. It can connect LE PLC Profitbus DP network and work as a slave station.

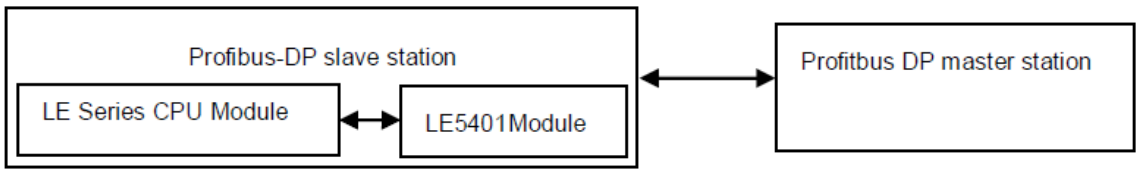


Figure 10-1 PROFIBUS-DP Network

10.1.1 Technical Specifications

Table 10-1 Technical Specifications

Communication Specifications		Current Consumption	
Number of communication port	1	+24VDC (supplied by expansion bus)	0mA
Type of communication port	9-pin D female socket/terminal	+5VDC (supplied by expansion bus)	145mA
Size of input and output area	64 bytes each (max.)	Isolation Withstand Voltage	
Profibus-DP baud rate	9.6, 19.2, 45.45, 93.75, 187.5, 500kbps 1.5, 3, 6, 12 Mbps (self-adapting)	Isolation mode	Optical Isolation
		Isolation withstand voltage	500VAC for 1 minute. Leakage current <5mA

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Communication Specifications		Current Consumption	
Station address	0～125 (set by DIP switch)	Environmental Conditions	
Maximum station number of each section	32	Operating temperature	0～+60°C
Maximum station number of each network	126 (including master station)	Storage temperature	-40～+70°C
Physical Specifications		Relative humidity	5%~95% (non-condensing)
Dimensions W x H x D (mm)	70×97×89		
Weight	270g	Installation mode	DIN rail mounting or screw mounting

10.1.2 Definition of Indicators

Table 10-2 Definition of Indicators

Type	Color	Status	Description
RUN	Green	ON	Module is in normal operation
		Flashing	Communication is under construction
		OFF	No power-on or module damaged
COM	Green	ON	Normal communication
		OFF	No communication
ERR	Red	ON	Communication Error
		OFF	Normal communication

10.1.3 Relationship between Communication Rate and Cable Length

Table 10-3 Relationship between Communication Rate and Cable Length

Baud rates	Cable length
<93.75kbps	1,200m
187.5kbps	1,000m

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Baud rates	Cable length
500kbps	400m
1～1.5Mbps	200m
3～12Mbps	100m

10.1.4 Terminal Definition and Wiring



LE 5401 Terminal DB9 Female Socket



DIP Switch

Figure 10-2 Terminal Definition

- LE5401 provides two wiring modes: terminal and DB9 pin type connector. Choosing one wiring mode to connect with DP master station.
- 8-digit DIP switch are used to set up DP slave station address. Status of each DIP switch represents different binary value (ON indicates 0 and OFF indicates 1); decimal value corresponding to 8-digit binary value consisting of 8 DIP switch status is the DP slave station address of LE5401.
- • means the channel cannot be connected or connection is not available.
- ⏚ means grounding.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.1.5 The Corresponding Relationship between DIP Switch State and Station Address

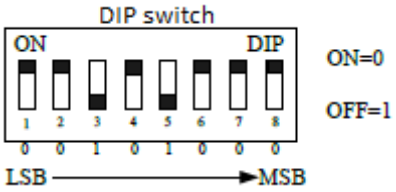


Figure 10-3 DIP Switch

- Description indicated: station address.
- Binary system: 00010100 Decimal system: 20.

- According to Profibus-DP protocol, the 8th bit is invalid, which must be switched to ON status.

10.1.6 Pin Definition of 9-pin D Type Interface




Figure 10-4 9-pin D Type Interface

Table 10-4 Definition of DB9 interface

Pin serial number	Signal Definition	Pin serial number	Signal Definition
1	shielding ground	6	+5V
2	—	7	—
3	Communication signal DP+	8	Communication signal DP-
4	—	9	—
5	GND	-	—

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.1.7 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5401.

Number	Name	Value	Default value	Maximum	Minimum
1	Master station write M zone offset add...	200	200	4095	0
2	Write bytes	2byte	2byte		
3	Master station read M zone offset addr...	200	200	4095	0
4	Read bytes	2byte	2byte		

- Default values of write in address and read address of master station are all %MB200. Communication data is accessible by direct definition of the address as ARRAY variable of %MB200. Users can define data group size according to actual demand (Figure 10-5 is only for example).

No.	Variable Name	Address	Variable Description	Variable Type	Initial Value	Power Fail Safeguard
0001	p1	%MB200		ARRAY[0..63] OF BYTE		FALSE

Figure 10-5 Array Definition

- When write in address of master station is the same with read address of master station, data coverage may be caused to write in and read of the same address. Generally, it is suggested to set different values for “offset address in master station write in M zone” and “offset address in master station read M zone”
- Write bytes: Set the byte length of write.
- Read bytes：Set the byte length of read.

10.2 LE5403 Ethernet Communication Module

LE5403 module is an expansion module of LE series PLC. LE series PLC can be connected to the network as a Modbus TCP slave station via LE5403 module.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

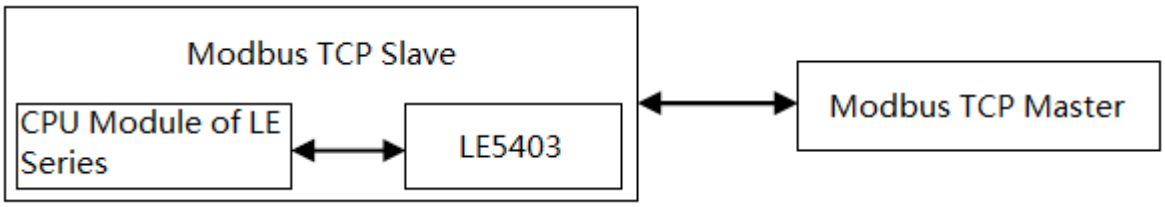


Figure 10-6 Modbus TCP Network

10.2.1 Technical Specifications

Table 10-5 Technical Specifications

Communication Specifications		**Power Supply Specifications**	
Number of communication ports	1	Power source	Supplied by backplane
Type of communication interface	RJ45	+24VDC (supplied by expansion bus)	0mA
		+5VDC (supplied by expansion bus)	210mA
Communication protocol	Modbus TCP, AT communication protocol	Isolation Withstand Voltage	
Baud rate	10/100Mbps, self-adaption	Isolation mode	Field side to system
Communication data memory	I/Q/M	Isolation withstand voltage	500VAC for 1 minute, leaking current <5mA
User data memory	Max.48 bytes for write operation, max. 200 bytes for read operation		
Connection number (Ethernet devices connected at the same time)	3	Environmental Conditions	
Physical Specifications		Operating temperature	0~60°C
Dimensions W x H x D(mm)	70 x 97 x 89	Storage temperature	-40~70°C
Weight	245g	Relative humidity	5%~95%(non-condensing)
Mounting mode	DIN rail mounting or screw mounting		

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- A switch shall be added if length of 10Base T transmission distance exceeds 100m..
- Recommend you use industrial switch, please restart module after the fault has been cleared when a ring network fault occurs during use.

10.2.2 Definition of Indicators

Table 10-6 Definition of Indicators

Type	Color	Status	Description
PWR	Green	ON	Power supply works in normal mode.
		OFF	Power is defective or not supplied.
LINK	Green	ON	Ethernet connection has been established.
		OFF	Ethernet connection is not established.
RX/TX	Green	Flashing	Data sending or receiving is on-going.
		OFF	No data sending or receiving.
ERR	Red	ON	Communication error or incorrect configuration.
		OFF	No errors occurred or were detected.

10.2.3 Terminal Definition

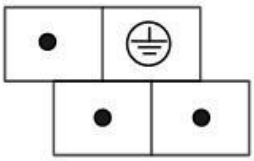


Figure 10-7 LE5403 Terminal

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved




Figure 10-8 RJ45 Port

- • means the channel cannot be connected or connection is not available.
- ⏚ means grounding.
- RJ45 port is used to connect Ethernet cable.

10.2.4 Software Configuration

The LE5403 module can be configured as a Modbus TCP slave. In the communication, you need to add the LE5403 module in the Autothink configuration software, and set the LE5403 IP address, subnet mask, gateway and other communication parameters.

For example, in Figure 10-9, set the IP address of the LE5403 to 172.21.27.20, the subnet mask to 255.255.255.0, and the gateway to 172.21.27.254.

After setting, set the IP address of the master station to the same network segment (or the same VPN) as the LE5403 and set the correct subnet mask and gateway. Then LE controller as the MODBUS TCP slave communicates with the master station (Such as the host computer configuration software, touch screen, etc.).

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

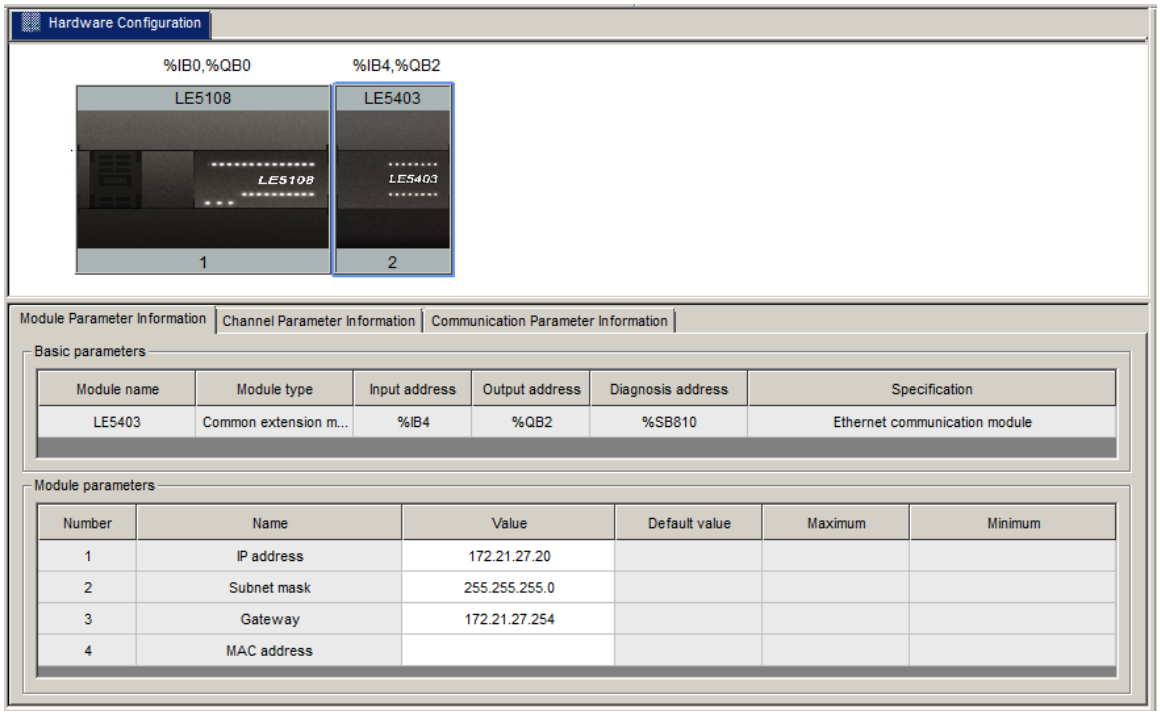


Figure 10-9 LE5403 Configuration

- IP address and subnet mask shall be configured.
- Gateway shall be configured if both communication sides are not in the same segment.
- There is no need to configure MAC address.

- When the LE5403 is used as a Modbus TCP slave, the master station communication parameter Response timeout is recommended for 1.5s.
- The maximum links are three at the same time. If the links trying to connect are more than three links, the system will disconnect one of the three connected links. At the same time, if the disconnected link attempts to reconnect, the other links will be unstable and cause packet loss.
- The reading analog or digital must not exceed 200Bytes one time. The writing analog or digital must not exceed 48 Bytes one time. At the same time, operation length must not exceed data length of I, Q and M areas in matching CPU.
- If Modbus master does no inquiry frame within ten seconds, LE5403 will close TCP connection initiatively.
- The module does not support high-volume ARP access or is used in a network storm environment.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved


10.2.5 Modbus TCP Functional Description

Table 10-7 Functional Code Description

Function Code	Name	Function
01	Read on-off output status	Acquire current status of a group of on-off output
02	Read on-off input status	Acquire current status of a group of on-off input
03	Read analog output status	Acquire current status of a group of analog output
04	Read analog input status	Acquire current –status of a group of analog input
05	Force one-way on-off output	Force to set a value for some on-off output
06	Force one-way analog output	Force to set a value for some analog output
15	Force multi-way on-off output	Force to set values for several on-off output
16	Force multi-way analog output	Force to set values for several analog output

10.3 LE5404 GPRS Communication Module

LE5404 is an expansion module of LE series PLC to establish the connection with Internet through GPRS wireless network to exchange remote data.

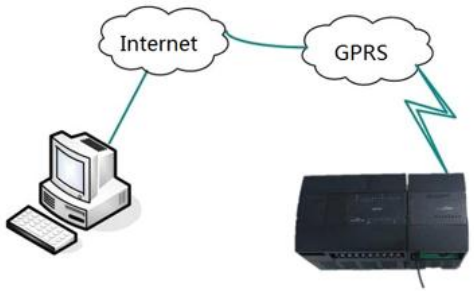

Operating frequency：GSM850/EGSM900/GSM1800

Figure 10-10 GPRS Wireless Network

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.3.1 Technical Specifications

Table 10-8 Technical Specifications

Communication Specification		Power Supply Specifications	
Server configuration	IP address and DNS	Power source	Supplied by peripheral device
Type of communication port	Wireless communication		Supplied by expansion bus
Communication pattern	Transparent communication from center to multiple points	Permissible voltage range	7.5 ～ 28.8VDC (supplied by peripheral device)
Communication protocol	Modbus TCP		5VDC (supplied by expansion bus)
Communication data memory	I/Q/M	Current Consumption	
User data memory	50 bytes for write operation and 200 bytes for read operation	+24VDC (supplied by expansion bus)	0 mA
		+24VDC (supplied by peripheral device)	35 mA
		+5VDC (supplied by expansion bus)	30 mA
Physical Specifications		Environment Conditions	
Dimensions W x H x D (mm)	70×97×89	Operating temperature	0～60°C
Weight	215g	Storage temperature	-40～70°C
Installation mode	DIN rail mounting or screw mounting	Relative humidity	5%~95% (non-condensing)

10.3.2 Definition of Indicators

Table 10-9 Definition of Indicators

Type	Color	Status	Description
RUN	Green	Flashing slowly	Module is in normal operation
COM	Green	Flashing slowly	GPRS network is normal
LINK	Green	Flashing slowly	Connection of module to server is normal
FLASH	Green	Flashing slowly	Module status indication
RX	Green	Flashing	Receive data package from server

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

TX	Green	Flashing	Send data package to server

- Slow flash frequency is 0.5Hz.
- Indicator flashing, holding time that LED indicator is ON status for 50ms.
- LED indicators are ON in order FLASH, RUN, COM, LINK after power on.
- COM is ON and LINK is ON: GPRS network is abnormal.
- COM slowly flashes, and LINK is ON: connection of LE5404 module with server is broken.

10.3.3 Terminal Definition and Wiring

The input terminals use fence terminal blocks, with a double row terminal (2 * 2), the input terminals are defined as shown in Figure 10-11.

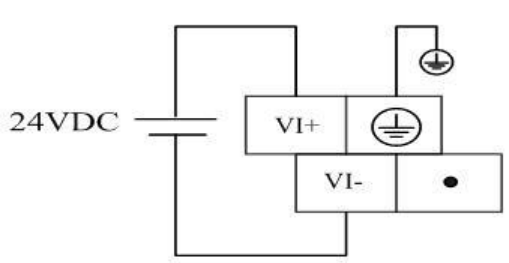



Figure 10-11 Terminal Wiring

- VI+ and VI- are the terminals of external power supply.
- • means the channel cannot be connected or connection is not available.
- ⏚ means grounding.

10.3.4 Software Configuration

In AT programming software, following parameters will be displayed on hardware configuration window when PLC is configured with LE5404.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

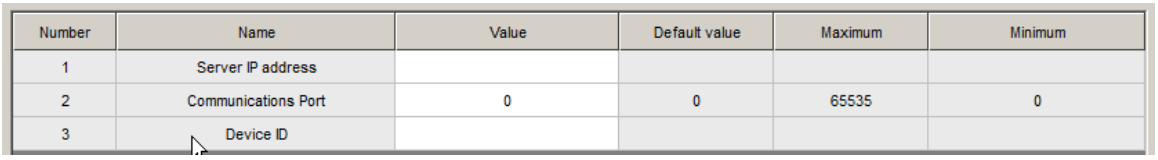

Number	Name	Value	Default value	Maximum	Minimum
1	Server IP address				
2	Communications Port	0	0	65535	0
3	Device ID				

- Server IP address: Remote monitoring center computer.
- Communication port: Customized setting to avoid using of normal Ethernet communication terminal (e.g. 80).
- Device ID: User need to set up the 11-digital device ID during software configuration and the device ID is compatible cell-phone SIM card. Either Cell-phone number setting or customized setting is allowed.



- During construction engineering, AT related parameters cannot be blank. Ensure the device ID number is 11 digits.

See APPENDIX 2 Operating Instructions to LE5404 for detail use instructions.

10.4 LE5405 Gateway Communication Module

LE5405 is the gateway module based on Modbus-TCP and offers a channel for the communication between MC1000 series motion controllers and LE series expansion I/O modules.

10.4.1 Technical Specifications

Table 10-10 LE5405 Technical Specifications

Power Supply Specifications		
Module power supply	Operating voltage	20.4～28.8 VDC
	Rated voltage	24 VDC
	Withstand voltage	19.2～30 VDC
	Consumed power	< 3W (the function of the module itself)
	Anti-reverse connection	Supported, max. 30 VDC
Module output power supply (backplane bus	Load capacity	3 A@5 VDC (to provide via bus interface of extended backplane)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Power Supply Specifications		
interface)		2.1 A@ (supply voltage -1V) (to provide via bus interface of extended backplane)
Physical interface		
Ethernet	Quantity of communication port	1
	Level standard	IEEE 802.3
	Interface type	Standard RJ45
	Baud rates	10/100 Mbps, self-adapting
	Communication protocol	Modbus-TCP Salve
Physical Specifications		
Installation mode	DIN rail mounting or screw mounting	
Terminal	Pluggable	
Dimensions W×H×D (mm)	78 mm ×97 mm ×90 mm	
Weight	300 g	
Environmental Conditions		
Operating temperature	0～60°C	
Storage temperature	-40～70°C	
Operating humidity	5%~95% (non-condensing)	
Working altitude	⩽3000 m	
Reliability		
Hot swapping (expansion LE I/O)	Not supported	
Fault isolation	None	
Insulation resistance	The resistance between two isolated terminals: Under general test condition, ⩾5MΩ Under heat humid condition, ⩾1MΩ	

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.4.2 Interface Description

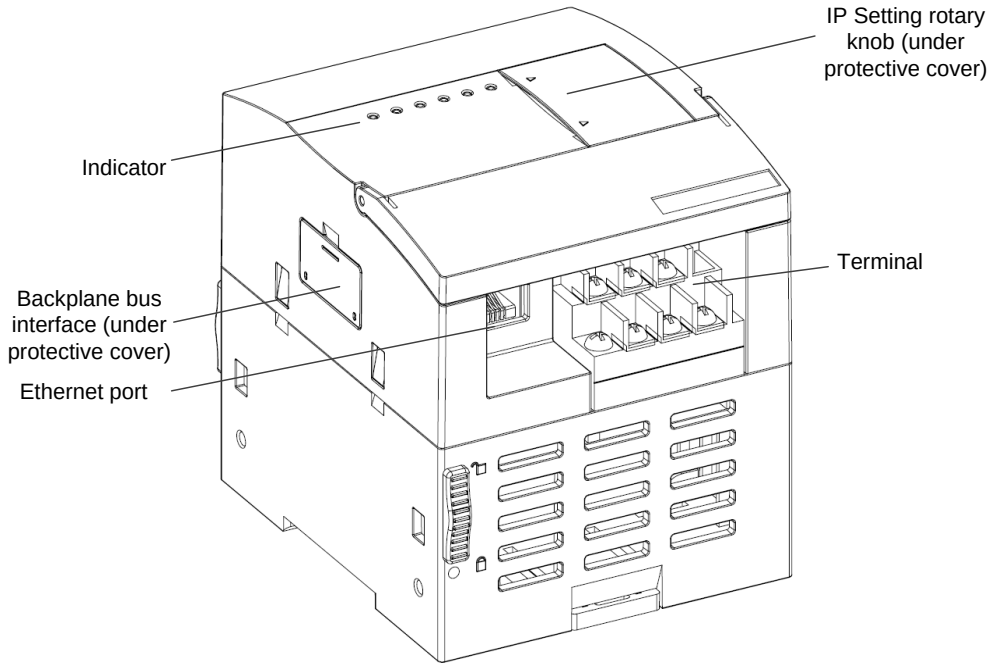


Figure 10-12 LE5405 Schematic

10.4.2.1 Wiring Terminals




Figure 10-13 LE5405 Schematic

Table 10-11 Power Interface List

Terminal	Description
VI+	Positive terminal of power supply input
VI-	Negative terminal of power supply input
⏚	Grounding
⏚	Grounding
*	Unavailable

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.4.2.2 Definition of Indicators

There are 6 indicators in LE5405 module, of which RUN/STOP and IP ADDR are double-color indicators. Description as follows:

Table 10-12 Definition of Indicators

Type	Color	Status	Description
PWR (Power supply indicator)	Yellow	ON	Power supply works in normal mode.
		OFF	Power is defective or not supplied.
RUN/STOP (Module is under operation/ Stop indicator)	Yellow and green	ON green	Module is operating with load (with configuration files).
		ON yellow	Module is operating without load (without configuration files).
ERR (Abnormal operation indicator)	Red	ON	A certain fault or some faults occurred which can be diagnosed. (such as wrong configuration, module off-line and memory error).
		OFF	No error occurred.
LINK (Ethernet LINK indicator)	Green	ON	Physical layer connection of Ethernet was established.
		OFF	No physical layer connection of Ethernet was established.
ACT (Ethernet data exchange indicator)	Yellow	Flashing	Communication package is under delivery or receiving.
		OFF	No data.
IP ADDR (Ethernet IP address indicator)	Yellow and green	OFF	Last byte of IP value is greater than 1 and less than 99.
		ON green	Last byte of IP value is equal or greater than 100 but less than 199.
		ON yellow	Last byte of IP value is equal or greater than 200 but less than 255.
		Flashing yellow	Invalid IP.
		Flashing green	IP reset.

10.4.2.3 Ethernet Interface

It is used to connect the controller and PC.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

10.4.2.4 Backboard Bus Interface

It is used to connect the LE I/O module.

10.4.2.5 IP Setting Knob

Open the protection cover, through the X1, X10 knob, you can set a single digit and ten digit in the fourth field of LE5405 IP address.

- X1: single digit, in the range 0 to 9
- X10: ten digit, in the range of 0 to 9



- IP address setting refers to Assistant Tool in Chapter 5 in *AutoThink V3.1 User Manual_Project Configuration.*

10.4.3 Terminal Wiring

When I / O in the MC controller does not meet the field application, it is extended via LE5405 to connect LE series I / O module.

LE5405 is connected with MC series controller via switch and connected with LE expansion I/O module through backplane bus.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

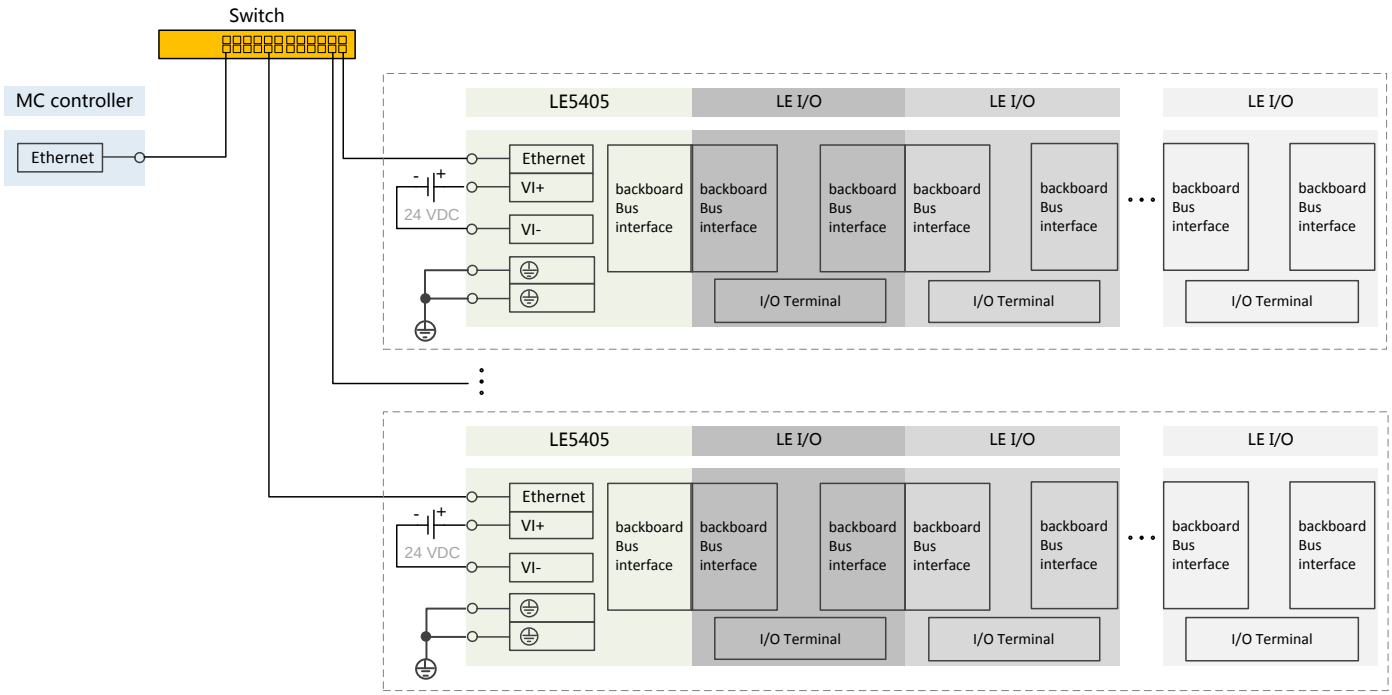


Figure 10-14 Wiring Schematic

- Ethernet cable: Shielded twisted pair than category 5 with length of ⩽50 m is recommended.
- Ethernet switch: Industrial Ethernet switch of strong anti-jamming capacity is recommended. The switch should be well grounded.
- It is not allowed to plug LE I/O module when module is powered.

10.4.4 Use Instruction

- ☐ Number of LE5405 supported by single MC series controller cannot be more than 10.
- ☐ Maximum number of LE expansion module supported by single LE5405 can't be more than 8.
- ☐ Total I/O points of LE expansion modules through LE5405 can't be more than 200.
- ☐ Follow the above principles, combined with LE5405 backboard bus interface to output LE I / O according to power load capacity configuration requirements.
- ☐ It is not allowed to connect 2 or more MC series controllers to one LE5405.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- After the AT is compiled, if the LE5405 configuration is unsuccessful within 3 minutes, it will not be configured again (need to be recompiled again for configuration).

10.4.5 Power Calculation

Extended LE I / O quantity of MC1000 series motion controller is decided directly by the 5 VDC and 24 VDC output power consumption of LE5405, the specific formula is as follows:

N1 * DI / DO module + N2 * AI module + N3 * AO module (N1, N2, N3 is the number of LE I / O modules of each type)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 11 Other Modules

11.1 LEA5820 Data Memory Card

LEA5820 is PLC's data memory card of LE series which is used to store the user program and the recipe data. It can be used by socketing the USB-A type plug with CPU module.

11.1.1 Write Memory Card Function

Insert LEA5820 into CPU memory card slot and connect the computer with the LE programming cable.

Operation via menu [Online] – [Write Storage Card] in AutoThink software, then the AT project is written in memory card.

11.1.2 The Function of Controller to Upload Project From Memory Card

CPU module slide switch is in STOP state, please insert LEA5820 into CPU memory card slot and make sure the installation is well. Now, PLC is waiting for uploading program from the memory card. The running indicator is flashing slowly (1Hz).

Setting the CPU module via the STOP-RUN-STOP state, at this moment, PLC is uploading the user's program from the memory card. The running indicator is flashing (4Hz).

After uploading, the state of the running indicator is consistent with the actual state of slide switch.



- After removing memory card, the user's project program can operate normally.

11.1.3 LEA5820 Definition of indicators

Table 11-1 Definition Of Indicator

Type	Color	Status	Description

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Type	Color	Status	Description
Power supply	Green	ON	Power supply works in normal mode
		OFF	Power is defective or not supplied
State indicator	Green	ON or Flashing	Data transmission is normal
		OFF	Memory card is in failed mode

11.2 LEX5810 Programming Cable, 3m

LEX5810 is a programming cable that connects RS485 round interface of PLC to USB port of computers. It can realize application program download and real-time communication between PLC and PC monitoring software.

RS485 round interface definition see Chapter 3.1.6 485 Downloading Interface.

11.2.1 Technical Specifications

Table 11-2 Technical Specifications

General Characteristics	
Shell	Plastic package
Cable Specifications	
Material	Copper wire
Number of cores	3
Diameter of core	7 strands for every core, diameter of each strand ≥0.12mm
Length of cable	3m
Communication Characteristics	
Operating system	Windows 2000, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows Server 2008 R2.
USB physical interface protocol	USB2.0
Port on computer side	USB port, hot swapping supported
Physical interface on PLC side	PS/2
Electrical standard on PLC side	Comply with EIA/TIA RS-485 standard; RS485 is half-duplex

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

General Characteristics	
Signal on PLC side	A, B, GND, PGND
Communication rate of serial port	38,400bps
Power source	Power from USB port of computers
Isolated or not	No
Support serial data format	8-bit data, odd/even/no parity-bit, 1 stop-bit
Environmental Conditions	
Operating temperature	0℃~＋60°C
Relative humidity of operating environment	5%~95% (non-condensing)
Storage temperature	-40℃~＋70°C
Relative humidity of storage environment	5%~95% (non-condensing)

11.3 LEX5812　Expansion Cable, 2m

LEX5812 as extension cable of the new generation micro PLC system, that is used to inter-connection and data transmission between LE modules.



Figure 11-1　Cable Schematic

 All Rights Reserved

11.3.1 Technical Specifications

Table 11-3 Technical Specifications

General Specifications	
Cable Specifications	
Material	Copper wire
Number of cores	10
Core diameter	7 shares in each core , diameter of each share≥ 0.12mm
Cable length	2m
Cable Interface Specifications	
Pin material	Phosphor bronze
Pluggable times	1000 times
Cable resistance	≤0.5Ω
Insertion force	19.6N
Environment Condition	
Operating temperature	0℃~＋60°C
Relative humidity of operating environment	5%~95% (non-condensing)
Storage temperature	-40℃~＋70°C
Relative humidity of storage environment	5%~95% (non-condensing)

11.4 LEX5813 RS485 round Interface to Two wires RS485 Communication Cable, 3m

LEX5813 as bus communication cable for RS485 round interface to two wires RS485, that is used to communication between CPU module and the user device.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 11-2 Cable Schematic

Refer to the Chapter 3.1.6 485 Downloading Interface

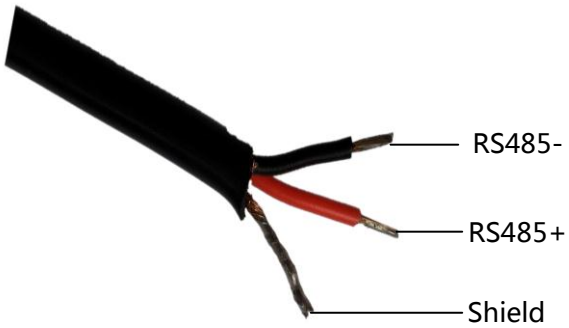


Figure 11-3 Wire Schematic

11.4.1 Technical Specifications

Table 11-4 Technical Specifications

General Specifications	
Cable Specifications	
Material	Copper wire
Number of cores	3 (Contains shields)
Core diameter	7 shares in each core, diameter of each share≥ 0.12mm

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

General Specifications	
Cable length	3±0.1m
Electrical Specifications	
Rated value	50V, 1.0A
Contact resistance	≤0.03Ω
Baud rates (bps)	≥115200
Withstand voltage	500VAC
Insulation resistance	≥100MΩ(250V)
Cable plug	Mini-DIN8 and three core wires
Shield	The shield must be connected to Mini-DIN8 metal shell
Environment Specifications	
Operating temperature	0℃~＋60°C
Relative humidity of operating environment	5%~95% (non-condensing)
Storage temperature	-40℃~＋70°C
Relative humidity of storage environment	5%~95% (non-condensing)

11.5 LEX5817 Communication Cable between LE CPU Module and HT8000, 3m

LEX5817 is connection cable between programming interface of LE PLC module and the HT series touch screen, providing Interconnection and data transmission between the CPU module and the touch screen.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 11-4 Cable Schematic

Table 11-5 Definition of Mini-DIN8

Pin No.	Definition	Pin No.	Definition
1	NC	2	NC
3	NC	4	NC
5	RS485+	6	RS485-
7	GND	8	GND
Note	5, 6 use twisted pair		

Table 11-6 Definition of DB9 Pins

Pin No.	Definition	Pin No.	Definition
1	NC	6	NC
2	NC	7	RS485+
3	NC	8	RS485-
4	NC	9	NC
5	NC		

11.5.1 Technical Specifications

Table 11-7 Technical Specifications

General Specifications

General Specifications	
Shell	Plastic seal
Weight	38g±2g
communication Wire	
Material	Copper wire
Number of cores	2
Core diameter	7 shares in each core, diameter of each share≥ 0.12mm
Cable length	3±0.1m
Electrical Specifications	
Rated value	50V@1.0A
Contact resistance	≤0.03Ω
Baud rates (bps)	≥100K
Withstand voltage	500VAC
Insulation resistance	≥100MΩ(250V)
Cable plug	Mini-DIN8and DB9 female
Shield	The shield must be connected to metal shell of DB9 and Mini-DIN8
Environment Specifications	
Operating temperature	0℃~＋60°C
Relative humidity of operating environment	5%~95% (non-condensing)
Storage temperature	-40℃~＋70°C
Relative humidity of storage environment	5%~95% (non-condensing)

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Chapter 12 Installation and Removal

12.1 Installation and Removal

12.1.1 Installation Environment

LE series PLC adopts the natural convection heat dissipation mode. A 25mm wide heat dissipation zone must be reserved at the top and bottom of the device to ensure free air flow.



Figure 12-1 Recommended Heat Dissipation Mode

LE series PLC can be easily installed on a standard DIN rail or a panel. DIN rail clips are provided to secure the device on the DIN rail, as shown in Figure 12-2. The clips can also be snapped into an extended position to provide a screw mounting position for panel-mounting, as shown in Figure 12-3.



Figure 12-2 Panel Installation

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-3 DIN Rail Installation

Before you install or remove any electrical device, please ensure that the power supply to that device has been turned off. Meanwhile, make sure that the power supply to any related devices has been turned off as well.

12.1.2 Installation and Removal of CPU module

The CPU module can be installed on a DIN rail or a panel.

- Panel installation

  To install a CPU module on a panel, please follow below steps:

  1： Locate, drill and tap the mounting holes (M3*8) according to the dimensions shown in installation size diagram.

  2： Pull out the DIN rail clips on the module. Make sure that the DIN rail clips are pushed to the extended position.

  3： Use M3 screws to fix the module on the panel.

- DIN rail installation



Figure 12-4 DIN Rail Clips in a Locked Position

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-5 DIN Rail Clips in an Open Position

To install a CPU module onto a DIN rail, please follow below steps:



（a）



（b）

Figure 12-6 DIN Rail Installation Diagram

1： Install a DIN rail.

2： Hang the CPU module on the DIN rail.

3： Pull out the DIN rail clip at the bottom of the CPU module to make it mounted on the DIN rail.

4： Rotate the module down to the DIN rail.

5： Snap the clip closed.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

To remove a CPU module from a DIN rail, follow below steps:

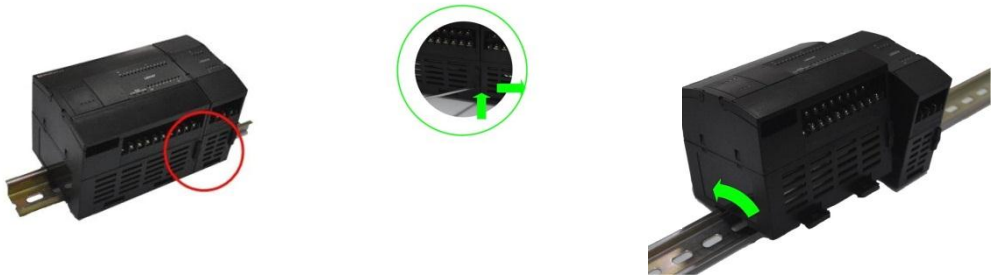


Figure 12-7 Diagram of Opening the Bottom Side Locker

6： Remove power from the CPU module and any connected I/O modules.

7： Disconnect all the wiring and cabling that is attached to the CPU. The CPU and most expansion modules have removable connectors to make this job easier.

8： Unscrew the mounting screws or snap open the DIN clip.

9： If you have expansion modules connected, slide the CPU module to the left to disengage it from the expansion module connector. Note: unscrewing or unsnapping the DIN clips of the expansion modules can make it easier to disengage the CPU.

10： Remove the CPU.

12.1.3 Installation and Removal of Expansion Modules

Installation and removal steps:

Install expansion modules after installing a CPU module.



Figure 12-8 Removing a Connector Cover

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- Remove the connector cover on the right side of the CPU module.
- Insert a screwdriver into the slot above the cover.
- Gently pry the cover out at its top and remove the cover. Keep the cover for reuse.

Step 1. Installation

Install an expansion module close to a CPU module.



（a）



（b）

Figure 12-9 Installing an Expansion Module

11： Hang an expansion module on a DIN rail.

12： Pull out the bottom DIN rail clips to allow the expansion module to fit the DIN rail.

13： Turn the expansion module next to the CPU downward to make it in place and push the clips at the bottom to secure the expansion module to the DIN rail.

14： Ensure that the side lockers are in an upward position and push the expansion module to the left until the bus connector meets the connector on the right side of the CPU module.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Set the top/bottom side locker:

15： Place a screwdriver at the top of the top/bottom side locker.

16： Press it downward to make the top/bottom side locker move in a locked position. In this way, the top and bottom side lockers establish a mechanical connection for the expansion module. To install another expansion module next to the expansion module, please repeat the above steps.

Step 2. Removal

Any expansion module can be removed without removing the CPU or when other expansion modules are in original positions. If you want to remove an expansion module, please turn off the power of CPU module and remove the I/O connectors and wiring of the expansion module.

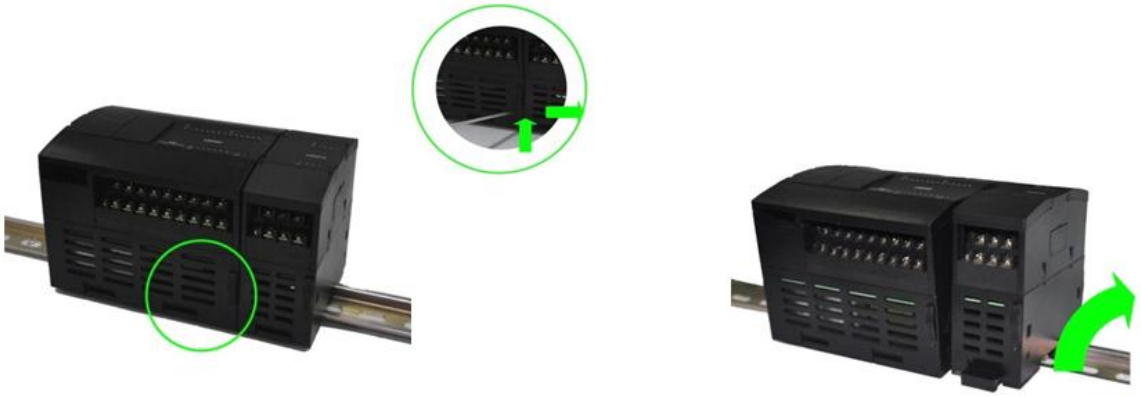


Figure 12-10 Removing an Expansion Module

- Open the top/bottom side locker.

17： Place a screwdriver at the bottom of the top/bottom side locker of the CPU module.

18： Press it upward to make the top/bottom side lock move in an unlocked position.

19： Slide the module to the right until the bus connector of the module is completely apart from the CPU module. If there is an expansion module on the right side, please repeat this step.

- Remove an expansion module:

20： Pull out the DIN rail clips at the bottom to loosen the expansion module on the DIN rail.

21： Turn the expansion module upward to make it go off of the DIN rail. Remove the expansion module from the system.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

22： If necessary, please cover the bus connector of the CPU module with a cover to avoid contamination. To remove other modules next to the expansion module, please repeat the above steps.

12.1.4 Installation and Removal of Expansion Boards

Step 1. Installation

To install an expansion board for a CPU module, please turn off the power of the CPU and remove the top and bottom terminal block covers from the CPU.



Figure 12-11 Installing an Expansion Board

To install an expansion board, please follow below steps:

23： Place a screwdriver into the slot on the top of the CPU module at the rear of the cover.

24： Gently pry the cover up and remove it from the CPU module.

25： Place the expansion board down into its mounting position on the top of the CPU module.

26： Firmly press the expansion board into the position until it snaps into place.

27： Install the terminal block cover.

Step 2. Removal

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

To remove an expansion board from a CPU module, please turn off the power of the CPU module and remove the top and bottom terminal covers of the CPU module.



Figure 12-12 Removing an Expansion Board

To remove the expansion board, follow below steps:

28： Insert a screwdriver into the slot in the upper part of the left side of the CPU.

29： Gently pry the module up to disengage it from the CPU.

30： Remove the module directly from its mounting position in the upper part of the CPU module.

31： Install the covers onto the CPU.

32： Replace the terminal block cover.

- If you replace a module with a different module during maintenance, the program will probably run abnormally. The errors in the replacement of an expansion module may lead to serious consequences. Therefore, it’s required to replace a faulty module with a module of the same model and position it correctly.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

12.1.5 Removal and Reinstallation of LE Terminal Block Connectors

Both CPU modules and expansion modules provide pluggable terminals easy for maintenance. The preparatory work for the removal of a terminal block connector from the system: turn off the power of the CPU module and open the cover above the terminal.



Figure 12-13 Removing a Terminal Block

To remove a terminal block, please follow below steps:

33： Remove screws with a screwdriver.

34： Gently pry the top of the terminal away from the CPU.

35： Hold the terminal and remove it from the CPU.

Installation:

To install a terminal block, please follow below steps:



Figure 12-14 Installing a Terminal Block

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

36： Turn off the power of the CPU and open the cover of the terminal block.

37： Align the screw cap of the connector with the screw hole on the board.

38： Tighten the screw. Check it carefully to ensure that the terminal has been properly aligned and fully engaged.

- LE expansion board is available only on 24I/O or 40I/OCPU module.
- Avoid direct touch with circuits when installing or removing.
- A flathead screwdriver is needed when removing.

12.2 Wiring Guidelines

12.2.1 Guidelines for Inductive Loads

Use suppressor circuits with inductive loads to limit the voltage rise when a control output is turned off. Suppressor circuits can protect your outputs from premature failures caused by the high voltage transient that occurs when the current flow through an inductive load is interrupted. In addition, suppressor circuits can limit the electrical noise generated when switching inductive loads. Placing an external suppressor circuit and making it electrically across the load and physically located near the load is the most effective way to reduce electrical noise.

The effectiveness of a suppressor circuit depends on the application and must be verified for your particular usage. Ensure that all components are correctly rated.

1. Typical suppressor circuit for DC or relay outputs that switch DC inductive loads
Relays can be used for DC or AC loads and there is no internal protection. The following figure shows a DC-load suppressor circuit. In most applications, the addition of a diode (reverse peak voltage: at least three times the load voltage; average rectified current: 1A) to both ends of a DC inductive load is suitable.

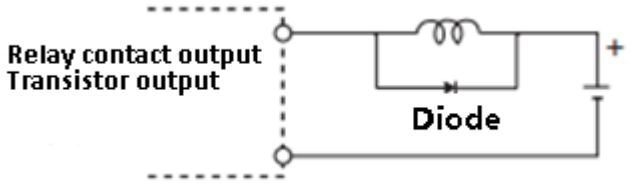


Figure 12-15 Typical Suppressor Circuit for Switching DC Inductive Loads

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

2. Typical suppressor circuit for relay outputs that switch AC inductive loads

When a relay is used to switch AC inductive loads, you must place an external resistor/capacitor noise suppression circuit across the AC load. Choose pulse-rated, non-inductive resistors and capacitors recommended for pulse applications (typically metal films). Confirm that the components meet average power, peak power, and peak voltage requirements, e.g. R: 100~200Ω, C: 100nF. The metal oxide varistor (MOV) can also be used to suppress peak voltage. Ensure that the working voltage of the metal oxide varistor (MOV) is at least 20% greater than the nominal line voltage.

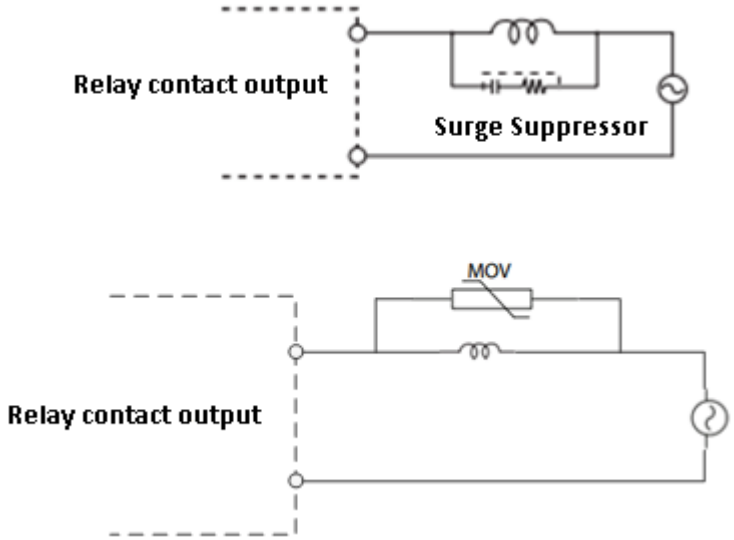



Figure 12-16 Typical Suppressor Circuit for Switching AC Inductive Loads

12.2.2 Guidelines for Lamp Loads


Lamp loads are damaging to relay contacts because of the high turn-on surge current. This surge current will nominally be 10 to 15 times the steady state current for a tungsten lamp. A replaceable interposing relay or surge limiter is recommended for lamp loads that will be switched a large number of times during the lifetime of the application.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

12.2.3 Grounding

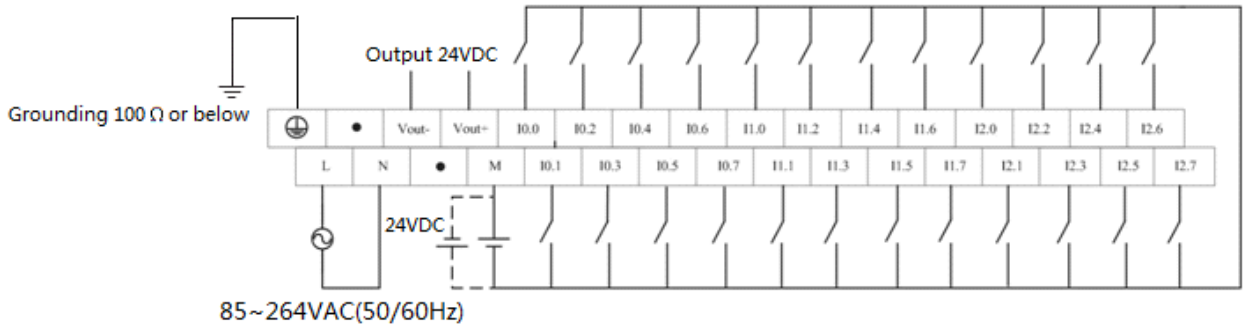

(a)

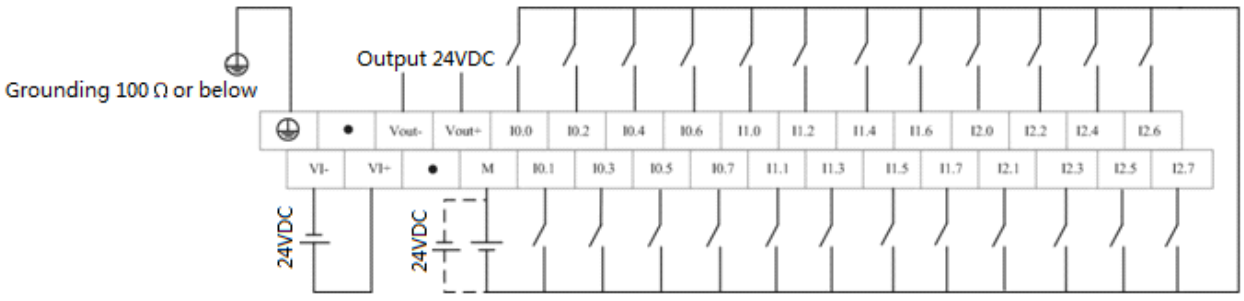


(b)

Figure 12-17 Grounding Diagram

- Grounding guidelines
  - Adopt D-type grounding (with the ground resistance of below 100Ω).
  - The best way to ground the application device is to ensure that all of the common and ground connections of LE PLC and related device are grounded to a common point. This point should be connected directly to the ground for your system.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

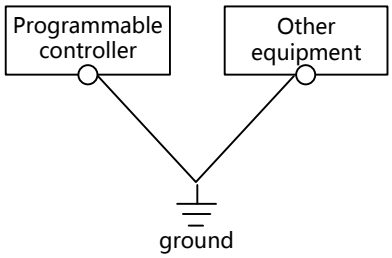

D-type grounding (Grounding resistance: below 100 Ω)

Figure 12-18 Grounding Diagram

- ⏚ represents the ground. In order to prevent the electric shock, the resistor of the grounding terminal shall adopt special grounding wires with the resistance of 100Ω or below.
- The ground terminal should be as close to PLC controller as possible. All grounding wires should be as short as possible and should adopt large-diameter wires, e.g. 2 mm^2 wires (14AWG).

12.3 Module Size

1. CPU modules

The outline dimensions and mounting dimensions of LE5104 and LE5105 modules are shown in Figure 12-19 and Figure 12-20 respectively.

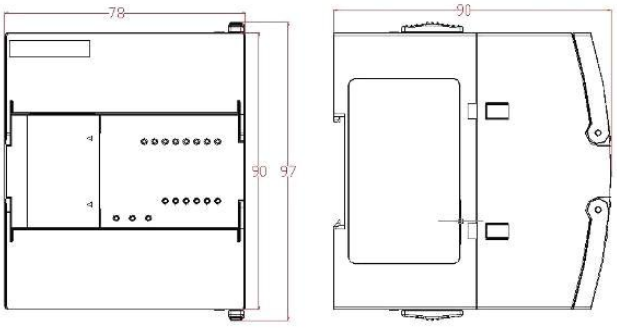


Figure 12-19 Outline Dimensions

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

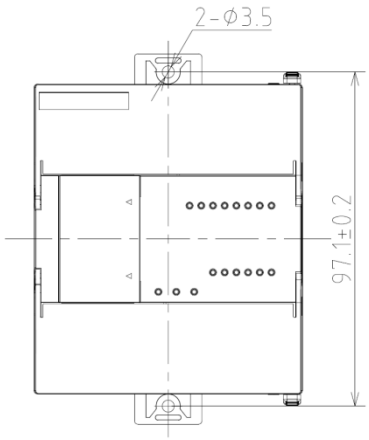


Figure 12-20 Mounting Dimensions

The outline dimensions and mounting dimensions of LE5106, LE5107, LE5107E and LE5107L modules are shown in Figure 12-21 and Figure 12-22 respectively.

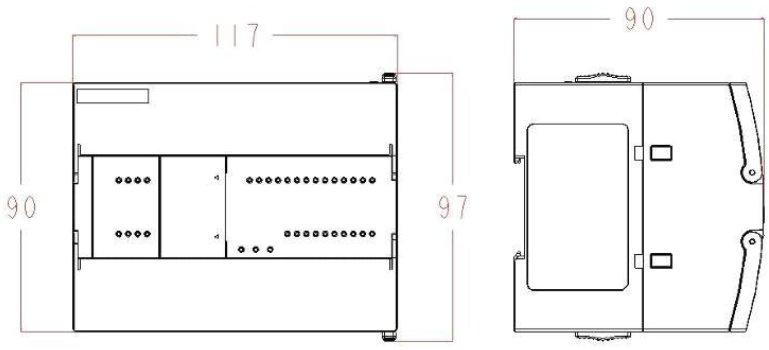


Figure 12-21 Outline Dimensions

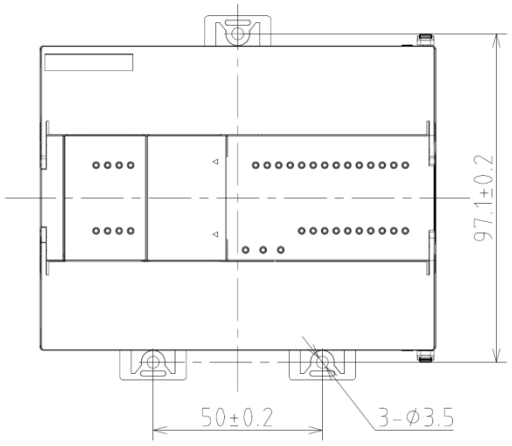


Figure 12-22 Mounting Dimensions

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

The outline dimensions and mounting dimensions of LE5128, LE5108, LE5109 and LE5109L modules are shown in Figure 12-23 and Figure 12-24 respectively.

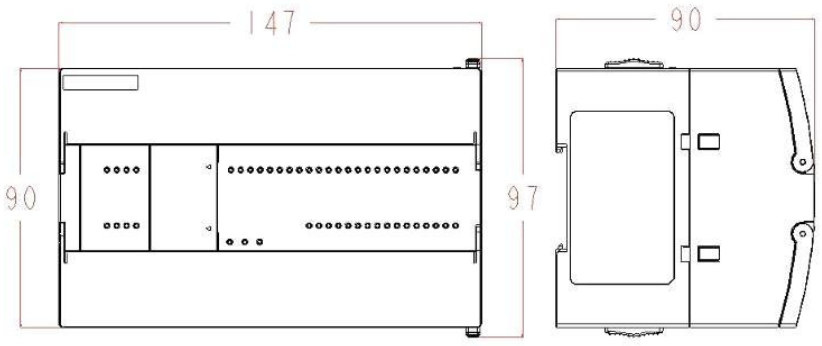


Figure 12-23 Outline Dimensions

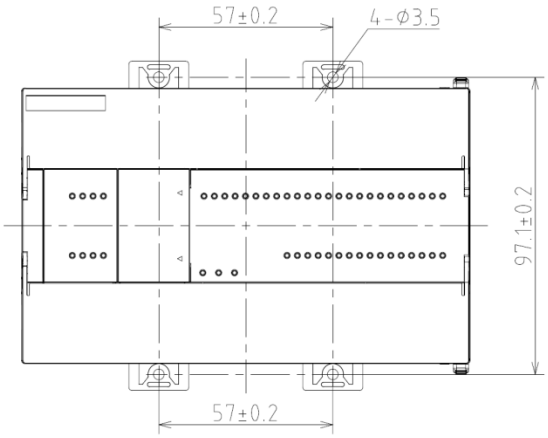


Figure 12-24 Mounting Dimensions

The outline dimensions and mounting dimensions of LE5708 module are shown in Figure 12-25 and Figure 12-26 respectively.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

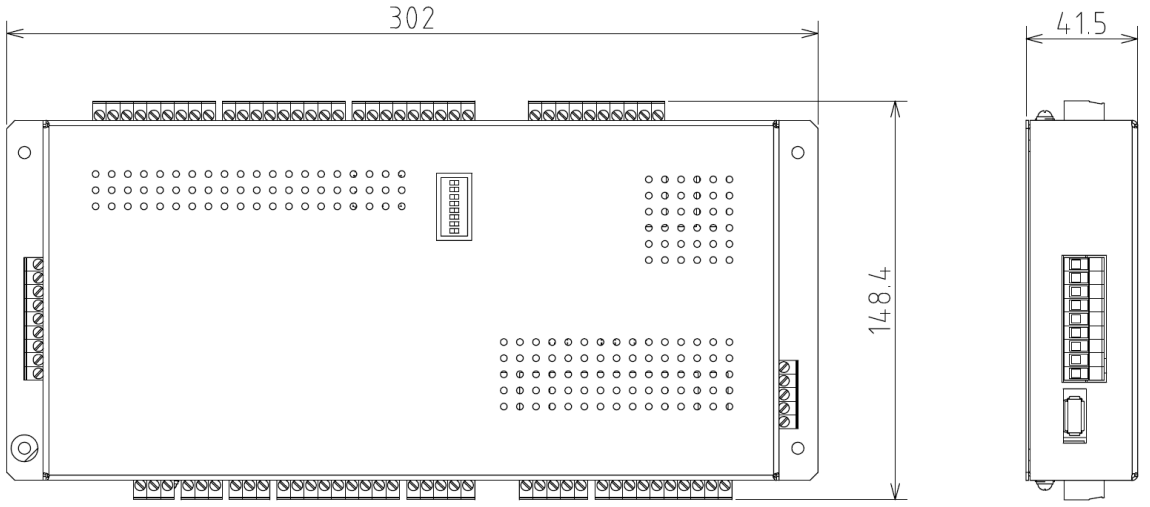


Figure 12-25 Outline Dimensions

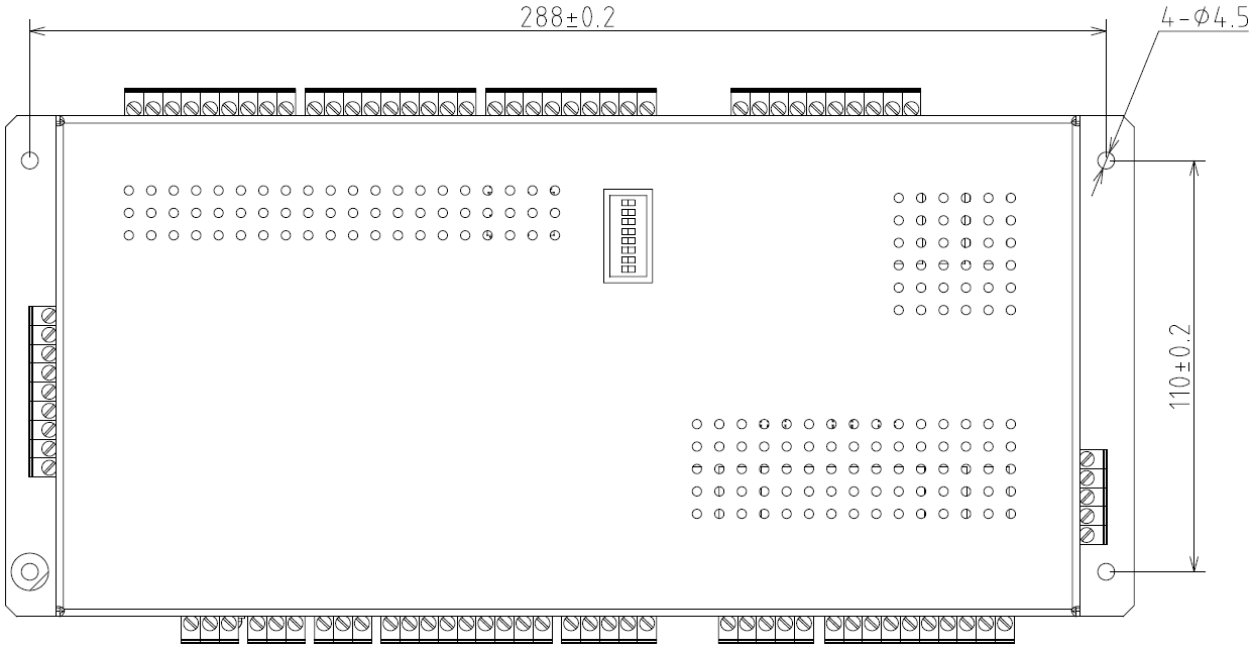


Figure 12-26 Mounting Dimensions

2. Expansion modules

The outline dimensions and mounting dimensions of 32DI LE5212 and 32DO LE5224 are shown in Figure 12-27 and Figure 12-28 respectively.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

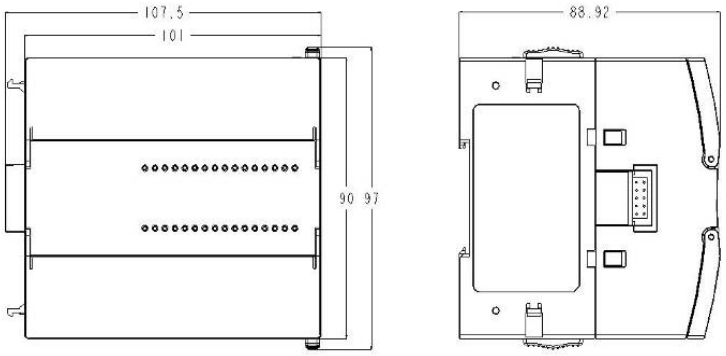


Figure 12-27 Outline Dimensions

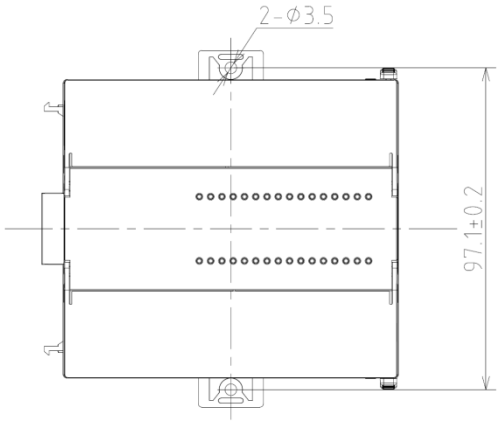


Figure 12-28 Mounting Dimensions

The outline dimensions and mounting dimensions of LE5211, E5223, LE5310, LE5311, LE5340, LE5341, LE5342, LE5320, LE5321, LE5330, LE5401, LE5403 and LE5404, are shown in Figure 12-29 and Figure 12-30 respectively.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

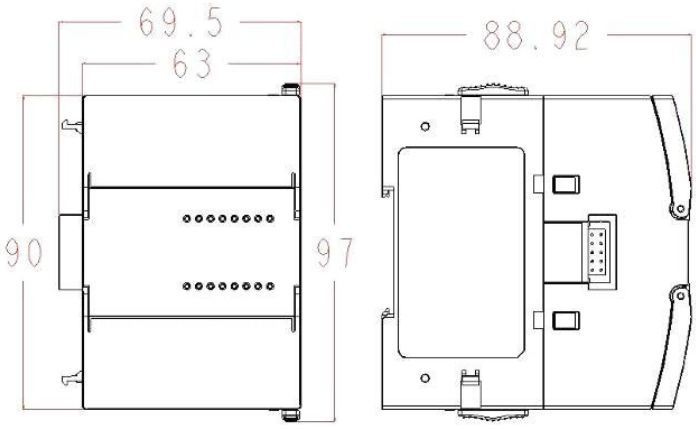


Figure 12-29 Outline Dimensions

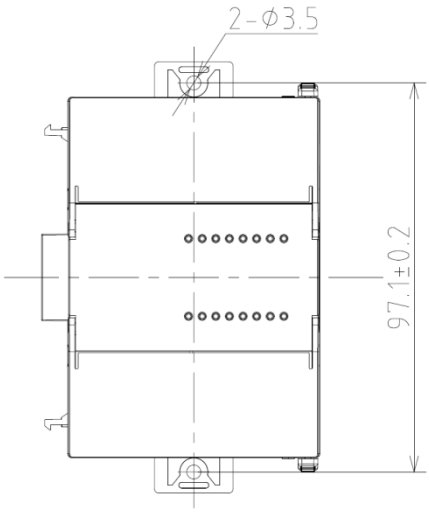


Figure 12-30 Mounting Dimensions

The outline dimensions and mounting dimensions of LE5405 are shown in Figure 12-31 and Figure 12-32 respectively.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

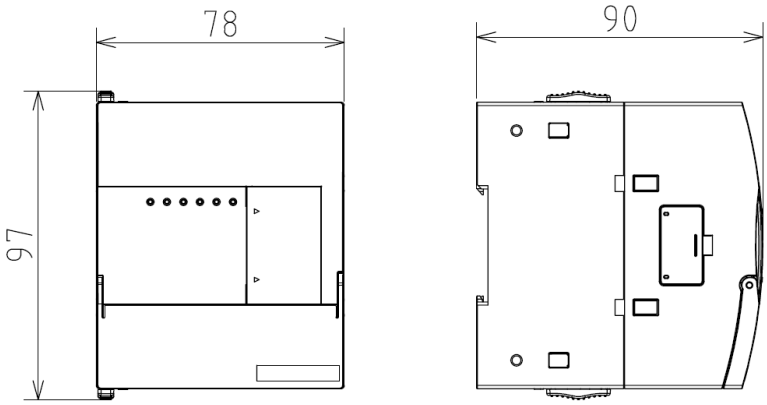


Figure 12-31 Outline Dimensions

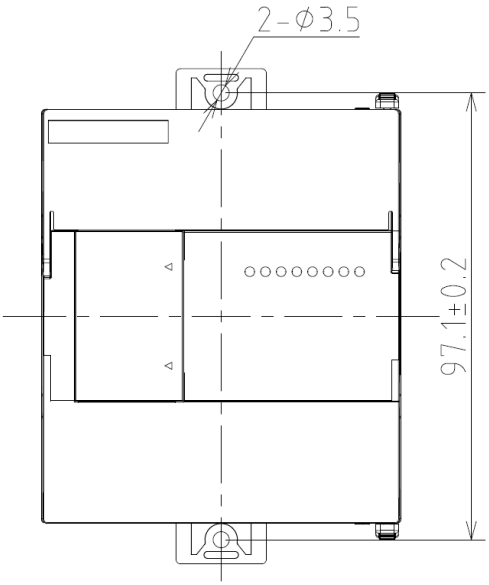


Figure 12-32 Mounting Dimensions

The outline dimensions and mounting dimensions of LE5210, E5220, LE5221 are shown in Figure 12-33 and Figure 12-34 respectively.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

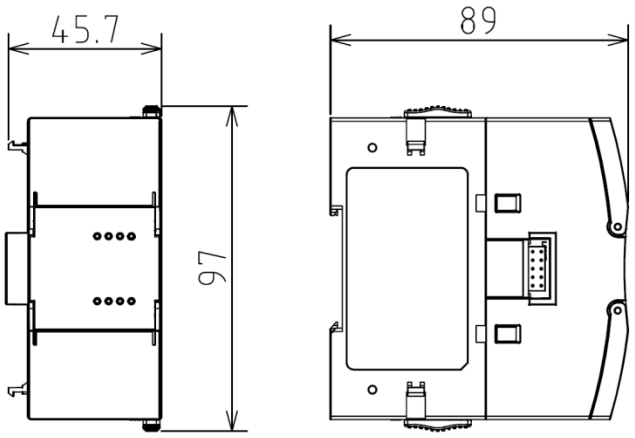


Figure 12-33 Outline Dimensions

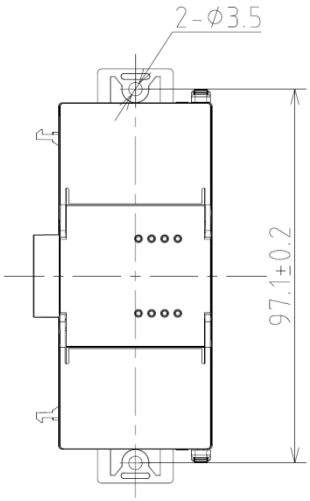


Figure 12-34 Mounting Dimensions

The outline dimensions of expansion boards LE5600, LE5601, LE5611 and LE5621 are shown in Figure 12-35.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

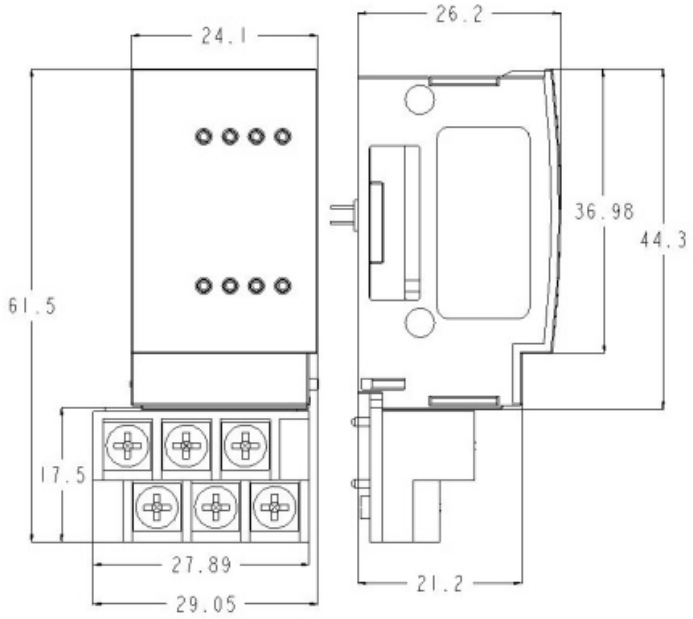


Figure 12-35 Outline Dimensions

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

APPENDIX 1 FAQ

No.	Faults	Description for problems	Solutions
1	CPU ERR indicator ON/ red	The system configuration in programming software is not consistent with the actual hardware configuration.	In the programming software, re-configure the PLC hardware according to the actual module model and order.
2	CPU ERR indicator ON/ red	Communication failure with expansion module	Check whether the extension module connection is correct, and check whether the status of each module in the data diagnostic area is normal
3	CPU ERR indicator ON/ red	The expansion modules have some failure reported	Replace the expansion module which has errors.
4	No response of all the indicators when module powered on.	Check and ensure whether the supplied power is up to the rated value.	Use the multimeter to check whether the site connecting to the power is up to 24VDC or 220VAC.
5	CPU ERR indicator ON/ red	Memory card loading fails.	Check project in memory card.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

APPENDIX 2 Operating Instructions to LE5404

The Chapter is applicable to data on various registers for LE PLC master controller that is read and written by Hollysys Hollyview configuration software via the AT_GPRSGateWay tools and the LE5404GPRS expansion module. It is also applicable to the wireless communication of other configuration software (without the LE5404GPRS drive) and LE master controller.

1. Test conditions

- A Hollysys LE master controller + a LE5404GPRS expansion module, a SIM card.
- A Professional PeanutHull account (a free version may be allowed for the test). The domain name in this example is: cx5688.oicp.net.
- A router (if your device is connected directly to the monitoring PC by the operator physically, then it shall be unnecessary to set the router if the monitoring PC makes the broadband or ADSL dial-up).

In this example, the router makes the dial-up successfully, with the information below:

Router information:

MAC address: 54-E6-FC-2D-39-79

IP address: 123.139.74.40 PPPoE

Subnet mask: 255.255.255.255

Gateway: 123.139.74.40

DNS server: 124.89.1.129 , 221.11.1.68

2. LE5404 configuration in the PLC programming software

In the AT programming software, when LE5404 is configured, the following parameters shall be shown:

模块参数

序号	参数名	参数值	默认值	最大值	最小值
1	服务器IP地址	cx5688.oicp.net			
2	通讯端口	5001	0	65535	0
3	设备ID	14701002832			

Figure 12-36 Parameter Configuration

- Server IP address: the IP address (which must be a static IP of a public network) or dynamic domain name (see the Attachment "PeanutHull Domain Name Resolution" for the way to

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

establish a dynamic domain name) of the computer in the remote monitoring center. In this example, a dynamic domain name is taken for instance.

- Communication port: custom setup, trying to avoid a commonly used Ethernet communication port (5000 above recommended)
- Device ID: the 11-bit device ID that a user sets in the AT software and is compatible with the SIM card, which can set the SIM card number or makes custom setup.

3. AT_GPRSGateWay configuration by a PC

Note: Port mapping shall be applied to the router before configuring AT_GPRSGateWay. Setting method see Router Port Mapping Setup.

- Parameter Settings

After opening AT_GPRSGateWay, click Parameter Setting, right click in the blank space of the pop-up page, select "Add a Link" in the context menu, then set the parameters for the link one by one. To guarantee that the monitored GPRSDTU device is the one expected to be communicated, it shall be necessary to set the device ID. Before the monitoring, it shall firstly set the device ID (which must be a 11-bit number, just same to the ID set for PLC).

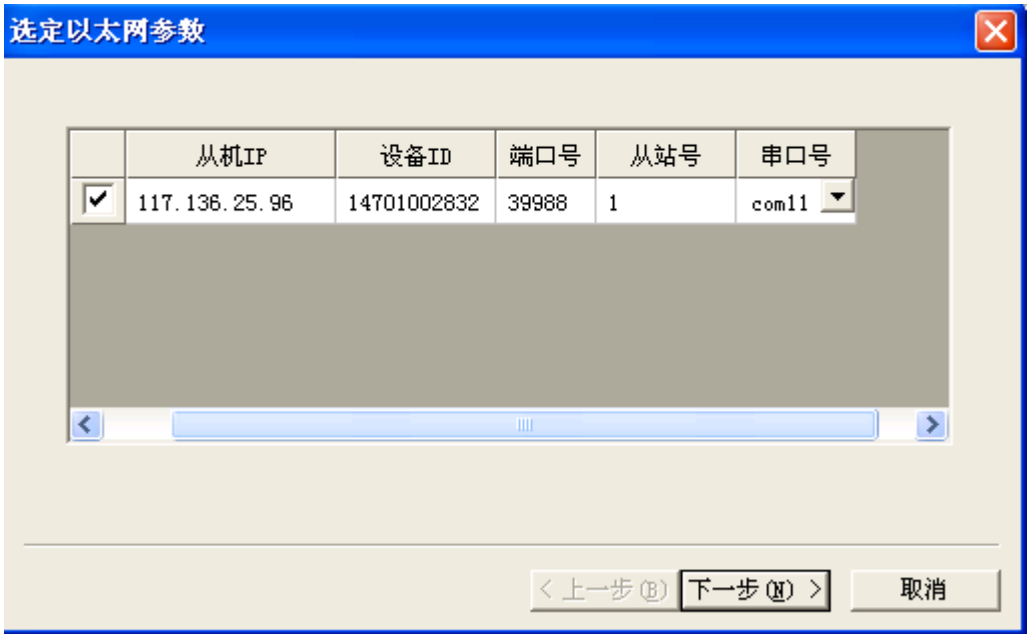


Figure 12-37 ID Settings

Note: In the "Selected Ethernet Parameter Information" properties page, check the communication link to be connected, and set the slave station numbers and the serial port numbers (The serial port numbers shall be based on the 32 serial ports from COM 11-42. Each serial port corresponds to 8 slave stations). The setup of slave station numbers and serial port numbers shall conform to those in the configuration software.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Click **Next** and go to the "Set Serial Port Parameter" property page to set the serial port parameters.

In the "Set Serial Port Parameter" properties Page, set the communication parameters, baud rate, data bit, stop bit, check bit and time-out, etc. of the serial port. The setup of the physical parameters for the serial port shall conform to that in the PC configuration software.

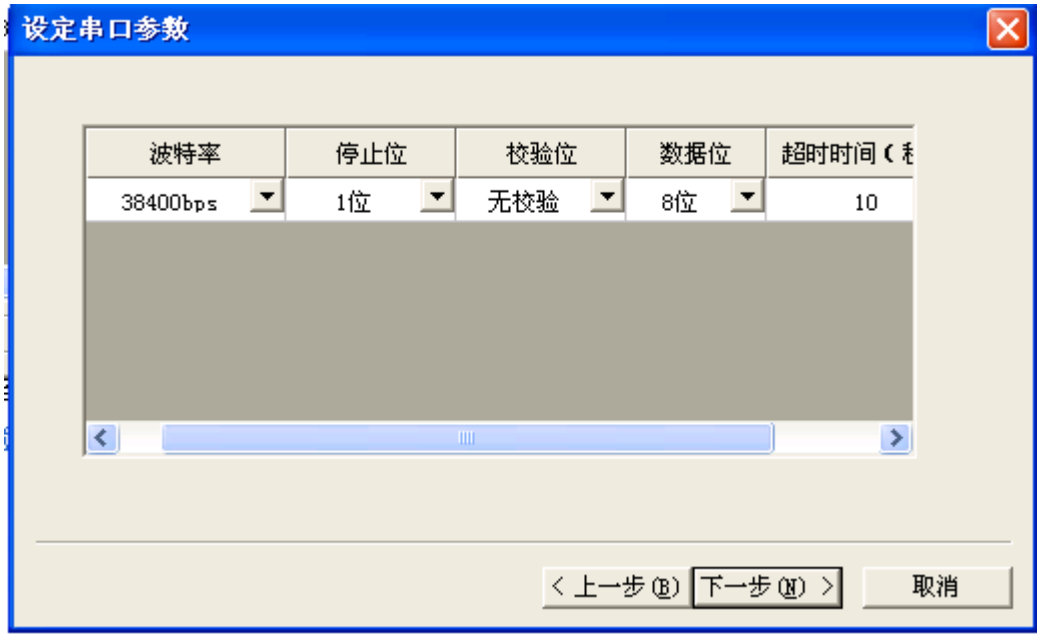


Figure 12-38 Serial Port Parameter Setting

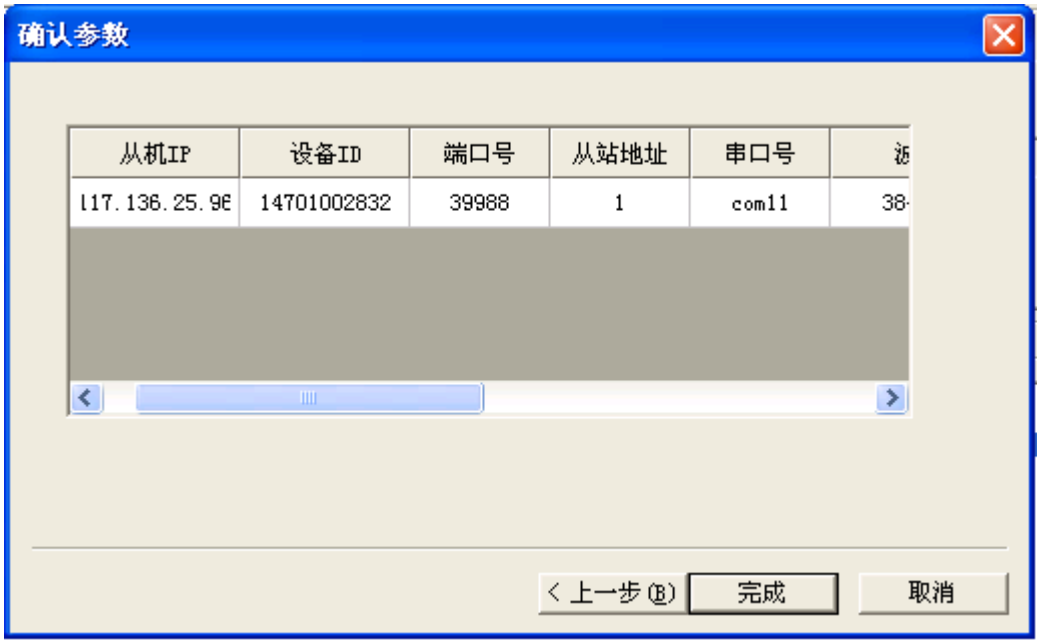


Figure 12-39 Communication Parameter Confirmation

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

■ Monitoring

After clicking the **Monitor** button, a "Monitoring Parameters" dialog box pops up, as show in Figure 12-40.



Figure 12-40 " Monitoring Parameters " Dialog Box

When setting the monitoring parameter, the host machine IP must be input as the IP address for the local PC (Please use a static IP assigned by the router. A dynamic IP obtained automatically from the router may also be accessible. However, when restarting the computer or the communication, the IP shall be changed and not accessible.)

It shall set the monitoring IP and the port number, go to the monitoring state upon confirmation, then wait for several seconds before having monitored the GPRSDTU registration information. Such a time is related to the network signal to some extent. The monitored information shall be displayed in the "Real-time Monitoring Information" window in the upper left corner as a list.

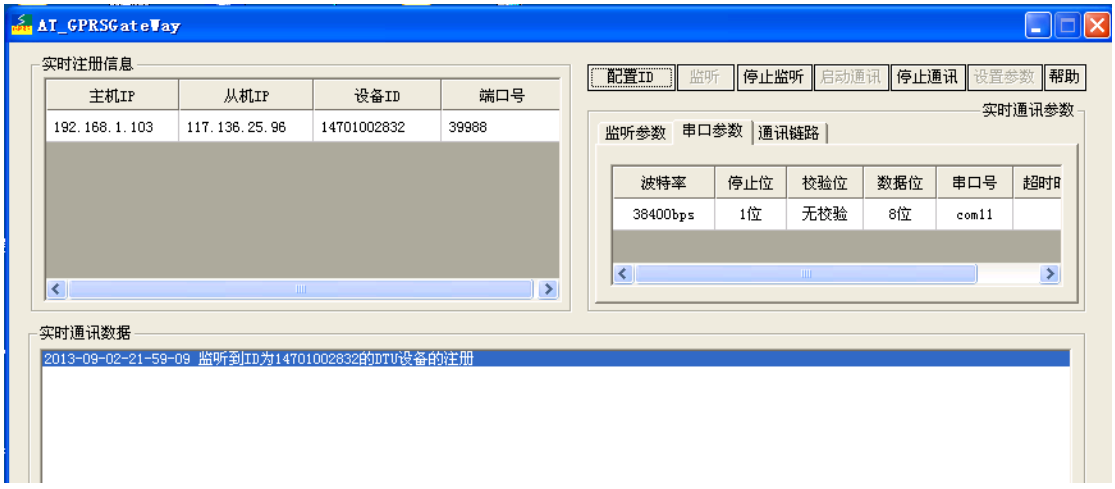


Figure 12-41 "Real-time Monitoring Information" Window

The remote GPRS DTU module shall be monitored continuously when the monitoring is not ended, with the "Real-time Monitoring Information" window refreshed in real time.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

- When the monitoring IP is set as the local IP, if the local IP is a static IP, then it shall be the public network IP. Otherwise, a wireless network card shall be used, with the IP applied for based on the wireless network card as the monitoring IP. The wireless network card is affected by a signal strength, etc., which leads to instable communication. Therefore, a wireless network card shall be not be recommended.
- The port number is recommended to be 5001.
- Monitoring is the first step to take, with the subsequent operations conducted after the GPRS DTU registration information is monitored.
- Setting of IP and port number for monitoring is consistent with setting of the server to be downloaded and monitored in GPRS DTU.
- During monitoring, it shall take several minutes before having monitored the registration information on the DTU device. It shall also wait patiently when stopping the monitoring.

Communication link: registration information monitored from GPRS DTU: the master PC IP, the slave PC IP, the device ID as well as the slave station numbers and serial port numbers that are set correspondingly, which is called as a communication link. Unless otherwise specified, a communication link shall have such a meaning.

Host machine IP: monitoring IP.

Slave machine IP: the IP of GPRS DTU.

Device ID: the device identification of GPRS DTU, different GPRS DTU device, it is different for each device.

■ Communication

After setting the communication parameter, click **Start Communication** and go to the communication status or communication waiting status.

Note: It shall go to the configuration software immediately after clicking **Start Communication**, enter the operating system to open the screen to be monitored, or start the configuration software first, enter the operating system to open the screen to be monitored, then go to AT_GPRSGateWay to click Start Communication and go to the communication status. In this process, it may take several seconds before going to the communication waiting status. It can only go to the communication status or the serial port to read the data time-out till data is detected at the serial port. It may take several minutes to stop the communication.

During communication, the communication data information shall be output in real time in the "Real-time Communication Information" window. The information is output in the following form:

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Time+ serial port (Ethernet) + serial port number (GPRS DTU IP)+ read (write)+ data + successful (failed).

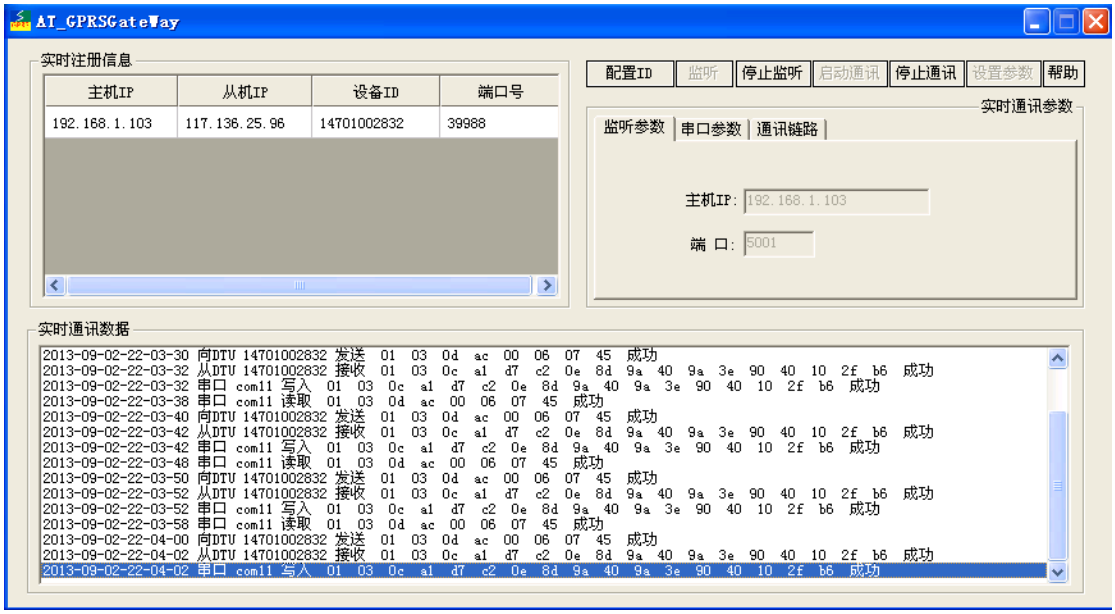


Figure 12-42 Real-time Communication Data Display

Before "Start Communication", it is better to configure program in PC (see Configuration Software Configuration). In this case, in the PC operating environment, when successfully starting the communication, the PC screen can display the remote PLC data.

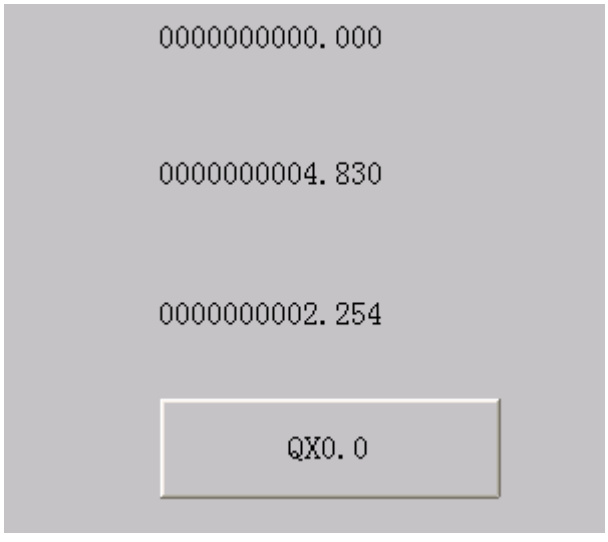


Figure 12-43 Remote Data Display

- Configuration Software Setup

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

After creating a new project, add the Hollysys LE device (please consult the local technical support if without a LE drive).



Figure 12-44 Add a Device

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-45 Define a Device Name

Select a COM port, which is same to that for AT_GPRSGateWay.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-46 Select a Serial Port

Set a slave station number, which is same to that for AT_GPRSGateWay.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-47 Set a Salve Station Number

Default, or it can be changed according to your need.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

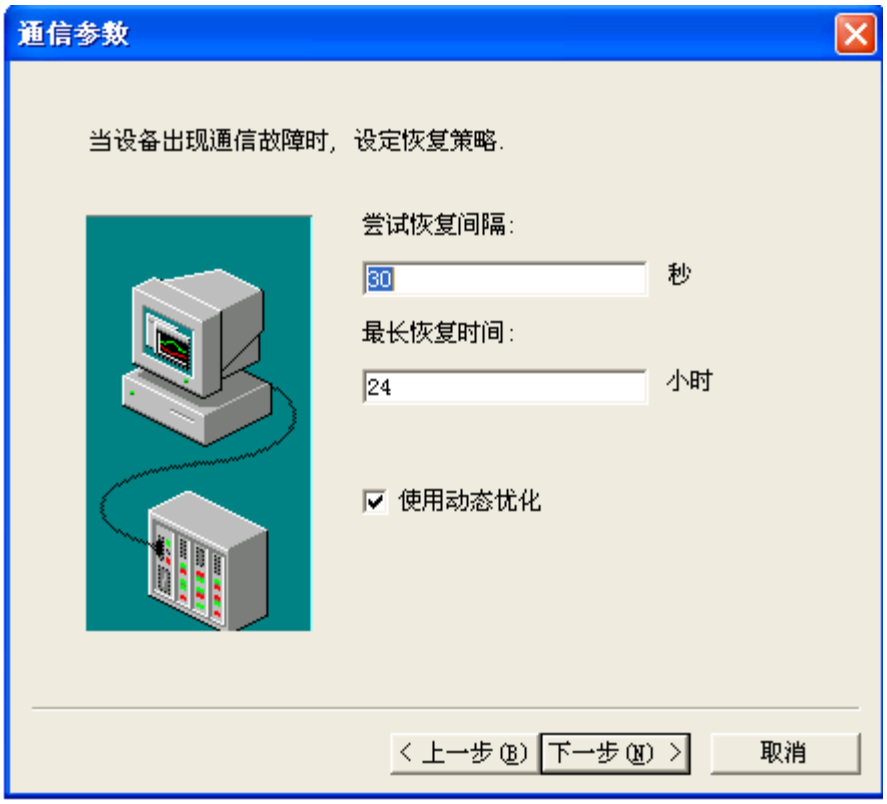


Figure 12-48 Set Communication Parameters

Complete the creation of the device.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-49 Complete Adding a Device

Set the serial port communication parameter, which is same to that for AT_GPRSGateWay. Note: for communication time-out, it shall generally be in a range of 6000-10000ms in GPRS communication.



Figure 12-50 Serial Port Communication Parameter Setup

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Create a new variable in the data dictionary.



Figure 12-51 Create a New Variable

Set the variable acquisition time uniformly, as over 6000ms (this is based on the data refresh requirement, the fastest refresh rate is about 5s for GPRS).

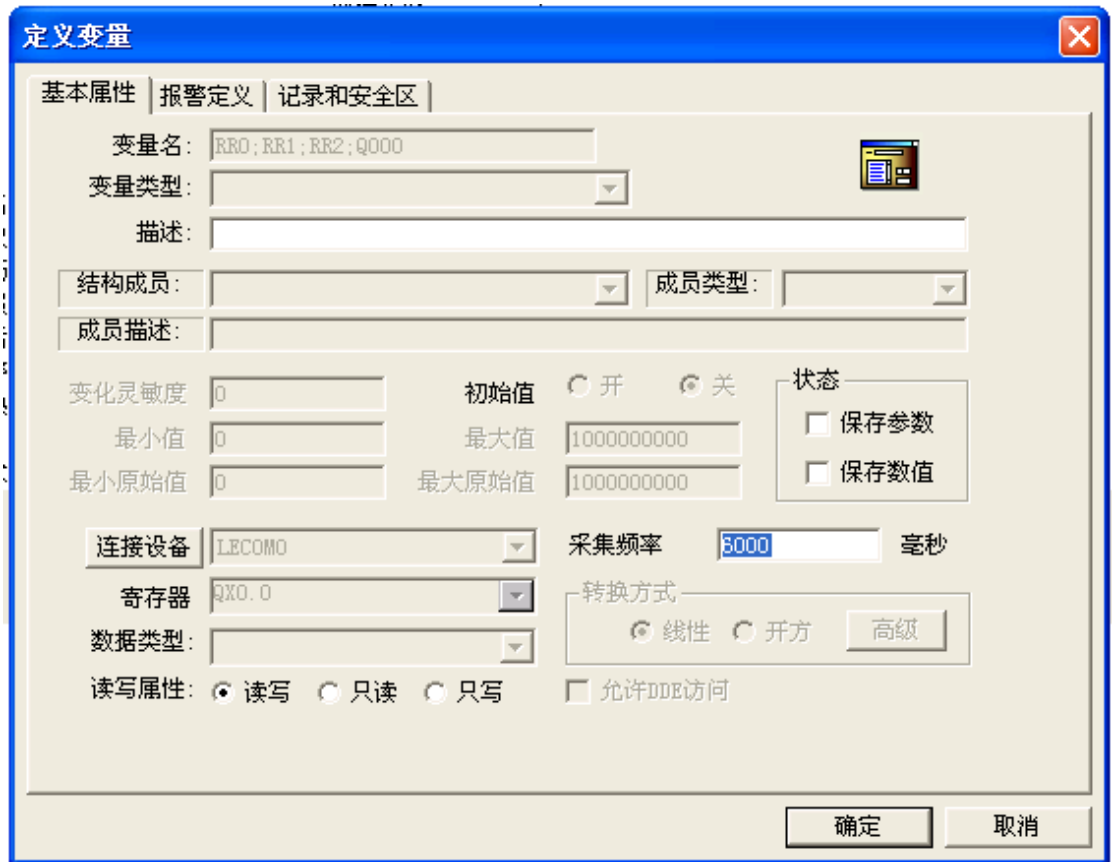


Figure 12-52 Set Acquisition Frequency

Finally create the configuration diagram.

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

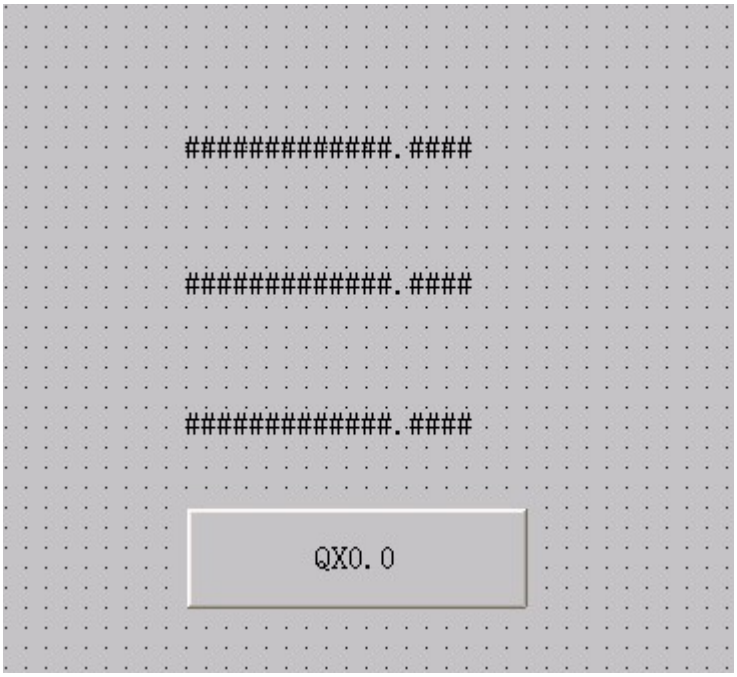


Figure 12-53 Diagram Configuration

After the project is verified to be of no problems, it can enter the upper computer operating environment before the AT_GPRSGateWay software enables "Start Communication". There are no strict requirements for the starting sequences of these two.

4. Router Port Mapping Setup

If the operator's network accesses to the monitoring PC by broadband or ADSL dial-up (to dial via the PC rather than the router), then it shall be unnecessary to set the router. If the operator's physical connection accesses to the router (wired or wireless) first to monitor an underlying LAN of the router, it shall then set the router.

See the following for the router setup:

(1) Static router information setup:

Step 1 Log on the management page of Router B via the router management address, click the Router Function Menu and select the "Static Routing List", as shown in Figure 12-54:

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-54 Static Routing List

Step 2 Click the Add a New Entry button, fill in the corresponding parameter in the Static Routing List.



Figure 12-55 Static Router Information Setup

Step 3 Click the Save button and view the existing configuration in the Static Routing List.



Figure 12-56 Static Router Information Setup

(2) Port Mapping

TP-LINK TL-R410

Port mapping

In this example, the IP address of the monitoring PC is set as 192.168.1.103. The port number is defined as 5001 in the PLC programming software.

1. Log on the Web Management Page of the router;

2. Click the "+" sign in front of "Forwarding Rules" on the left;

3. Click the virtual server in the expanded menu;

4. Fill in '5001' under the server port on the right and '103' under the IP address, select the 'TCP' protocol and tick beneath "Enable";

5. Click Save.

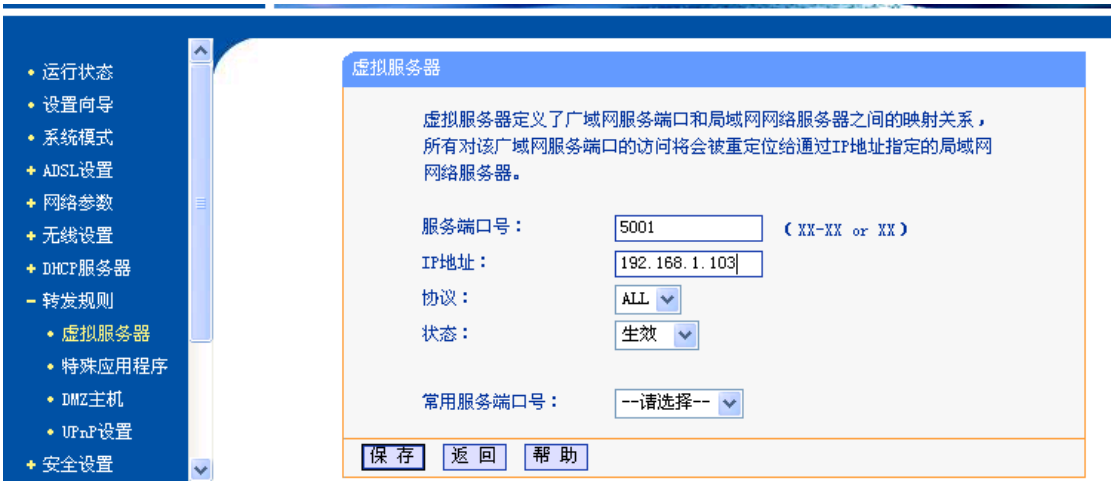


Figure 12-57 Virtual Server Setup (1)



Figure 12-58 Virtual Server Setup (2)

5. PeanutHull Dynamic Domain Name Resolution

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

PeanutHull is a client software for dynamic domain name resolution service that is free of charge. When you have installed and registered the service, you can utilize it to set up an Internet host with a fixed domain name and the greatest autonomy at any place, any time and by using any line. Lines supported by "PeanutHull" include ordinary telephone line, ISDN, ADSL, cable television network, Direct-To-Home broadband network with twisted pairs and any other access service lines able to provide a real Internet IP, whether the IP connected is dynamic or static.

- It is recommended to register and buy an account of a Professional version or of a higher reliability level.

Apply for a domain name according to the statement made on PeanutHull's official website, download the PeanutHull Client in the monitoring PC and log on the account to realize the dynamic domain name resolution of the local machine. Multiple domain names are available to each account.

See the following figure for the domain name we are to use.

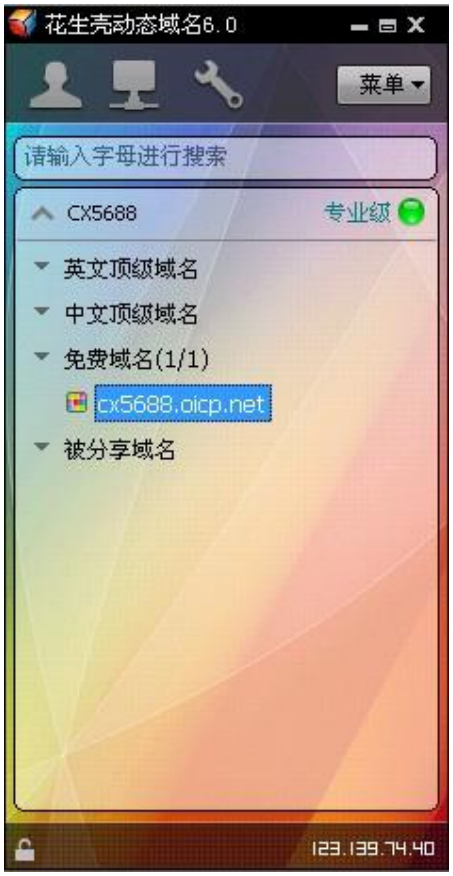


Figure 12-59 Domain Name

When double-clicking the domain name applied for at the client software, the following dialog box shall be popped up:

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Figure 12-60 Domain Name Diagnosis Dialog Box

If the ping operation is done successfully to the domain name for any remote computer that can access to the Internet, it shall indicate that PeanutHull has been set up successfully.

If the network does not support it or the setup is improper, it shall not prompt as "The domain name has been activated and corrected directed".

Note: PeanutHull is used to bind the IP of a dynamic public network that can monitor computers online with a defined domain name. In this case, the domain name shall keep unchanged upon each startup or communication re-establishment. As the domain name keeps unchanged, the Hollysys LE5404 module can find the router of the public network via such a domain name.

The router has an underlying LAN, all the computers within the LAN although can access to the Internet, they share a common public network IP. Port mapping therefore, is used to help LE5404 find such an IP and then find a defined IP of the LAN according to the port mapping rules (for example, the IP of the monitoring PC is fixed to be 192.168.1.103).

Finally, if all the settings are correct, we can view the overall remote data monitoring effect obtained based on the following three software.

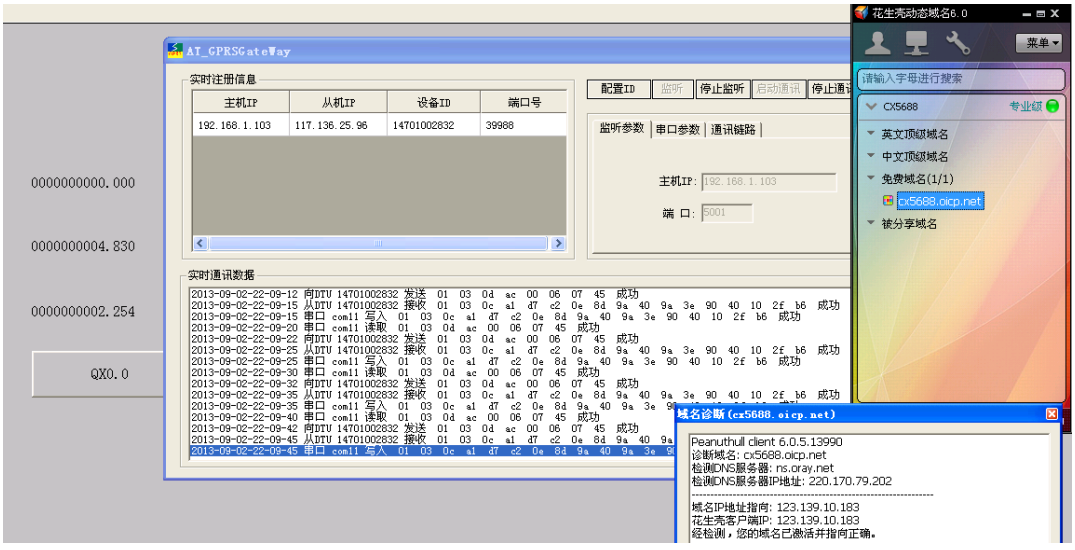


Figure 12-61 Remote Monitoring

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

APPENDIX 3 List of LE Series PLC

Module type	Product model	Specification instruction
CPU standard module	LE5104	DC24V power supply, equipped with DI 8 × DC24V, DO 6 × transistor output
	LE5105	AC220V power supply, equipped with DI 8 × DC24V, DO 6 × relay output
	LE5106	DC24V power supply, equipped with DI 14 × DC24V, DO 10 × transistor output
	LE5107	AC220V power supply, equipped with DI 14 × DC24V, DO 10 × relay output
	LE5108	DC24V power supply, equipped with DI 24 × DC24V, DO 16 × transistor output
	LE5109	AC220V power supply, equipped with DI 24 × DC24V, DO 16 × relay output
CPU economic module	LE5107E	AC220V power supply, equipped with DI 12 × DC24V, DO 8 × relay output, AI 2 ×10bit (4～20mA/0～20mA/0～10V optional) , AO 2 ×12bit (4～20mA/0～20mA/0～10V optional)
	LE5107L	AC220V power supply, equipped with DI 14× DC24V, DO 10 ×relay output
	LE5109L	AC220V power supply, equipped with DI 24 × DC24V, DO 16 × relay output
CPU motion control module	LE5128	Special CPU module for motion control adopts 16 channel digital inputs, 10 channel digital outputs, 2 channel analog inputs and 4 channel analog outputs.
CPU air conditioner module	LE5708	Air condition controller module adopts 24-channel digital inputs, 20-channel relay outputs and 4-channel analog inputs, 8-channel NTC inputs and 2-channel analog outputs.
Digital I/O module	LE5210	8 channel digital input module, DI 8 × DC24V
	LE5211	16 channel digital input module, DI 16 × DC24V

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Module type	Product model	Specification instruction
	LE5212	32 channel digital input module, DI 32 × DC24V
	LE5220	8 channel transistor digital output module, DO 8 ×transistor output
	LE5221	8 channel digital output module, DO 8 ×relay output
	LE5223	16 channel relay digital output module, DO 16 ×relay output
	LE5224	32 channel transistor digital output module,DO32×DC24V transistor output
Analog I/O module	LE5310	4 channel analog input module (4～20mA/0～20mA/0～10V optional) , differential input, 12 digits
	LE5311	8 channel analog input module (4～20mA/0～20mA/0～10V optional) , single-ended input, 12 digits
	LE5320	2 channel analog output module (4～20mA/0～20mA/0～10V optional) , 12 digits
	LE5321	4 channel analog output module (4～20mA/0～20mA/0～10V optional) , 12 digits
	LE5330	4 channel analog input /2 channel analog output module (4～20mA/0～20mA/0～10Voptional), 12 digits
	LE5340	4 channel thermocouple input module, -80mV～+80mV, B/E/J/K/N/R/S/Type float grounding thermocouple, 24 digits
	LE5341	4 channel RTD input module Cu50, Ni100, Ni120, Ni200, Ni500, Ni1000, Pt100, Pt200, Pt 500, Pt1000, 16 digits
	LE5342	8 channel thermistor input module
Communication module	LE5401	PROFIBUS-DP slave station module
	LE5403	Ethernet communication module
	LE5404	GPRS communication module
	LE5405	Gateway communication module
	LE5600	RS232 communication expansion board

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved

Module type	Product model	Specification instruction
Function expansion module	LE5601	RS485 communication expansion board
	LE5611	2 channel analog input expansion board (4～20mA/0～20mA/0～10V optional) , single-ended input, 10 digits
	LE5621	1 channel analog output extension board (4～20mA/0～20mA/0～10V optional) , 12 digits
Communication cable and accessories	LEA5820	Data memory card with USB-A interface，2M
	LEX5810	Programming cable, 3m
	LEX5812	Expansion cable, 2m
	LEX5813	RS485 round Interface to Two wires RS485 Communication Cable, 3m
	LEX5817	Communication Cable between LE CPU module and HT8000, 3m

Yueqing Ying's Import & Export Co., Ltd. All Rights Reserved



Yueqing Ying's Import & Export Co., Ltd.
ROOM 601,NO.126 LIUYANG ROAD,CHAOYANG VILLAGE,
LIUSHI,YUEQING, ZHEJIANG, 325604,CHINA
Tel:86 577 62791815
Fax:86 577 62791825
Http:www.yumoelectric.com